

Dear Reader ...

We would like to congratulate you on the purchase of your new caravan. You have selected a top-quality vehicle which will afford you many years of enjoyment.

To enable you to always use and operate your caravan properly and easily, your Bürstner dealer will first provide you detailed instructions for all important functions when you take delivery.

This manual, as well as the instruction manuals from the appliance manufacturers are your constant travelling companions and will help answer any questions you may have regarding your caravan.

Before your first journey

Please familiarise yourself with this manual rather than relying on it strictly for reference.

Fill in the warranty cards for the appliances and special equipment in the individual instructions and send these cards to the respective manufacturers. This ensures your warranty claim for each appliance.

© 2010 Bürstner GmbH Kehl





1 1.1 1.2	Introduction7General8Environmental tips8
2 2.1 2.1.1 2.1.2 2.1.3 2.2 2.3 2.4 2.5 2.5.1 2.5.2 2.6 2.7	Safety11Fire prevention11Avoidance of fire risks11Fire-fighting11In case of fire11General12Road safety12Towing13Gas system14General instructions14Gas bottles15Electrical system16
3 3.1 3.2 3.3 3.4 3.4.1 3.4.2	Before the journey 17 Keys 17 Registration 17 Connecting 18 Caravan couplings 19 AKS 1300 stabiliser 19 AKS 3004 stabiliser 19
3.4.3 3.5 3.6 3.6.1	WS 3000 D stabiliser.20Hitching device Easy-Pull (special equipment)20Caravan control system21Caravan control system (ATC) (special equipment)21
3.6.2 3.7 3.8 3.8.1 3.8.2 3.8.3 3.8.4	Caravan control system (IDC)(special equipment)(special equipment)22Detaching22Payload23Terms23Calculating the payload25Loading the caravan correctly26Caravan load, nose weight and
3.8.5 3.9 3.10 3.11	axle load27Bike rack (special equipment)28External mirrors30Television (special equipment)31Road safety31
4 4.1 4.2 4.3	During the journey33Driving with the caravan33Brakes33Driving in reverse33
5 5.1 5.2 5.3 5.4 5.5	Pitching the caravan35Handbrake35Wheel chocks35Corner steadies35Entrance step (free-standing)36Waste water tank, mobile (special equipment)37

5.6	230 V connection	7
5.7	Refrigerator	
5.8	Satellite unit (special equipment)3	
		1
5.8.1	Equipment with automatic antenna	_
	alignment	7
5.8.2	Equipment with semi-automatic	
	antenna alignment	8
	C C	
6	Living 4	1
6.1	Conversion door	
-		
6.1.1	Conversion door, outside4	
6.1.2	Conversion door, inside 4	2
6.1.3	Window conversion door (Seitz)	
	(special equipment) 4	2
6.1.4	Folding insect screen on the	
-	conversion door (special	
	equipment)	2
6.0		
6.2	External flaps	
6.2.1	Flap lock, elliptical-shaped 4	
6.2.2	Flap lock, rectangular4	
6.2.3	Flap for toilet cassette 4	5
6.2.4	Flap for the 230 V connection,	
-	square	5
6.2.5	Cap for the drinking water filler neck	Č
0.2.5		c
<u> </u>	(only for water tank 40 l)	
6.3	Furniture flaps 4	
6.3.1	Furniture flaps with push button4	
6.3.2	Furniture flaps with handle4	7
6.3.3	Furniture flaps with release	
	handle	7
6.4	Light switch	
6.4.1	Entrance area	
6.4.2	Interior	
		9
6.5	Holder for flat screen4	
6.5 6.5.1	Holder on the column4	9
		9
6.5.1 6.5.2	Holder on the column	9
6.5.1 6.5.2 6.6	Holder on the column	9 0 0
6.5.1 6.5.2 6.6 6.7	Holder on the column	9
6.5.1 6.5.2 6.6 6.7 6.8	Holder on the column	9 0 0
6.5.1 6.5.2 6.6 6.7 6.8 6.8.1	Holder on the column.4Holder in the TV cabinet5Heating5Ventilation5Windows5Hinged window with rotary hinges5	9 0 0
6.5.1 6.5.2 6.6 6.7 6.8	Holder on the column.4Holder in the TV cabinet5Heating5Ventilation5Windows5Hinged window with rotary hinges5Hinged window with automatic	9 0 0 1
6.5.1 6.5.2 6.6 6.7 6.8 6.8.1 6.8.2	Holder on the column.4Holder in the TV cabinet5Heating5Ventilation5Windows5Hinged window with rotary hinges5Hinged window with automatichinges5	9 0 0 1 1 3
6.5.1 6.5.2 6.6 6.7 6.8 6.8.1	Holder on the column.4Holder in the TV cabinet5Heating5Ventilation5Windows5Hinged window with rotary hinges5Hinged window with automatic	9 0 0 1 1 3
6.5.1 6.5.2 6.6 6.7 6.8 6.8.1 6.8.2	Holder on the column.4Holder in the TV cabinet5Heating5Ventilation5Windows5Hinged window with rotary hinges5Hinged window with automatichinges5	9 0 0 1 1 3
6.5.1 6.5.2 6.6 6.7 6.8 6.8.1 6.8.2 6.8.3	Holder on the column.4Holder in the TV cabinet5Heating5Ventilation5Windows5Hinged window with rotary hinges5Hinged window with automatichinges5Blind and insect screen5Roman shade and insect screen	9 0 0 1 1 3 4
6.5.1 6.5.2 6.6 6.7 6.8 6.8.1 6.8.2 6.8.3 6.8.3 6.8.4	Holder on the column.4Holder in the TV cabinet5Heating5Ventilation5Windows5Hinged window with rotary hinges5Hinged window with automatichinges5Blind and insect screen5Roman shade and insect screen5(special equipment)5	9 0 0 1 1 3 4 5
6.5.1 6.5.2 6.6 6.7 6.8 6.8.1 6.8.2 6.8.3 6.8.4 6.9	Holder on the column.4Holder in the TV cabinet5Heating5Ventilation5Windows5Hinged window with rotary hinges5Hinged window with automatichinges5Blind and insect screen5Roman shade and insect screen5Skylights5	9 0 0 1 1 3 4 5
6.5.1 6.5.2 6.6 6.7 6.8 6.8.1 6.8.2 6.8.3 6.8.3 6.8.4	Holder on the column.4Holder in the TV cabinet5Heating5Ventilation5Windows5Hinged window with rotary hinges5Hinged window with automatichinges5Blind and insect screen5Roman shade and insect screen5Skylights5Heki skylight (mini and midi)	9000113455
6.5.1 6.5.2 6.6 6.7 6.8 6.8.1 6.8.2 6.8.3 6.8.4 6.9 6.9.1	Holder on the column.4Holder in the TV cabinet5Heating5Ventilation5Windows5Hinged window with rotary hinges5Hinged window with automatichinges5Blind and insect screen5Roman shade and insect screen5Skylights5Heki skylight (mini and midi)5	9000113455
6.5.1 6.5.2 6.6 6.7 6.8 6.8.1 6.8.2 6.8.3 6.8.4 6.9	Holder on the column.4Holder in the TV cabinet5Heating5Ventilation5Windows5Hinged window with rotary hinges5Hinged window with automatichinges5Blind and insect screen5Roman shade and insect screen5Skylights5Heki skylight (mini and midi)5Heki skylight (partially special5	900011 34 55 6
6.5.1 6.5.2 6.6 6.7 6.8 6.8.1 6.8.2 6.8.3 6.8.4 6.9 6.9.1 6.9.2	Holder on the column.4Holder in the TV cabinet5Heating5Ventilation5Windows5Hinged window with rotary hinges5Hinged window with automatichinges5Blind and insect screen5Roman shade and insect screen5Skylights5Heki skylight (mini and midi)5Heki skylight (partially special5Heki skylight (partially special5	900011 34 55 6 7
6.5.1 6.5.2 6.6 6.7 6.8 6.8.1 6.8.2 6.8.3 6.8.4 6.9 6.9.1	Holder on the column.4Holder in the TV cabinet5Heating5Ventilation5Windows5Hinged window with rotary hinges5Hinged window with automatichinges5Blind and insect screen5Roman shade and insect screen5Skylights5Heki skylight (mini and midi)5Heki skylight (partially special5Heki skylight (partially special5Tables5	900011 34 55 6 79
6.5.1 6.5.2 6.6 6.7 6.8 6.8.1 6.8.2 6.8.3 6.8.4 6.9 6.9.1 6.9.2	Holder on the column.4Holder in the TV cabinet5Heating5Ventilation5Windows5Hinged window with rotary hinges5Hinged window with automatichinges5Blind and insect screen5Roman shade and insect screen5Skylights5Heki skylight (mini and midi)5Heki skylight (partially special5Heki skylight (partially special5Tables5	900011 34 55 6 79
6.5.1 6.5.2 6.6 6.7 6.8 6.8.1 6.8.2 6.8.3 6.8.4 6.9 6.9.1 6.9.2 6.10 6.10.1	Holder on the column.4Holder in the TV cabinet5Heating5Ventilation5Windows5Hinged window with rotary hinges5Hinged window with automatichinges5Blind and insect screen5Roman shade and insect screen(special equipment)5Skylights5Heki skylight (mini and midi)(partially special equipment)5Heki skylight (partially specialequipment)5Tables5Suspension table with folding leg5	900011 34 55 6 799
6.5.1 6.5.2 6.6 6.7 6.8 6.8.1 6.8.2 6.8.3 6.8.4 6.9 6.9.1 6.9.2 6.10 6.10.1 6.10.1 6.10.2	Holder on the column.4Holder in the TV cabinet5Heating5Ventilation5Windows5Hinged window with rotary hinges5Hinged window with automatichinges5Blind and insect screen5Roman shade and insect screen5Skylights5Heki skylight (mini and midi)5Heki skylight (partially special5Heki skylight (partially special5Suspension table with folding leg5Lift-off table, rotatable6	900011 34 55 6 7990
6.5.1 6.5.2 6.6 6.7 6.8 6.8.1 6.8.2 6.8.3 6.8.4 6.9 6.9.1 6.9.2 6.10 6.10.1 6.10.2 6.11	Holder on the column.4Holder in the TV cabinet5Heating5Ventilation5Windows5Hinged window with rotary hinges5Hinged window with automatichinges5Blind and insect screen5Roman shade and insect screen(special equipment)5Skylights5Heki skylight (mini and midi)(partially special equipment)5Heki skylight (partially specialequipment)5Tables5Suspension table with folding leg5Lift-off table, rotatable6Beds6	900011 34 55 6 79900
6.5.1 6.5.2 6.6 6.7 6.8 6.8.1 6.8.2 6.8.3 6.8.4 6.9 6.9.1 6.9.2 6.10 6.10.1 6.10.2 6.11 6.11.1	Holder on the column.4Holder in the TV cabinet5Heating5Ventilation5Windows5Hinged window with rotary hinges5Hinged window with automatichinges5Blind and insect screen5Roman shade and insect screen(special equipment)5Skylights5Heki skylight (mini and midi)(partially special equipment)5Heki skylight (partially specialequipment)5Suspension table with folding leg5Lift-off table, rotatable6Bunk bed6	900011 34 55 6 799000
6.5.1 6.5.2 6.6 6.7 6.8 6.8.1 6.8.2 6.8.3 6.8.4 6.9 6.9.1 6.9.2 6.10 6.10.1 6.10.2 6.11	Holder on the column.4Holder in the TV cabinet5Heating5Ventilation5Windows5Hinged window with rotary hinges5Hinged window with automatichinges5Blind and insect screen5Roman shade and insect screen(special equipment)5Skylights5Heki skylight (mini and midi)(partially special equipment)5Heki skylight (partially specialequipment)5Tables5Suspension table with folding leg5Lift-off table, rotatable6Beds6	900011 34 55 6 7990001

Contents

6.11.4	Fixed bed (adjustable head
	section)
6.11.5	Widening single beds (special equipment)63
6.12	Converting seating groups for
•••-	sleeping
6.12.1	Bench and central seating group
C 10 0	without additional cushion
6.12.2	Round seating group with square table
6.12.3	Round seating group without
	additional cushion
6.12.4	Round seating group with additional
6.12.5	cushion (foldable)
0.12.5	
7	Gas system69
7.1	General 69
7.2	Gas bottles70
7.3	Changing gas bottles
7.4	Gas isolator taps72
7.5	External gas connection (special
	equipment)72
7.6	DuoControl switching facility (special
	equipment)
7.7	Gas alarm system (special equipment)74
8	Electrical system77
8.1	General safety instructions
8.2	Terms
8.3	12 V power supply
8.4	Power supply unit CSV 400-178
8.5	Electric kit (special equipment)79
8.5.1	
8.5.1 8.5.2	Appliance relay
8.5.2	Appliance relay
	Appliance relay79Voltage regulator79Charging procedure for the living
8.5.2 8.5.3	Appliance relay79Voltage regulator79Charging procedure for the living area battery80
8.5.2 8.5.3 8.6	Appliance relay79Voltage regulator79Charging procedure for the living area battery80230 V power supply83
8.5.2 8.5.3 8.6 8.6.1	Appliance relay79Voltage regulator79Charging procedure for the living area battery80230 V power supply83230 V connection83
8.5.2 8.5.3 8.6	Appliance relay79Voltage regulator79Charging procedure for the living area battery80230 V power supply83230 V connection83Power cable for external 230 V
8.5.2 8.5.3 8.6 8.6.1 8.6.2	Appliance relay79Voltage regulator79Charging procedure for the living area battery80230 V power supply83230 V connection83Power cable for external 230 V connection83
8.5.2 8.5.3 8.6 8.6.1 8.6.2 8.7	Appliance relay79Voltage regulator79Charging procedure for the living area battery80230 V power supply83230 V connection83Power cable for external 230 V connection83Fuses84
8.5.2 8.5.3 8.6 8.6.1 8.6.2 8.7 8.7.1	Appliance relay79Voltage regulator79Charging procedure for the living area battery80230 V power supply83230 V connection83Power cable for external 230 V connection83Fuses8412 V fuses84
8.5.2 8.5.3 8.6 8.6.1 8.6.2 8.7 8.7.1 8.7.2	Appliance relay79Voltage regulator79Charging procedure for the living area battery80230 V power supply83230 V connection83Power cable for external 230 V connection83Fuses8412 V fuses84230 V fuse86
8.5.2 8.5.3 8.6 8.6.1 8.6.2 8.7 8.7.1	Appliance relay79Voltage regulator79Charging procedure for the livingarea battery80230 V power supply83230 V connection83Power cable for external 230 Vconnection83Fuses8412 V fuses84230 V fuse86Thirteen-pin plug connection
8.5.2 8.5.3 8.6 8.6.1 8.6.2 8.7 8.7.1 8.7.2 8.8	Appliance relay79Voltage regulator79Charging procedure for the livingarea battery80230 V power supply83230 V connection83Power cable for external 230 Vconnection83Fuses8412 V fuses84230 V fuse86Thirteen-pin plug connection87
8.5.2 8.5.3 8.6 8.6.1 8.6.2 8.7 8.7.1 8.7.2	Appliance relay79Voltage regulator79Charging procedure for the living area battery80230 V power supply83230 V connection83Power cable for external 230 V connection83Fuses8412 V fuses84230 V fuse86Thirteen-pin plug connection87External socket (special
8.5.2 8.5.3 8.6 8.6.1 8.6.2 8.7 8.7.1 8.7.2 8.8 8.9	Appliance relay79Voltage regulator79Charging procedure for the living area battery80230 V power supply83230 V connection83Power cable for external 230 V connection83Fuses8412 V fuses84230 V fuse86Thirteen-pin plug connection87External socket (special equipment)88
8.5.2 8.5.3 8.6 8.6.1 8.6.2 8.7 8.7.1 8.7.2 8.8 8.9 8.9 8.10	Appliance relay79Voltage regulator79Charging procedure for the living area battery80230 V power supply83230 V connection83Power cable for external 230 V connection83Fuses8412 V fuses84230 V fuse86Thirteen-pin plug connection87External socket (special equipment)88Circuit diagrams89
8.5.2 8.5.3 8.6 8.6.1 8.6.2 8.7 8.7.1 8.7.2 8.8 8.9 8.9 8.10 8.10.1	Appliance relay79Voltage regulator79Charging procedure for the living area battery80230 V power supply83230 V connection83Power cable for external 230 V connection83Fuses8412 V fuses84230 V fuse86Thirteen-pin plug connection87External socket (special equipment)88
8.5.2 8.5.3 8.6 8.6.1 8.6.2 8.7 8.7.1 8.7.2 8.8 8.9 8.10 8.10.1 8.10.1 8.10.2	Appliance relay79Voltage regulator79Charging procedure for the livingarea battery80230 V power supply83230 V connection83Power cable for external 230 Vconnection83Fuses8412 V fuses84230 V fuse86Thirteen-pin plug connection87External socket (special89Circuit diagram, interior89Circuit diagram, exterior90
8.5.2 8.5.3 8.6 8.6.1 8.6.2 8.7 8.7.1 8.7.2 8.8 8.9 8.10 8.10.1 8.10.2 9	Appliance relay79Voltage regulator79Charging procedure for the livingarea battery80230 V power supply83230 V connection83Power cable for external 230 Vconnection83Fuses8412 V fuses84230 V fuse86Thirteen-pin plug connection87External socket (special89Circuit diagram, interior89Circuit diagram, exterior90Appliances91
8.5.2 8.5.3 8.6 8.6.1 8.6.2 8.7 8.7.1 8.7.2 8.8 8.9 8.10 8.10.1 8.10.2 9 9.1	Appliance relay79Voltage regulator79Charging procedure for the living area battery80230 V power supply83230 V connection83Power cable for external 230 V connection83Fuses8412 V fuses84230 V fuse86Thirteen-pin plug connection87External socket (special equipment)88Circuit diagram, interior89Circuit diagram, exterior90Appliances91General91
8.5.2 8.5.3 8.6 8.6.1 8.6.2 8.7 8.7.1 8.7.2 8.8 8.9 8.10 8.10.1 8.10.2 9	Appliance relay79Voltage regulator79Charging procedure for the livingarea battery80230 V power supply83230 V connection83Power cable for external 230 Vconnection83Fuses8412 V fuses84230 V fuse86Thirteen-pin plug connection87External socket (special89Circuit diagram, interior89Circuit diagram, exterior90Appliances91

9.2.1	Models with waste gas vent on the
	right-hand side of the vehicle
9.2.2	To heat properly
9.2.3	Hot-air heater
9.2.4	Circulation fan
9.2.5	Airmix comfort package (special
	equipment)
9.2.6	Alde hot-water heater
9.2.7	Ultraheat additional electric heater
•	(special equipment)
9.2.8	Warming unit for waste water pipes
0.2.0	(special equipment)
9.2.9	Electrical floor warming unit (special
9.2.9	• • • •
0.0	equipment)
9.3	Air conditioning unit (special
0.0.4	equipment)
9.3.1	Dometic
9.3.2	Telair
9.4	Boiler
9.4.1	Models with waste gas vent on the
	right-hand side of the vehicle104
9.4.2	Hot water source104
9.4.3	Truma boiler (special equipment)105
9.4.4	Alde boiler (partially special
	equipment)
9.5	Cooker
9.5.1	Gas cooker
9.5.2	Gas oven (Dometic) (special
0.0.2	equipment)
9.5.3	Microwave oven (special
0.0.0	equipment)
9.5.4	Extractor hood (partially special
9.9.4	equipment)
9.6	
9.6.1	Refrigerator
	Refrigerator ventilation grill
9.6.2	Operation (Dometic 7 series,
	automatic ignition)
9.6.3	Operation (Dometic 7 series with
	frame heater)
9.6.4	Operation (Dometic 8 series with
	manual power selection MES) 116
9.6.5	Refrigerator door locking
	mechanism
4.0	
10	Sanitary fittings121
10.1	Water supply, general
10.2	Water tank
10.2.1	Water tank 22 I with external flap
	(special equipment)
10.2.2	Water tank 40 I
10.3	Waste water tank (special
	equipment)
10.4	Filling the water system
10.4	Emptying the water system
10.5	Toilet compartment
	•
10.7	Toilet



Contents



10.7.1 10.7.2	Swivel toilet (Thetford C-200) 127 Toilet with fixed seat (Thetford C-402)
11	Care 141
11.1	External care 141
11.1.1	General
11.1.1	Washing with a high-pressure
11.1.2	cleaner
11.1.3	Washing the vehicle
11.1.4	Windows of acrylic glass
11.1.5	Hot galvanized chassis
11.1.6	Underbody
11.1.7	Waste water tank 143
11.2	Interior care 143
11.3	Water system 144
11.3.1	Cleaning the water tank
11.3.2	Cleaning the water pipes 144
11.3.3	Disinfecting the water system 145
11.4	Extractor hood
11.5	Air conditioning unit
11.5.1	Dometic
11.5.2	Telair
11.6 11.6.1	
11.6.2	Preparations
11.6.3	At the end of the winter season 148
11.7	Lay-up
11.7.1	Temporary lay-up
11.7.2	
11.7.2	Winter lay-up
11.7.2	Winter lay-up 149 Starting up the vehicle after
11.7.2 11.7.3	Winter lay-up149Starting up the vehicle aftera temporary lay-up or after lay-upover winter.150
11.7.2 11.7.3 12	Winter lay-up149Starting up the vehicle after a temporary lay-up or after lay-up over winter.150Maintenance151
11.7.2 11.7.3 12 12.1	Winter lay-up149Starting up the vehicle after a temporary lay-up or after lay-up over winter.150Maintenance151Inspection work151
11.7.2 11.7.3 12 12.1 12.2	Winter lay-up149Starting up the vehicle after a temporary lay-up or after lay-up over winter.150Maintenance151Inspection work151Maintenance work151
11.7.2 11.7.3 12 12.1 12.2 12.3	Winter lay-up149Starting up the vehicle after a temporary lay-up or after lay-up over winter.150Maintenance151Inspection work151Maintenance work151Stabilisers151
11.7.2 11.7.3 12 12.1 12.2 12.3 12.3.1	Winter lay-up149Starting up the vehicle after a temporary lay-up or after lay-up over winter.150Maintenance151Inspection work151Maintenance work151Stabilisers151General151
11.7.2 11.7.3 12 12.1 12.2 12.3 12.3.1 12.3.2	Winter lay-up 149 Starting up the vehicle after 149 a temporary lay-up or after lay-up 150 Maintenance 151 Inspection work 151 Maintenance work 151 Stabilisers 151 General 151 AKS 1300 152
11.7.2 11.7.3 12 12.1 12.2 12.3 12.3.1 12.3.2 12.3.3	Winter lay-up 149 Starting up the vehicle after 149 a temporary lay-up or after lay-up 150 Maintenance 151 Inspection work 151 Maintenance work 151 Stabilisers 151 AKS 1300 152
11.7.2 11.7.3 12 12.1 12.2 12.3 12.3.1 12.3.2	Winter lay-up 149 Starting up the vehicle after 149 a temporary lay-up or after lay-up 150 Maintenance 151 Inspection work 151 Maintenance work 151 Stabilisers 151 AKS 1300 152 AKS 3004 152 WS 3000 D 153
11.7.2 11.7.3 12 12.1 12.2 12.3 12.3.1 12.3.2 12.3.3 12.3.4	Winter lay-up 149 Starting up the vehicle after 149 a temporary lay-up or after lay-up 150 Maintenance 151 Inspection work 151 Maintenance work 151 Stabilisers 151 General 151 AKS 1300 152 AKS 3004 152 WS 3000 D 153 Hitching device Easy-Pull 153
11.7.2 11.7.3 12 12.1 12.2 12.3 12.3.1 12.3.2 12.3.3 12.3.4 12.4	Winter lay-up 149 Starting up the vehicle after 149 a temporary lay-up or after lay-up 150 Maintenance 151 Inspection work 151 Maintenance work 151 Stabilisers 151 Stabilisers 151 AKS 1300 152 AKS 3004 152 WS 3000 D 153 Hitching device Easy-Pull 153 Braking system 153
11.7.2 11.7.3 12 12.1 12.2 12.3 12.3.1 12.3.2 12.3.3 12.3.4 12.4 12.5	Winter lay-up 149 Starting up the vehicle after 149 a temporary lay-up or after lay-up 150 Maintenance 151 Inspection work 151 Maintenance work 151 Stabilisers 151 General 151 AKS 1300 152 AKS 3004 152 WS 3000 D 153 Hitching device Easy-Pull 153
11.7.2 11.7.3 12 12.1 12.2 12.3 12.3.1 12.3.2 12.3.3 12.3.4 12.4 12.5 12.6 12.7 12.7.1	Winter lay-up 149 Starting up the vehicle after 149 a temporary lay-up or after lay-up 150 Maintenance 151 Inspection work 151 Maintenance work 151 Stabilisers 151 General 151 AKS 1300 152 AKS 3004 152 WS 3000 D 153 Hitching device Easy-Pull 153 Doors 154 Alde hot-water heater 154
11.7.2 11.7.3 12 12.1 12.2 12.3 12.3.1 12.3.2 12.3.3 12.3.4 12.4 12.5 12.6 12.7 12.7.1 12.7.2	Winter lay-up 149 Starting up the vehicle after 149 a temporary lay-up or after lay-up 150 Maintenance 151 Inspection work 151 Maintenance work 151 Stabilisers 151 General 151 AKS 1300 152 AKS 3004 152 WS 3000 D 153 Hitching device Easy-Pull 153 Braking system 153 Doors 154 Alde hot-water heater 154 Checking the fluid level 154 Topping up heating fluid 154
11.7.2 11.7.3 12 12.1 12.2 12.3 12.3.1 12.3.2 12.3.3 12.3.4 12.4 12.5 12.6 12.7 12.7.1 12.7.2 12.7.3	Winter lay-up 149 Starting up the vehicle after 149 a temporary lay-up or after lay-up 150 Maintenance 151 Inspection work 151 Maintenance work 151 Stabilisers 151 General 151 AKS 1300 152 AKS 3004 152 WS 3000 D 153 Hitching device Easy-Pull 153 Braking system 153 Doors 154 Alde hot-water heater 154 Checking the fluid level 154 Bleeding the heating system 155
11.7.2 11.7.3 12 12.1 12.2 12.3 12.3.1 12.3.2 12.3.3 12.3.4 12.4 12.5 12.6 12.7 12.7.1 12.7.2 12.7.3 12.8	Winter lay-up 149 Starting up the vehicle after 149 a temporary lay-up or after lay-up 150 Maintenance 151 Inspection work 151 Maintenance work 151 Stabilisers 151 General 151 AKS 1300 152 AKS 3004 152 WS 3000 D 153 Hitching device Easy-Pull 153 Doors 154 Alde hot-water heater 154 Checking the fluid level 154 Bleeding the heating system 155 Replacing bulbs, external 155
11.7.2 11.7.3 12 12.1 12.2 12.3 12.3.1 12.3.2 12.3.3 12.3.4 12.4 12.5 12.6 12.7 12.7.1 12.7.2 12.7.3 12.8 12.8.1	Winter lay-up 149 Starting up the vehicle after 149 a temporary lay-up or after lay-up over winter. over winter. 150 Maintenance 151 Inspection work 151 Maintenance work 151 Stabilisers 151 General 151 AKS 1300 152 AKS 3004 152 WS 3000 D 153 Hitching device Easy-Pull 153 Braking system 153 Doors 154 Alde hot-water heater 154 Checking the fluid level 154 Bleeding the heating system 155 Replacing bulbs, external 155 Front lights 156
11.7.2 11.7.3 12 12.1 12.2 12.3 12.3.1 12.3.2 12.3.3 12.3.4 12.4 12.5 12.6 12.7 12.7.1 12.7.2 12.7.3 12.8 12.8.1 12.8.2	Winter lay-up. 149 Starting up the vehicle after 149 a temporary lay-up or after lay-up over winter. over winter. 150 Maintenance 151 Inspection work. 151 Maintenance work. 151 Stabilisers 151 General 151 AKS 1300 152 AKS 3004 152 WS 3000 D 153 Hitching device Easy-Pull 153 Braking system 153 Doors. 154 Alde hot-water heater 154 Checking the fluid level 154 Topping up heating fluid 154 Bleeding the heating system 155 Front lights 156 Rear lights 157
11.7.2 11.7.3 12 12.1 12.2 12.3 12.3.1 12.3.2 12.3.3 12.3.4 12.4 12.5 12.6 12.7 12.7.1 12.7.2 12.7.3 12.8 12.8.1 12.8.2 12.8.3	Winter lay-up. 149 Starting up the vehicle after 150 Maintenance 150 Maintenance 151 Inspection work 151 Maintenance work 151 Stabilisers 151 General 151 AKS 1300 152 AKS 3004 152 WS 3000 D 153 Hitching device Easy-Pull 153 Doors 154 Alde hot-water heater 154 Checking the fluid level 154 Topping up heating fluid 154 Bleeding the heating system 155 Front lights 156 Rear lights 157 Side lights 157
11.7.2 11.7.3 12 12.1 12.2 12.3 12.3.1 12.3.2 12.3.3 12.3.4 12.4 12.5 12.6 12.7 12.7.1 12.7.2 12.7.3 12.8 12.8.1 12.8.2	Winter lay-up. 149 Starting up the vehicle after 149 a temporary lay-up or after lay-up 150 Maintenance 151 Inspection work. 151 Maintenance work. 151 Stabilisers 151 General 151 AKS 1300 152 AKS 3004 152 WS 3000 D 153 Hitching device Easy-Pull 153 Braking system 153 Doors. 154 Alde hot-water heater 154 Checking the fluid level 154 Topping up heating fluid 154 Bleeding the heating system 155 Front lights 156 Rear lights 157 Side lights 157 Types of bulbs for exterior 157
11.7.2 11.7.3 12 12.1 12.2 12.3 12.3.1 12.3.2 12.3.3 12.3.4 12.4 12.5 12.6 12.7 12.7.1 12.7.2 12.7.3 12.8 12.8.1 12.8.2 12.8.3 12.8.4	Winter lay-up149Starting up the vehicle after a temporary lay-up or after lay-up over winter.150Maintenance151Inspection work.151Maintenance work.151Stabilisers151General151AKS 1300152AKS 3004152WS 3000 D153Hitching device Easy-Pull153Braking system153Doors.154Alde hot-water heater154Checking the fluid level154Topping up heating fluid154Bleeding the heating system155Front lights156Rear lights157Side lights157Types of bulbs for exterior158
11.7.2 11.7.3 12 12.1 12.2 12.3 12.3.1 12.3.2 12.3.3 12.3.4 12.4 12.5 12.6 12.7 12.7.1 12.7.2 12.7.3 12.8 12.8.1 12.8.2 12.8.3	Winter lay-up. 149 Starting up the vehicle after 149 a temporary lay-up or after lay-up 150 Maintenance 151 Inspection work. 151 Maintenance work. 151 Stabilisers 151 General 151 AKS 1300 152 AKS 3004 152 WS 3000 D 153 Hitching device Easy-Pull 153 Braking system 153 Doors. 154 Alde hot-water heater 154 Checking the fluid level 154 Topping up heating fluid 154 Bleeding the heating system 155 Front lights 156 Rear lights 157 Side lights 157 Types of bulbs for exterior 157

12.9.2 12.9.3 12.9.4 12.10 12.11 12.12	Recessed halogen light (flat)159Recessed halogen light160Halogen spotlight (swivelling)160Spare parts161Vehicle identification plate161Warning and information stickers162
13 13.1 13.2 13.3 13.4 13.5 13.5.1 13.5.2 13.5.3 13.5.4 13.6 13.6.1	Wheels and tyres163General163Tyre selection164Tyre specifications165Handling of tyres165Changing wheels165General instructions165Tightening torque166Changing a wheel166Changing a wheel at alloy168Spare wheel support168Spare wheel support in gas bottle
13.6.2 13.7	compartment (partially special equipment)
14 14.1 14.2 14.3 14.3.1 14.3.2 14.4 14.5 14.6 14.6.1 14.6.2 14.7	Troubleshooting.173Chassis173Braking system173Caravan control system174Caravan control system (ATC)174Caravan control system (IDC)175Electrical system175Gas system176Cooker177Gas cooker/gas oven177Microwave oven177Heater, boiler and hot water
14.7.1 14.7.2 14.7.3 14.7.4 14.8 14.8.1 14.8.2 14.9 14.9.1 14.9.2 14.10 14.11	source177Trumatic S hot-air heater178Alde heater/boiler178Truma boiler178Truma hot water source179Refrigerator179Dometic 7 series179Dometic 8 series180Air conditioning unit181Telair182Water supply182Body183
15 15.1	Special equipment

Contents



16 16.1 16.2	Technical data187Table of linear measures187Power supply187
17	Helpful notes
17.1	Traffic rules in foreign countries 189
17.2	Help on Europe's roads
17.3	Speed limits 191
17.4	Driving with low beam in European
	countries
17.5	Sleeping in the vehicle away from
	camping areas
17.6	Gas supply in European
	countries 195
17.7	Toll regulations in European
	countries 195
17.8	Tips on staying overnight safely
	during travel
17.9	Tips for winter campers
17.10	Travel checklists 196
18	Inspection plan 199

Please read this instruction manual completely before using the vehicle for the first time!

Always keep this instruction manual in the vehicle. Also inform all other users of the safety regulations.



▶ The non-observance of this symbol can lead to personal injury.



 $\,\triangleright\,\,$ The non-observance of this symbol can lead to damage being caused to, or inside the vehicle.



 $\,\triangleright\,\,$ This symbol indicates recommendations or special aspects.



 $\,\triangleright\,\,$ This symbol indicates actions which lead to environmental awareness.

This instruction manual contains sections which describe model-specific equipment or special equipment. These sections are specially marked. It may be that your vehicle has not been fitted with this special equipment. In some cases, the actual equipment of your vehicle may therefore be different from that shown in some illustrations and descriptions.

However, your vehicle may be fitted with other special equipment not described in this instruction manual.

Special equipment is described when an explanation is required.

Adhere to the instruction manuals which are separately enclosed.

- The details "right", "left", "front" and "rear" always refer to the vehicle in direction of travel.
 - ▷ All dimensions and weight details are "approximate".

Should the vehicle be subjected to damage due to a failure to follow the instructions in this instruction manual, then the guarantee claim is deemed invalid.

Our vehicles are subjected to continuous development. Please understand that we reserve the right to alter the form, equipment and technology. Therefore, no claims can be made against the manufacturer as a result of the contents of this instruction manual. The equipment which was known and included at the time of going to press is described.

The reprinting, translation and copying, including extracts is not permitted without prior written authorisation from the manufacturer.



The vehicle comes without a wheelbrace and vehicle jack. We suggest you obtain a commercially available wheelbrace before you first use your caravan, in case of an emergency. If no AL-KO vehicle jack (special equipment for AL-KO chassis) is present, obtain a conventional commercial scissor-type jack or an hydraulic vehicle jack, in order to have it ready in the case of mishap or emergency. Our authorised dealers and service centres will be happy to advise you.



1.1 General

The vehicle is constructed in accordance with the latest technology and the recognised safety regulations. Nevertheless, personal injury may result and the vehicle may be damaged if the safety instructions in this instruction manual are not followed.

Only use the vehicle in a technically impeccable condition. Follow the instructions in the instruction manual.

Malfunctions which impair the safety of persons or the vehicle should be immediately remedied by qualified personnel.

Have the vehicle's braking and gas systems inspected and repaired by an authorised specialist workshop only.

Alterations to the body are only to be carried out with the authorisation of the manufacturer.

Luggage and accessories may only be transported up to the maximum permissible gross weight.

Observe the test and inspection periods stipulated by the manufacturer.

1.2 Environmental tips



- ▷ Be considerate of the environment.
- Remember that: All kinds of waste water and household waste are not to be disposed of in drains or in the open countryside.
- ▷ On board, collect waste water only in the waste water tank or if necessary – in other containers designed for that purpose.
- Only empty the waste water tank and toilet cassette or sewage tank at disposal stations at the camping or caravan sites, which are especially provided for this purpose. When stopping in towns and communities, observe the instructions at caravan sites or ask where there are disposal stations.
- Empty waste water tank as often as possible, even when it is not completely full (hygiene).

If possible, flush out waste water tank and, if necessary, drainage pipe with fresh water every time it is emptied.

- Never allow the toilet cassette or sewage tank to become too full. Empty the toilet cassette or sewage tank frequently, at the latest as soon as the level indicator lights up.
- Separate household waste according to glass, tin cans, plastic and wet waste also when on a journey. Enquire at the town or community authority about disposal points. Household waste is not to be disposed of in waste paper baskets which are situated at car parks.
- Empty waste bins as often as possible into the containers provided for this purpose. This helps to avoid unpleasant smells and an accumulation of rubbish on board.
- When parked, do not allow the engine of the towing vehicle to run more than necessary. When running idle, a cold engine releases more contaminants than usual. The running temperature of the engine is achieved more quickly whilst the vehicle is in motion.
- ▷ Use an environmentally-friendly WC chemical agent for the WC which can also be biologically degraded and only use small doses.





- When staying in towns and communities for long periods, search for parking areas which are specially reserved for caravans and towing vehicles. Enquire at the town or community authority about parking spaces.
- \triangleright Always leave the parking places in a clean condition.



Chapter overview

This chapter contains important safety instructions. The safety instructions are for the protection of persons and property.

The instructions address the following topics:

- fire prevention and what to do in case of fire
- general care of the vehicle
- road safety of the vehicle
- towing
- gas system of the vehicle
- electrical system of the vehicle
- water system of the vehicle

2.1 Fire prevention

2.1.1 Avoidance of fire risks



irstner

- Never leave children in the vehicle unattended.
- ► Keep flammable materials clear of heating and cooking appliances.
- Lights can get very hot. When the light is switched on, there must always be a safety distance of 30 cm between light and flammable objects. Fire hazard!
- Never use portable heating or cooking appliances.
- Only authorised qualified personnel may make changes to the electrical system, gas system or appliances.

2.1.2 Fire-fighting



- Always carry a dry powder fire extinguisher in the vehicle. The fire extinguisher must be approved, tested and close at hand.
- ▶ The fire extinguisher is not included in the scope of delivery.
- Have the fire extinguisher tested at regular intervals by authorised qualified personnel. Observe the date of testing.
- Always keep a fire blanket near the cooker.



In case of fire



- Evacuate all passengers.
- Cut off the electrical power supply and disconnect from the mains.
- Close regulator tap on the gas bottle.
- ▶ Sound the alarm and call the fire brigade.
- ▶ Fight the fire if this is possible without risk.



- \triangleright Acquaint yourself with the position and operation of the emergency exits.
- \triangleright Keep escape routes clear.
- \triangleright Observe the fire extinguisher instructions for use.



All windows and doors which meet the following requirements are considered as emergency exits:

- Open to the outside or can be shifted in horizontal direction
- Opening angle at least 70°
- Minimum diameter of clearance = 450 mm
- Maximum distance from the vehicle floor = 950 mm

2.2 General



- The oxygen in the vehicle interior is used up by breathing and the use of gas operated appliances. That is why the oxygen needs to be replaced on a constant basis. For this purpose, forced ventilation options (e.g. skylights with forced ventilation, mushroom-shaped vents or floor vents) are fitted to the vehicle. Never cover or block forced ventilations from the inside or outside with objects such as e.g. a winter mat. Keep forced ventilations due to increased CO₂ levels.
- ▶ Observe the headroom of the doors.



- As far as the appliances (heater, cooker, refrigerator, etc.) are concerned, the instruction manuals are authoritative. It is imperative that they be observed.
- Fitting accessories or special equipment can alter the dimensions, weight and road behaviour of the vehicle. Some of the parts must be entered in the vehicle papers.
- Only use wheel rims and tyres which are approved for the vehicle. Information concerning the size of the approved wheel rims and tyres is included in the vehicle documents or can be obtained from authorised dealers and service centres.
- ▷ Firmly apply the handbrake when parking the vehicle.



- ▷ When leaving the vehicle, it is imperative that all doors, external flaps and windows are closed.
- The vehicle may only be driven by drivers who hold a driving licence which is valid for the respective vehicle class.
- ▷ When selling the vehicle, hand over all instruction manuals for the vehicle and the fitted appliances.

2.3 Road safety



- Before commencing the journey, carry out a functional check of indicating and lighting equipment and the brakes.
- If the vehicle has been stationary for a long period (approx. 10 months) have the braking and gas systems checked by an authorised specialist workshop.
- Before commencing the journey, remove the television from the support and store it securely.
- Before commencing the journey, place and secure the flat screen and screen support in the initial position. If the screen holder is installed in a TV cabinet: Close TV cabinet.
- During the journey, no persons are to travel inside the caravan.



- In case of underpasses, tunnels or similar obstacles, note the total height of the vehicle (including the roof load).
- In winter, the roof must be free of snow and ice before commencing the journey.
- ▶ Before commencing the journey, empty the waste water tank.
- Check tyre pressure before a journey or every 2 weeks. Wrong tyre pressure causes excessive wear and can lead to damage or even to tyre burst. You can lose control of the vehicle.



- Before commencing the journey, distribute the payload evenly within the vehicle (see chapter 3).
- When loading the vehicle and when taking a rest from driving, in order to load luggage or food, for example, observe the maximum permissible gross weight and axle loads (refer to vehicle documents).
- Do not exceed the maximum permissible nose weight on the caravan coupling and do not let the weight fall below the minimum nose value. Load the caravan accordingly.
- ▷ While driving with your caravan, the towing vehicle must be equipped with two external mirrors.
- Before commencing the journey, ensure that all cupboard doors, the toilet compartment door and all drawers and flaps are secure. Engage the refrigerator door securing device.
- ▷ Before commencing the journey, close windows and skylights.
- ▷ Before commencing the journey, close all external flaps and lock them.
- ▷ Before commencing the journey, remove the external supports and retract the corner steadies or steady legs, which are fitted to the vehicle.
- Before commencing the journey, crank the jockey wheel up as far as possible.
- ▷ Before commencing the journey, put the antenna in park position.
- ▷ During the initial journey and each time after changing a wheel, re-tighten the wheel bolts/wheel nuts after 50 km (30 miles). Subsequently inspect them at regular intervals in order to ensure that they are firmly seated.
- Tyres may not be older than 6 years as the material becomes brittle over time (see chapter 13).

2.4 Towing



- Care is to be taken when connecting and detaching a trailer. Risk of accident and injury!
- No persons are to be between the towing vehicle and the trailer during positioning for connecting and detaching.



2.5 Gas system

2.5.1 General instructions



- Before commencing the journey, when leaving the vehicle or when gas equipment is not in use, close all gas isolator taps and the main isolator tap on the gas bottle.
- No appliance operated by a naked flame (e.g. heater or refrigerator) may be in operation when filling the tank, on ferries or in the garage. Danger of explosion!
- Do not use appliances operated with a naked flame in closed spaces (e.g. garages). Danger of poisoning and suffocation!
- Only have the gas system maintained, repaired or altered by an authorised specialist workshop.
- Have the gas system checked by an authorised specialist workshop according to the national regulations before commissioning. This also applies for not registered vehicles. For modifications to the gas system have the gas system immediately checked by an authorised specialist workshop.
- The gas pressure regulator and exhaust gas pipes must also be inspected. The gas pressure regulator has to be replaced after 10 years at the latest. The vehicle owner is responsible for seeing that this is carried out.
- In case of a defect of the gas system (gas odour, high gas consumption) there is danger of explosion! Close regulator tap on the gas bottle immediately. Open doors and windows and ventilate well.
- If the gas system is defective: Do not smoke; do not ignite any open flames, and do not operate electric switches (light switches etc.).
- Before using the cooker make sure that there is sufficient ventilation. Open windows or the skylight.
- ▶ Do not use the gas cooker or gas oven for heating purposes.
- If there are several gas devices, each gas device must have its own gas isolator tap. If individual gas devices are not in use, close the respective gas isolator tap.
- Ignition safety valves must close within 1 minute after the gas flame has extinguished. A clicking sound is audible. Check function from time to time.
- The built-in gas devices are exclusively meant for use with propane or butane gas or a mixture of both. The gas pressure regulator as well as all built-in gas devices are designed for a gas pressure of 30 mbar.
- Propane gas is capable of gasification up to -42 °C, whereas butane gas gasifies at 0 °C. Below these temperatures no gas pressure is available. Butane gas is unsuitable for use in winter.
- Regularly inspect the gas tube fitted to the gas bottle connection for tightness. The gas tube must not have any tears and must not be porous. Have the gas tube replaced by an authorised specialist workshop no later than ten years after the manufacturing date. The operator of the gas system must see to it that the parts are replaced.
- Due to its function and construction, the gas bottle compartment is a space which is open to the exterior. Never cover or block up the standard forced ventilations. Otherwise gas that is emitted can not be diverted to the outside.



- Do not use the gas bottle compartment as storage space as it is not moisture-proof.
- Secure the gas bottle compartment against unauthorised access. To do this, lock the compartment.
- ▶ The regulator tap on the gas bottle must be accessible.
- Only connect gas-operated devices (e.g. gas grill) which have been designed for a gas pressure of 30 mbar.
- The exhaust gas pipe must be fitted tightly to the heating system and to the vent and must be sealed. The exhaust gas pipe must not show any evidence of damage.
- Exhaust fumes must be able to escape into the atmosphere unhindered and fresh air must be able to enter unhindered. For this reason, keep the exhaust pipe and intake openings clean and unobstructed (e.g. free from snow and ice). For this reason, no snow walls or aprons may lie against the vehicle.

2.5.2 Gas bottles

- Gas bottles are only to be transported within the designated gas bottle compartment.
- ▶ Place the gas bottles in vertical position in the gas bottle compartment.
- Fasten the gas bottles so that they are unable to turn or tilt.
- If the gas bottles are not connected to the gas tube, always place the protective cap on top.
- Close the regulator tap on the gas bottle before the gas pressure regulator or gas tube are removed from the gas bottle.
- Use your hands only to connect the gas pressure regulator or the gas tube to the gas bottles. Do not use any tools.
- Only use special gas pressure regulators with a safety valve designed for vehicle use. Other gas pressure regulators are not permitted and cannot meet the demanding requirements.
- Use the gas pressure regulator defroster if the temperature falls below 5 °C.
- Use only 11 kg or 5 kg gas bottles. Camping gas bottles with built-in check valve (blue bottle with max. 2.5 or 3 kg content) are can be used in exceptional cases with a safety valve.
- Use the shortest possible tube lengths (150 cm max.) for external gas bottles.
- ▶ Never block the floor ventilation openings below the gas bottles.

2.6 Electrical system



- Only allow qualified personnel to work on the electrical system.
- Prior to carrying out work on the electrical system, switch off all devices and lights, disconnect the battery and disconnect the vehicle from the mains.
- Only use original fuses with the stipulated values.







- Only replace defective fuses when the cause of the defect is known and has been remedied.
- ▶ Never bridge or repair fuses.

2.7 Water system



- Water left standing in the water tank or in the water pipes becomes undrinkable after a short period. Therefore, before each use of the vehicle, thoroughly clean the water pipes and the water tank. After each use of the vehicle completely empty the water tank and the water pipes.
- ► In the case of lay-ups lasting more than a week disinfect the water system before using the vehicle.



If the vehicle is not used for several days or if it is not heated when there is a risk of frost, empty the entire water system. Leave the water taps on in central position. Leave the safety/drainage valve (if there is one) and all drain cocks open. Frost damage to appliances, frost damage to the vehicle and deposits in water-carrying components can be avoided in this way.



Chapter overview

This chapter contains important information which has to be noted before commencing your journey or carrying out any tasks before the journey.

The instructions address the following topics:

- keys
- registration
- connecting and detaching to the towing vehicle
- caravan coupling
- hitching device Easy-Pull
- caravan control system
- calculating the payload
- correct loading of the caravan
- external mirrors
- storing the television

At the end of the chapter there is a checklist which once again summarises the most important points.

3.1 Keys



Fig. 1 Keys

Two keys (Fig. 1) are included with the caravan.

The keys fit the:

- Conversion door
- Service flaps
- Toilet flap
- Gas bottle compartment flap

Always deposit a replacement key outside the vehicle. Make a note of the key number. Our authorised dealers and workshops can offer assistance in case of loss.

3.2 Registration

Your caravan is a vehicle which must be registered. Observe national regulations on registration.

Please remember that certain countries require a separate national code sticker in addition to the EU plate.



3.3 Connecting



- Care is to be taken when connecting and detaching a trailer. Risk of accident and injury!
- ► No persons are to be between the towing vehicle and the trailer during positioning for connecting and detaching.
- Observe the permissible nose weight and rear axle load of the towing vehicle. Nose weight and rear axle load must not be exceeded. The values of the nose weight and rear axle load are included in the documents of the vehicle and the caravan coupling.
- Ensure that the interior of the coupling is not soiled and that the movable parts of the coupling (not the ball retainer) are lubricated.
- The tow ball is not to be lubricated when using a stabiliser. The friction pads are pressed against the coupling ball and thereby generate an anti-rolling moment. This anti-rolling effect is only guaranteed when the towing vehicle coupling head is free of lubricant and other residues. When lubricating the stabiliser ensure that no lubricant is on the friction pads.



- Caravan with an overrun brake: Do not connect or detach caravan with the overrun brake on.
- Caravan coupling with detachable ball neck: If the ball neck is mounted incorrectly, there is the danger of the trailer breaking away. Observe the instruction manual for the caravan coupling.
- ▷ In order to connect the vehicle, crank the supporting jockey wheel down and set it down on the ground.
- \triangleright Do not use the stabilising lever of the stabiliser as a maneuvering aid.



- Check whether the caravan's connector plug fits into the socket of the towing vehicle. If connector plug and socket do not match, ask your authorised dealers and workshops for adapting options.
- ▷ Further information about the stabiliser can be obtained in the manufacturer's instruction manual.

Connecting:

- Connect the caravan (see section 3.4). The coupling jaw and the ball must interlock and are not to be loosely superposed. The coupling jaw must completely surround the ball.
- Connect the breakaway brake cable with a loop to a suitable anchorage point on the vehicle, do **not** attach to the tow ball. Thereby, observe the cable length: The cable must not trail on the ground or trigger the braking function around corners.
- Crank the jockey wheel up as far as possible. Adjust the running role in parallel to the direction of travel and to the draw box.
- Insert the connector plug of the caravan in the socket of the towing vehicle. Ensure that the hooks of the safety cover engage with the plug. The hooks prevent the plug from becoming loose during the journey.
- Put the connection cable in a loose loop across the drawbar. Make sure that it does not touch the ground.
- Check whether the caravan coupling is mounted correctly on the coupling ball. Pay attention to the safety indicator.
- Check whether corner steadies and jockey wheel are raised.
- Check the caravan lighting system whilst the towing vehicle is connected.



3.4 Caravan couplings



Before connecting, ensure that the tow ball of the coupling device is free of dirt and grease.

3.4.1 AKS 1300 stabiliser

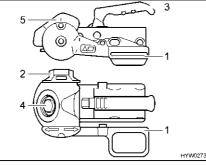


Fig. 2 AKS 1300 stabiliser

Connecting:

- Pull up the stabilising lever (Fig. 2,1) as far as possible.
- Turn the handwheel (Fig. 2,2) in an anticlockwise direction as far as possible in the open position.
- Pull the coupling handle (Fig. 2,3) upwards.
- Place the opened stabiliser on the caravan coupling. The coupling handle must audibly lock back into its initial position.
- In addition, push the coupling handle downwards by hand (not with your foot). Closing and securing is carried out automatically.
- Conduct a visual inspection: The green cylinder on the safety indicator (Fig. 2,4) must be visible.
- Turn handwheel in a clockwise direction until it can be felt and heard that the torque limiting mechanism grates.
- Push the stabilising lever down until the marking on the stabilising lever is aligned with that on the stabilising housing (Fig. 2,5).

3.4.2 AKS 3004 stabiliser

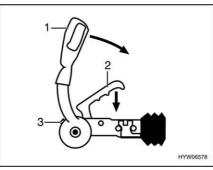


Fig. 3 AKS 3004 stabiliser

Connecting:

- Pull up the stabilising lever (Fig. 3,1) as far as possible.
- Pull the coupling handle (Fig. 3,2) upwards.
- Place the opened stabiliser on the caravan coupling. The coupling handle must audibly lock back into its initial position.



- In addition, push the coupling handle downwards by hand (not with your foot). Closing and securing is carried out automatically.
- Conduct a visual inspection: The green cylinder on the safety indicator (Fig. 3,3) must be visible.
- Activate the stabilising mechanism. Push the stabilising lever (Fig. 3,1) down to its stop limit.

3.4.3 WS 3000 D stabiliser

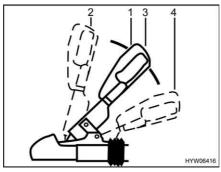


Fig. 4 WS 3000 D stabiliser

- *Connecting:* Pull the coupling handle (Fig. 4,1) upwards into position "Open" (Fig. 4,2). Stabiliser is open.
 - Set down the open stabiliser on the caravan ball of the towing vehicle and release the coupling handle. The handle glides automatically back to its initial position (Fig. 4,3).
 - In addition, push the coupling handle down with your hand (not with your foot). Closing and securing is carried out automatically.
 - Conduct a visual inspection: The caravan ball must not be visible in the attached state.
 - Activate the stabilising mechanism. To do this, press the coupling handle downwards (Fig. 4,4) from the closed position (Fig. 4,3) to its stop limit.

To deactivate the stabilisation mechanism, e.g. for manoeuvring, pull the coupling handle (Fig. 4,1) slowly upward to the closed position (Fig. 4,3).

3.5

Hitching device Easy-Pull (special equipment)



- On sloping terrain or on heavy soil, the belt can be laid around the caravan coupling and returned to its initial position. This produces a simple block and tackle. This range of the hitching device is reduced in half.
- \triangleright Also read the manufacturer's instruction manual.



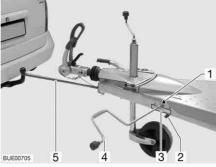


Fig. 5 Hitching device Easy-Pull

Connecting the caravan:

- Drive up to the caravan with the towing vehicle.
- Push the locking lever (Fig. 5,2) to the open position.
- Pull the belt with the hook (Fig. 5,5) out towards the front, lay it around the ball neck of the caravan coupling of the towing vehicle and the secure it.
- Push the locking lever (Fig. 5,2) to the close position.
- Release the handbrake on the caravan.
- Attach the crank for the corner steadies of the caravan (Fig. 5,4) to the hexagon nut (Fig. 5,1) of the cranking mechanism and start cranking. Crank in the rotational direction indicated on the label (Fig. 5,3).
- Pull the caravan as far as possible over the tow ball of the caravan coupling of the towing vehicle.
- Couple the caravan and remove the crank.
- Push the locking lever (Fig. 5,2) to the open position.
- Unhook the belt and return it to its original position.
- Push the locking lever to the close position.

3.6 Caravan control system

3.6.1 Caravan control system (ATC) (special equipment)



- The steady plus on the connection socket on the towing vehicle must be protected with 15 A or 20 A fuses. Fire hazard!
- The caravan control system cannot override the physically preset limits. Do not exceed the maximum speed of 100 km/h intended by the designers, and always adapt your speed to suit the weather, road and traffic conditions.



> Also read the manufacturer's instruction manual.



1 Control LED



Fig. 6 Control LED

- Couple caravan.
- Use the connection cable to connect the caravan to the towing vehicle. The caravan control system starts a self test. The control LED (Fig. 6, 1) on the caravan lights up red for about 3 seconds.
- Check whether the control LED lights up green after the self test. The caravan control system is now active.

3.6.2 Caravan control system (IDC) (special equipment)



- The steady plus on the connection socket on the towing vehicle must be protected with 14 A or 15 A fuses. Fire hazard!
- When the IDC performs the self-test, the caravan's brake linkage is actuated. Do not reach into the functional area of the brake linkage during the self-test. Danger of bruises!
- The caravan control system cannot override the physically preset limits. Do not exceed the maximum speed of 100 km/h intended by the designers, and always adapt your speed to suit the weather, road and traffic conditions.



▷ Also read the manufacturer's instruction manual.

The IDC is an auxiliary braking system. When the system identifies a hazardous situation (e.g. swinging motion by the caravan), it automatically slows down the caravan. However, this does not relieve the driver of responsibility.

- Couple caravan.
- Use the connecting cable to connect the caravan to the towing vehicle. The caravan control system starts a self test. The control LED on the caravan flashes green.
- Check whether the control LED lights up green after the self test. The caravan control system is now active.

3.7 Detaching



- Care is to be taken when connecting and detaching a trailer. Risk of accident and injury!
- In addition, observe the safety instructions with respect to connecting included in this instruction manual.

Detaching:

irstner

- Apply the caravan handbrake.
- Place the wheel chocks behind both of the wheels.
- Remove the connector plug of the caravan from the towing vehicle socket and insert it in the holder on the drawbar.
- Remove the breakaway cable from the towing vehicle.
- Crank the jockey wheel down until it is set firmly on the ground. Now loosen the caravan coupling.
- Using the jockey wheel, lift the drawbar until the towing vehicle can be driven away without risk.

3.8 Payload



- Overloading the vehicle and wrong tyre pressure can cause tyres to burst. You can lose control of the vehicle.
- Only the maximum permissible gross weight and the mass in a ready-todrive condition, not the actual weight of the vehicle, is stated in the vehicle documents. For your own safety, we recommend that you have your loaded vehicle (with all luggage and personal objects) weighed on a public weighbridge before you set out on your journey.



- Do not exceed the maximum permissible gross weight stated in the vehicle documents by the payload.
- ▷ Built-in accessories and special equipment reduce the payload.
- ▷ Adhere to the axle load stated in the vehicle documents.

Load the caravan so that the drawbar coupling head is not pushed downwards due to the permissible nose weight. Heavy objects should be close to the axles and a weight centre should be in the centre of the vehicle.

When loading the caravan observe:

- The permissible maximum caravan load
- The maximum permissible nose weight (e.g. 50 kg)
- The minimum nose weight in accordance with national regulations


This information is in the towing vehicle instruction manual.

Maximum permitted payloads

Description		Load (kg)
Roof load		200
Bunk beds		100
Bike rack	Double	35

3.8.1

Terms

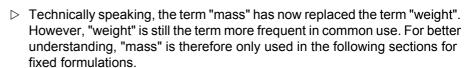

▷ All specifications according to EU norm DIN EN 1645-2.



Maximum permissible gross weight in a laden	The maximum permissible gross weight in a laden condition is a vehicle may never exceed.	the weight that
condition	The maximum permissible overall weight in laden condition c mass in ready-to-drive condition and of the payload.	onsists of the
	In the vehicle documents, the manufacturer has specified the missible gross weight in a laden condition.	maximum per-
Permitted mass	The permitted mass is the weight specified by the manufacture type approval. The permitted mass must never exceed the m sible gross weight of the loaded vehicle.	
Mass in ready-to-drive condition	The mass in ready-to-drive condition is the weight of the read standard vehicle.	ly-to-drive
	The mass in ready-to-drive condition is made up as follows:	
	 Unladen weight (mass of the empty vehicle) with factory-insequipment Basic equipment weight 	stalled standard
	Basic equipment includes all equipment and fluids required for vehicle use. The weight of the basic equipment includes:	safe and proper
	 Water system filled up to 100 % (water tank and pipes) Gas bottles filled up to 100 % A full heating system A full toilet flushing system The power cables for the 230 V power supply The installation kit for an auxiliary battery if an auxiliary battery 	tery can be used
	The waste water and sewage tanks are empty.	
Example for calculating	Water tank with 40 I	40 kg
the basic equipment	Gas bottles (2 x 11 kg _{gas} + 2 x 14 kg _{bottle})	+ 50 kg
	Boiler with 10 I	+ 10 kg
	230 V power cable	+ 4 kg
	Installation kit for auxiliary battery	+ 20 kg
	Total	= 124 kg
	In the vehicle documents, the manufacturer specifies the mas drive conditions.	s in ready-to-
Payload	The payload is made up as follows:	
	Additional equipmentPersonal equipment	
	You will find explanations on the individual components of the following text.	e payload in the
	▷ The vehicle's payload can be increased by reducing the w	eight in a ready-

- 0
- > The vehicle's payload can be increased by reducing the weight in a readyto-drive condition. To do this, it is allowed for example to empty the fluid containers or to remove the gas bottles.



Additional equipment Additional equipment includes accessories and special equipment. Examples of additional equipment include:

- Spare wheel
- Bike rack
- Satellite unit
- Microwave oven
- Hot water supply

Chapter 15 lists the weights of the various items of special equipment; they may also be obtained from the manufacturer.

Personal equipment Personal equipment includes all items in the vehicle that are not included in the additional equipment. For example, personal equipment can include the following:

- Foodstuffs
- Crockery
- Television
- Radio
- Clothes
- Bedding
- Toys
- Books
- Toiletries

No matter where kept, personal equipment also includes:

- Bikes
- Boats
- Surfboards
- Sports equipment

For the personal equipment, according to the applicable regulations, the manufacturer must use a minimum weight that is determined according to the following formula:

Formula Minimum weight M (kg) = $10 \times N + 10 \times L + 30$

- **Explanation** N = maximum number of beds, as stated by the manufacturer L = total length of the caravan in metres, not including the drawbar
 - Example Caravan with 4 beds and a length of 5 m: Minimum weight M (kg) = 10 x 4 _{beds} + 10 x 5 _{metres} + 30 = 120 kg

3.8.2 Calculating the payload



- The payload calculation at the factory is partly based on all-inclusive weights. For safety reasons, the maximum permissible gross weight in a laden condition must not be exceeded.
- Only the maximum permissible gross weight and the mass in a ready-todrive condition, not the actual weight of the vehicle, is stated in the vehicle documents. For your own safety, we recommend that you have your loaded vehicle (with all luggage and personal objects) weighed on a public weighbridge before you set out on your journey.



Calculation

Mass in ka to be

The payload (see section 3.8.1) is the difference in weight between

- Maximum permissible gross weight in a laden condition and
- Vehicle mass complete in a ready-to-drive condition.

Example for calculating the payload

	calculated	Calculation
Maximum permissible gross weight ac- cording to vehicle documents	1500	
Vehicle mass in a ready-to-drive condi- tion, including basic equipment according to vehicle documents	- 1200	
This results in a permissible payload of	300	
Additional equipment	- 40	
For the personal equipment this re- sults in	= 260	

The calculation of the payload from the difference between the maximum permissible gross weight in laden condition and the mass specified by the manufacturer in ready-to-drive condition is however only a theoretical value.

Only if the vehicle is weighed with full tanks, full gas bottles and complete additional equipment on a public weighbridge, can the actual payload be determined.

The actual payload is the difference between the maximum permissible gross weight in laden condition and the weighed vehicle weight.

The result is the weight that is permitted for the actual load of the personal equipment.

3.8.3 Loading the caravan correctly



- ▶ Never exceed the maximum permissible gross weight.
- Distribute the load evenly on the left and right sides of the vehicle.
- Store all objects in such a way that they cannot slip.
- Store heavy objects (awning, tin cans, etc.) close to the axles. Low-lying storage compartments whose doors do not open in the direction of travel are particularly suited for storing heavy objects.
- Stack light objects (laundry) in the roof storage cabinets.
- Never concentrate the caravan load at the rear.



▷ For vehicles with tandem axles, distribute the weight centre over both axles.

The payload arrangement recommended cannot be adhered to consequently as the storage facilities are to be found throughout the complete caravan. Ensure that heavy items are close to the axles and the lower area, i.e. directly above the vehicle floor. Store heavy objects (awning, tin cans, etc.), if possible, in the towing vehicle.



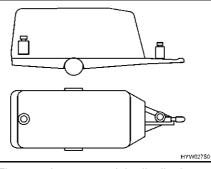


Fig. 7 Incorrect weight distribution

Incorrectly loaded

Loads stored apart from each other (Fig. 7) lead to inclination to skid.

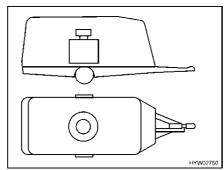


Fig. 8 Correct weight distribution

Correctly loaded Do not store heavy objects such as awnings, tin cans, etc. in the caravan but rather in the towing vehicle. Secure bicycles on the roof of the towing vehicle. Store all loads close to the axle (Fig. 8).


3.8.4 Caravan load, nose weight and axle load



 $\,\triangleright\,\,$ The nose weight of the caravan may not exceed 100 kg.



> The information on the towing vehicle documents is important for the selection of the car and caravan.

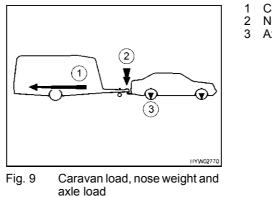

Caravan load
 Nose weight
 Axle load

3



Caravan load	The caravan load (Fig. 9,1) stipulated in the towing vehicle documents pro- vides information as to the maximum weight which the towing vehicle is per- mitted to tow. The caravan load refers to the actual weight of the caravan and not to the maximum permissible gross weight of the caravan.
Example	The towing vehicle may tow 1,200 kg. If the caravan has a maximum permis- sible gross weight of 1,200 kg and in fact weighs 900 kg, it can be loaded with another 300 kg. If however the caravan has a maximum permissible gross weight of 1,400 kg, it may only be loaded to a maximum of 1,200 kg.
Nose weight	The nose weight (Fig. 9,2) specifies how much weight the caravan drawbar can apply to the caravan coupling of the towing vehicle. Information is to be found in description of the caravan couplings and the vehicle documents. Therefore, a caravan coupling with a permissible nose weight of 50 kg may not support a loaded caravan which has a nose weight of 75 kg. Additionally, for the permissible gross weight the nose weight must be taken into consideration. If necessary the payload in the towing vehicle must be reduced by the amount of the nose weight.
	The maximum permissible gross weight for the towing vehicle and for the car- avan is not to be exceeded.
	Only when the nose weight is adapted optimal to the towing vehicle and car- avan combination, the towing vehicle and caravan achieves its maximum sta- bility and safety in highway traffic. The optimal nose weight is simultaneously the maximum possible nose weight.
	Please refer to the vehicle documents and the description of the caravan coupling for the maximum permissible nose weight.
	If different values are specified in the vehicle documents and in the description of the caravan coupling: Please select the lowest value. This value is the maximum possible nose weight for the towing vehicle and caravan.
	Check the nose weight before each journey, e.g. with a nose weighing scales. To obtain a correct value, position the nose weighing scales vertical under the coupling jaw and place the caravan drawbar horizontal.
	The payload in the caravan must be distributed in such a way that the measured nose weight comes as close as possible to the maximum per- missible nose weight. The maximum permissible nose weight is not be exceeded.
Axle load	The axle load (Fig. 9,3) is also specified in the vehicle documents of the towing vehicle and provides information concerning the permissible maximum load for the front and rear axles. The axle load may not be exceeded by a trailer. The above illustration shows where which forces act on the car and caravan.
3.8.5	Bike rack (special equipment)
\wedge	 Observe the permissible axle loads and maximum permissible gross weight when loading the bike rack. Do not fall below the minimum nose weight.
	 Bicycles may protrude at the side by a maximum of 40 cm, measured from the outer edge of the tail lights. However, a total width of 2.5 m must not be exceeded. Adjust the attachments for the bikes accordingly. The overhang must be marked with a red flag.
	Load the bike rack with bicycles only (max. two units).





- Fasten bicycles using the straps provided and check to see that they are secure after you have driven a few kilometres.
- Check the secure attachment of the bicycles on the bike rack after the first 10 km and then at each break in the journey.
- ► Do not use the bike rack as luggage rack or ladder.



- \triangleright The bike rack is only to be used for transporting bicycles.
- ▷ The gross weight specified by the manufacturer must not be exceeded.
- $\,\triangleright\,\,$ The identification plate and rear lights must not be covered.
- $\,\triangleright\,\,$ The maximum permissible payload of the bike rack is 35 kg.
- When loading the bike rack, observe the centre of gravity. If the bike rack is only loaded with **one** bicycle, position the bicycle as closely as possible to the vehicle wall.
- > Driving with a folded out bike rack without bicycles is not permitted.
- \triangleright Before every journey, check:

Is the bike rack without bicycles folded in correctly?

Are the bicycles securely fastened to the bike rack using the bike rack belts?

Front bike rack

The bike rack is attached to the struts of the drawbar with the installation material.

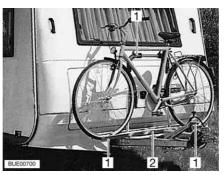


Fig. 10 Front bike rack

Loading the bicycles:

Put the bikes on to the bike rack (Fig. 10,2) and secure them with quick straps (Fig. 10,1).

Bike rack on the rear wall

The bike rack is hooked to the rear wall by means of two holders and is bolted to the floor plate on the bottom.





Fig. 11 Bike rack on the rear wall

Loading the bicycles:

- Put the bikes onto the bike rack and secure them with quick straps.
- In addition, secure each bicycle on the retaining bracket or retaining arm.

3.9 External mirrors



Before every journey, re-adjust the external mirrors on the towing vehicle for safety reasons.



▷ Additional mirrors must be EC-type certified and thus meet the EC guidelines.

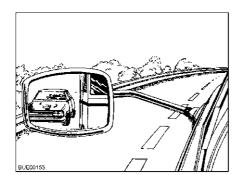


Fig. 12 External mirrors

When towing a trailer, the towing vehicle must be equipped with two external mirrors. The external mirrors ensure that the roadway next to the trailer can be clearly seen.

- If possible, take the towing vehicle and caravan with you.
- Test on site to see if they fit.
- Check that the mirror is suitable for the vehicle and the seating position of the driver.

The following applies when purchasing additional mirrors



- Before commencing the journey, remove the television from the support and store it securely.
- Before commencing the journey, place and secure the flat screen and screen support in the initial position. If the screen holder is installed in a TV cabinet: Close TV cabinet.
- Before commencing the journey, ensure that the antenna is in park position. Danger of accidents! Park position means: The antenna points towards the back, is fully lowered and is locked in this position.
- arepsilon If there is a risk of frost, do not leave the flat screen television in the vehicle.



irstner

- 0
- ▷ Further information on positioning the flat screen can be obtained from chapter 6.



Road safety

- \land
- Check tyre pressure before a journey or every 2 weeks. Wrong tyre pressure causes excessive wear and can lead to damage or even to tyre burst. You can lose control of the vehicle.

Before commencing the journey, work through the checklist:

	No.	Checks	Checked
with	1	All vehicle documents are on board	
avan	2	Two external mirrors fitted to towing vehicle	
	3	Nose weight has not been exceeded or fallen below the mini- mum	
	4	Tyres in proper condition	
	5	Road lighting system working	
	6	Overrun brake functions correctly	
	7	Brakes react evenly	
	8	When braking, the towing vehicle and caravan remain in the lane	
	9	Total height determined and noted. Keep the height informa- tion close at hand in the towing vehicle	
side	10	Awning completely retracted	
	11	Roof free of snow and ice (in winter)	
	12	External connections and lines disconnected and stored away	
	13	External supports removed	
	14	Corner steadies and jockey wheel cranked as high as possible	

Wheel chocks removed and stored away

Entrance step is stored securely or retracted

Towing vehicle with caravan

Housing body, outside

14 15

16



	No.	Checks	Checked
	17	External flaps closed and locked	
	18	Conversion door locked	
		· · · · · · · · · · · · · · · · · · ·	
Housing body, inside	19	Windows and skylights closed and locked	
	20	Television removed from the support and securely stored	
	21	Flat screen secured	
	22	Television antenna retracted (if one is built in)	
	23	Loose parts stored away or fixed in position	
	24	Open storage spaces empty	
	25	No gas cartridges or other easily flammable materials stored in the roof cupboard of the awning light	
	26	Refrigerator door secured	
	27	Refrigerator set to 12 V operation	
	28	All drawers and flaps closed	
	29	Inner doors and table secured	
_			
Gas system	30	Gas bottles firmly fixed in the gas bottle compartment so that they are unable to turn	
	31	Protective cap set on top of the gas bottle	
	32	Regulator tap on the gas bottle and gas isolator taps are closed	
			
Electrical system	33	Check the battery voltage of the living area battery (see chapter 8). If a battery voltage is displayed on the panel which is too low then the living area battery must be re-charged. Observe the notes and instructions in chapter 8	
		• Commence journey with fully charged living area bat- tery.	
Water system housing body	34	Mobile waste water tank stored away and secured in the gas bottle compartment	
	35	Water system emptied in case of risk of frost. Watertaps and drain cocks open	




Chapter overview

This chapter contains instructions on how to drive the caravan.

The instructions address the following topics:

- driving speed
- brakes
- driving in reverse

4.1 Driving with the caravan

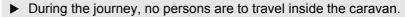

- The caravan constructions were designed for a maximum permissible speed of 100 km/h (60 mph). Therefore never drive faster than 100 km/ h (60 mph).
- Please always observe the speed limits in the individual countries (see chapter 17).

The main differences between driving with a caravan and driving without a caravan are the increased vehicle width and length, a decreased acceleration and an increased vehicle stopping distance. Therefore, adapt your driving technique to the altered road behaviour resulting from driving with a caravan.

4.2 Brakes



 Have defects on the braking system immediately remedied by an authorised specialist workshop.

Before each journey

Before each journey, check by means of a braking test:

- Does the overrun brake function?
- Do the brakes react evenly?
- Do the towing vehicle and the caravan remain in the lane when braking?




4.3

Driving in reverse

- When driving in reverse, the caravan reacts in exactly the opposite direction to the steering movements of the towing vehicle. If you steer the towing vehicle to the left, the caravan moves to the right.
- ▷ Never back up without a second person to direct you.

As far as all models with an automatic reverse driving mechanism are concerned, the caravan can be reversed without difficulty. In addition to the rolling resistance, residual braking power must be taken into account.



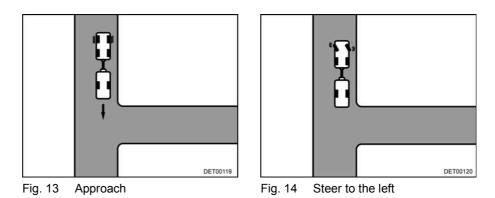

- Drive up to the entrance until the rear of the caravan is roughly level with Driving in reverse: the entrance (Fig. 13).
 - Steer the stationary towing vehicle and trailer to the left (Fig. 14).
 - Reverse with caution. The caravan moves to the right.

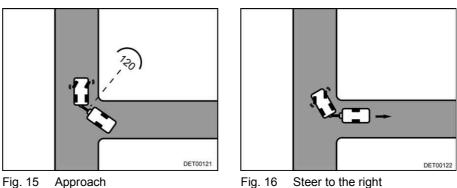


Fig. 16 Steer to the right



- > The angle between the vehicles must not be too narrow, otherwise the corners will bump against each other. This can cause major damage to the vehicles. Get someone to direct you!
- As soon as both vehicles are at an approximate angle of 120° to each other, come to a stop (Fig. 15).
- Steer to the right and reverse with caution (Fig. 16).
- Continue to reverse, correcting the steering if necessary.
- For the last 2 to 3 m, steer to the left once more so that the towing vehicle and trailer are in line.



Chapter overview

This chapter contains instructions on how to pitch the vehicle.

The instructions address the following topics:

- handbrake
- wheel chocks
- operation of the supports
- entrance step
- mobile waste water tank
- 230 V connection
- refrigerator
- aligning the antenna
- ▷ Pitch the vehicle so that it is as horizontal as possible. Secure the vehicle to prevent it from rolling.

5.1 Handbrake

Firmly apply the handbrake when parking the vehicle.

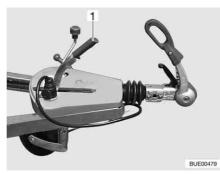


Fig. 17 Handbrake

To release it, push the handbrake (Fig. 17,1) forwards.

5.2 Wheel chocks

Use the two wheel chocks even when the upward or downward gradients are of a minimum.

5.3 Corner steadies



- Do not use the fitted corner steadies as a vehicle jack. The corner steadies are only for stabilising the pitched vehicle. The vehicle wheels are not to be raised above the ground.
- ▷ When pitching the vehicle, ensure that the corner steadies are evenly loaded.
- $\,\triangleright\,\,$ Before driving away, wind up the corner steadies as far as they can go.



▷ When the ground is soft, place a pad or block under the supports in order to prevent the vehicle from sinking into the ground.

In order to stabilise the pitched caravan use the corner steadies fitted as standard.



With the assistance of the jockey wheel position the pitched caravan in a horizontal position. For control purposes use a small spirit level.

Crank down the corner steadies after the caravan is in an absolutely horizontal position.

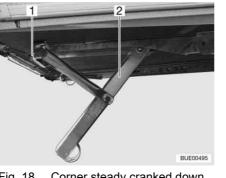




Fig. 18 Corner steady cranked down (variant 1)

own Fig. 19 Corner steady cranked down (variant 2)

- *Cranking down:* Place the hand crank handle provided as standard on the hexagonal nut (Fig. 18,1 or Fig. 19,1) of the corner steady (Fig. 18,2 or Fig. 19,2).
 - Rotate the hand crank in a clockwise direction. The corner steady is swung downwards.

Cranking upwards:

 Turn the crank handle in an anticlockwise direction. The corner steady is swung upwards.

5.4 Entrance step (free-standing)



- Make sure that the entrance step stands on secure and level ground. This will prevent the entrance step from toppling over.
- ► Do not step on the edges of the entrance step. Danger of slipping!
- Secure the entrance step to the ground, for example, with tent pegs. This way the entrance step cannot slip away.

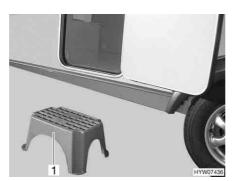


Fig. 20 Entrance step (free-standing)

■ Place the entrance step (Fig. 20,1) in front of the entrance to the caravan.

iirstner

5.5 Waste water tank, mobile (special equipment)

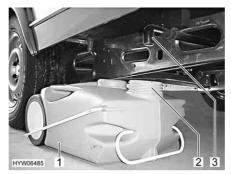


Fig. 21 Waste water tank, mobile

The waste water tank (Fig. 21,1) is stored inside the caravan gas bottle compartment during the journey. The drain pipe (Fig. 21,3) of the caravan is located at the bottom of the vehicle - on the left hand side in the direction of travel.

Before using the water system: Place the waste water tank under the caravan in such a way that the opening (Fig. 21,2) of the waste water tank is under the drain pipe.

5.6 230 V connection

The vehicle can be connected to a 230 V power supply (see chapter 8).

5.7 Refrigerator

The 12 V operation of the refrigerator is only possible when a towing vehicle is connected and the vehicle engine is running. When the vehicle engine is switched off, switch the refrigerator to 230 V operation or gas operation.

5.8 Satellite unit (special equipment)



Before commencing the journey, ensure that the antenna is in park position. Danger of accidents!



- ▷ The vehicle must be still during the satellite search. Do not walk through the vehicle.
- ▷ Satellite reception is only possible, when the antenna is positioned in direct line of sight of the chosen satellite and the view is not blocked in any way.
- \triangleright Also read the manufacturer's instruction manual.

5.8.1 Equipment with automatic antenna alignment

The satellite unit is equipped with an automatic positioning unit. This automatic positioning unit ensures that the antennas are aligned accurately.

The flat screen incorporates a digital receiver.

The satellite unit is operated via remote control.



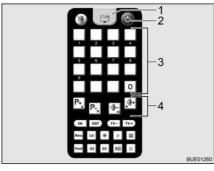


Fig. 22 Remote control

- Setting up the unit: Switch on the television.
 - Press the key "(Fig. 22,2) on the remote control. The satellite antenna repositions itself out of the park position and into search mode. When the unit finds the satellite, you will hear a signal tone.
 - Use the memory buttons (Fig. 22,3) or the function buttons (Fig. 22,4) to set the required transmitter.

5.8.2 Equipment with semi-automatic antenna alignment

The satellite unit is equipped with a semi-automatic positioning unit.

The flat screen incorporates a digital receiver.

The satellite unit is operated via remote control.

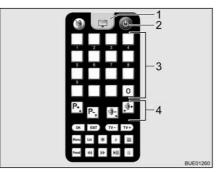


Fig. 23 Remote control for television

Switching on the satellite unit:

- Switch on the television.
- Press the key "()" (Fig. 23,2) on the remote control for the television. The unit switches to search mode. You will hear a continuous tone.
- Press the key "1" on the remote control for the antenna. The satellite antenna lifts out of the park position and moves to the last position entered.
- To switch to television reception on the TV remote control, press the TV button (Fig. 23,1). The signal tone will stop. An image will appear on the screen.

Setting up the antenna:

- Use the memory buttons (Fig. 23,3) on the TV remote control or the function buttons (Fig. 23,4) to select the desired station.
 - On the remote control for the antenna, use the keys "☐" or "↓↓" to correct the angle of the antenna in accordance with the enclosed cards.
 - Loosen antenna mast clamp.



- Turn antenna slowly. When the antenna finds the satellite, you will hear a signal tone.
- Optimise the reception by turning and tilting the antenna.
- Slightly retighten the antenna mast clamp.

Lowering the antenna for driving:

- Loosen antenna mast clamp.
- Turn the antenna until the slot in the clamp and the slot in the antenna mast are congruent with each other.
- Press the key "," on the remote control for the antenna. The satellite antenna moves into park position.
- Check whether the antenna is fully lowered and points to the rear of the vehicle.
- Slightly retighten the antenna mast clamp.
- Switch off the television.

5



Chapter overview

This chapter contains instructions about living in the vehicle.

The instructions address the following topics:

- opening and closing the doors and external flaps
- light switches
- adjusting the halogen spotlights
- positioning the television
- heating the vehicle
- ventilation of the vehicle
- opening and closing the windows and blinds
- opening and closing the skylights
- converting tables
- use of the beds

6.1 Conversion door



iirstner

Only drive with locked doors.



- ▷ Locking the doors can prevent them from opening of their own accord, e.g. during an accident.
- ▷ Locked doors also prevent forced entry, e.g. when waiting at traffic lights.
- \triangleright When leaving the vehicle, always lock the doors.

6.1.1 Conversion door, outside

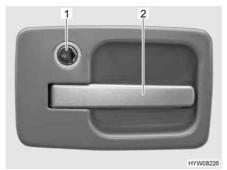


Fig. 24 Door lock, conversion door, outside

Opening:

- Insert the key into locking cylinder (Fig. 24,1) and turn until the door lock is unlatched.
 - Return the key to the central position and remove it.
 - Pull on the handle (Fig. 24,2). The door is open.

Locking:

- Insert the key into locking cylinder (Fig. 24,1) and turn until the door lock is engaged.
 - Return the key to the central position and remove it.



▷ For conversion doors with a left-hand opening, locking and opening is done in the reverse directions to those of the conversion door shown.



6.1.2 Conversion door, inside



Fig. 25 Door lock, conversion door, inside

- *Opening:* Push the handle (Fig. 25,1) down.
- Locking: Turn the handle (Fig. 25,1) approx. 45° upward and leave it in this position.

6.1.3 Window conversion door (Seitz) (special equipment)

The conversion door window is fitted with a Roman shade.



Fig. 26 Roman shade

- *Closing:* Grip the Roman shade (Fig. 26,2) in the middle of the holding bar (Fig. 26,1), pull it upwards and then release it at the desired height. The Roman shade will stay at this height.
- *Opening:* Grip the Roman shade in the middle of the holding bar and push it down.

6.1.4 Folding insect screen on the conversion door (special equipment)



 \triangleright Open the insect screen completely before closing the conversion door.



Fig. 27 Insect screen

Closing:

iirstner

Pull out the insect screen completely by the bar (Fig. 27,1).

Opening:

Push the insect screen into its initial position by the bar (Fig. 27,1).

6.2 External flaps



- ▷ Before commencing the journey, close all external flaps and lock them.
- ▷ To open and close the external flap, open or close all locks that are fitted to the external flap.



 \triangleright When leaving the vehicle, close all external flaps.

The external flaps fitted to the vehicle are all fitted with identical locking cylinders. Therefore, all locks can be opened with a single key.



2.1 Flap lock, elliptical-shaped



During rain, water can penetrate the opened flap lock. Therefore close the lock handle.

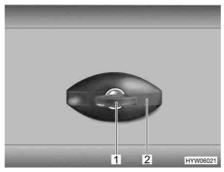


Fig. 28 Flap lock, elliptical-shaped, closed

Opening:

- Insert key into locking cylinder (Fig. 28,1) and turn a quarter turn in an anticlockwise direction. The lock handle (Fig. 28,2) snaps out.
 - Remove the key.
 - Turn lock handle one quarter turn in an anticlockwise direction. The flap lock is open.



- *Closing:* Firmly close the external flap.
 - Turn lock handle in a clockwise direction until it is horizontal. The flap lock is now engaged but not locked.
 - Insert key into locking cylinder.
 - Press down lock handle with key inserted and turn key a quarter turn in a clockwise direction. The lock handle will stay bolted.
 - Remove the key.

6.2.2 Flap lock, rectangular



Fig. 29 Flap lock, rectangular, closed

- *Opening:* Insert key into locking cylinder (Fig. 29,1) and turn a quarter turn. The lock handle (Fig. 29,2) snaps out.
 - Remove the key.
 - Turn the lock handle one quarter turn. The flap lock is open.
- *Closing:* Firmly close the external flap.
 - Turn lock handle until it is horizontal. The flap lock is now engaged but not locked.
 - Insert key into locking cylinder.
 - Press down lock handle with key inserted and turn key a quarter turn. The lock handle will stay bolted.
 - Remove the key.



6.2.3 Flap for toilet cassette

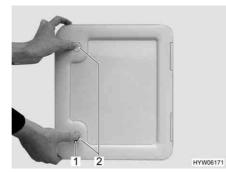


Fig. 30 Flap for toilet cassette

- *Opening:* Insert key into locking cylinder (Fig. 30,1) of the push-button lock and turn a quarter turn.
 - Remove the key.
 - Press both push-button locks (Fig. 30,2) simultaneously with your thumb and open the flap for the toilet cassette.

1 2 Recessed grip

External flap

Closing:

- Close the flap for the toilet cassette and press it shut.
- Insert key into locking cylinder (Fig. 30,1) and turn a quarter turn.
- Remove the key.

6.2.4 Flap for the 230 V connection, square

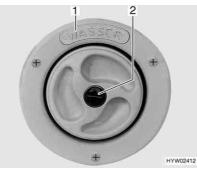



Fig. 31 Flap for the 230 V connection

- *Opening:* Reach into the recessed grip (Fig. 31,1) on the external flap (Fig. 31,2) and swing the external flap upward.
- *Closing:* Swivel the external flap downwards and press it shut.



6.2.5 Cap for the drinking water filler neck (only for water tank 40 l)



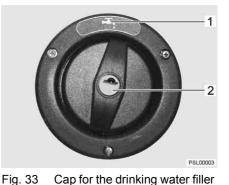

neck (alternative)

Fig. 32 Cap for the drinking water filler neck



- ▷ The drinking water filler neck is labelled by the word "WASSER" (water) (Fig. 32,1) or marked by the symbol "♣ (Fig. 33,1).
- *Opening:* Insert the key in the locking cylinder (Fig. 32,2 or Fig. 33,2) and turn it in an anticlockwise direction.
 - Remove cap.

Closing:

- Insert the cap in the drinking water filler neck.
- Turn key in a clockwise direction.
- Remove the key.

6.3 Furniture flaps

- ▷ Before commencing the journey, close all furniture flaps and inner doors and lock them.
- ▷ The furniture flaps shown in this section are examples. Depending on the model, the locks and handles on the furniture flaps may differ to those displayed here.

6.3.1 Furniture flaps with push button




Fig. 34 Furniture flap with push button

- *Opening:* Press inner part of the lock. The push button jumps out (Fig. 34).
 - Hold push button and open furniture flap.



- Closing: Press furniture flap shut.
 - Press push button in until it locks. The furniture flap is closed correctly when the fastener locks into place.

6.3.2 Furniture flaps with handle

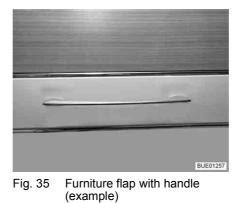

- Opening:
- Pull handle (Fig. 35) until furniture flap is open.
- *Closing:* Push down furniture flap until flap hinge perceptibly closes.

6.3.3 Furniture flaps with release handle

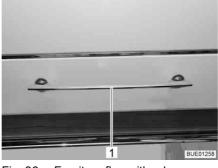


Fig. 36 Furniture flap with release handle

- *Opening:* Press the release handle (Fig. 36,1) down and keep it pressed.
 - Pull the release handle until the furniture flap is open.
- *Closing:* Press the furniture flap down until you can feel the flap hinge close and hear the lock snap into place.

6.4 Light switch

6.4.1 Entrance area

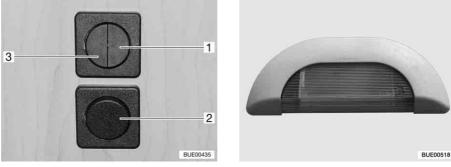


Fig. 37 Light switch

Fig. 38 Awning light

The entrance area has light switches for the following lamps:

- Seating group lighting (Fig. 37,1)
- Awning light (Fig. 37,2 and Fig. 37,3)



- ▷ For models without the light switch (Fig. 37,2) the awning light (Fig. 38) is switched on or off using the rocker switch (Fig. 37,3).
- $\,\triangleright\,\,$ The light switches have different layouts according to the model.

6.4.2 Interior



▷ The lamps shown in this section are examples. Not all lamps used in the vehicle are shown. The examples are intended to clarify the possible positions for the light switches. The type and appearance of the light switches can deviate from those shown here.



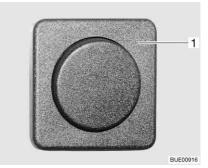


Fig. 39 Toilet compartment lighting, light switch directly on the lamp

Fig. 40 Toilet compartment lighting, light switch separate from the lamp

Depending on the model, the light switches for the toilet compartment lighting are fitted at various points: Directly on the corresponding lamp (Fig. 39,1) or separate from the lamp below the toilet cabinet, underneath the wash basin or next to the conversion door (Fig. 40,1).

BUE00916



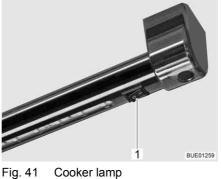




Fig. 42 Living area lamps, light switch separate from the lamp

The light switches in the living area are located directly on the corresponding lamp (Fig. 41,1) or in the seating group (Fig. 42,1) or the bed area.

6.5 Holder for flat screen



- Before commencing the journey, place and secure the flat screen and screen support in the initial position. If the screen holder is installed in a TV cabinet: Close TV cabinet.
- ▷ If there is a risk of frost, do not leave the flat screen television in the vehicle.



▷ Also read the manufacturer's instruction manual.

6.5.1 Holder on the column

The holder for the flat screen is attached to a column.

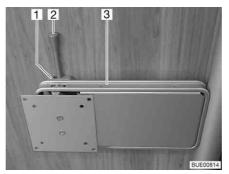


Fig. 43 Holder on the column

Positioning:

- Push the release lever (Fig. 43,2) to the side and turn the holder (Fig. 43,3) with the flat screen to the desired position.
- Press flat screen slightly upward and swivel it to the desired position. Three different inclination angles may be used.

Storing away:

■ Turn flat screen back until the holder (Fig. 43,3) engages in the lock (Fig. 43,1).



6.5.2 Holder in the TV cabinet

The flat screen is attached to a console in the TV cabinet.

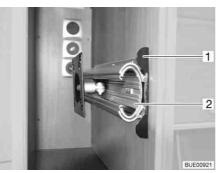


Fig. 44 Holder in the TV cabinet

Positioning:

- Push the unlocking bar (Fig. 44,1) in.
- Pull out the extension (Fig. 44,2) as far as possible.
- Swivel flat screen into the desired position.

Storing away:

- Swing back flat screen into its original position.
- Push in the extension (Fig. 44,2) until the unlocking bar (Fig. 44,1) engages.

6.6 Heating



During heater operation, the exhaust gas pipe in the wardrobe will get hot. Therefore do not keep any heat-sensitive garments right next to the exhaust gas pipe (see also chapter 9).



 \triangleright The operation of the heater is described in chapter 9.

6.7 Ventilation



The oxygen in the vehicle interior is used up by breathing and the use of gas operated appliances. That is why the oxygen needs to be replaced on a constant basis. For this purpose, forced ventilation options (e.g. skylights with forced ventilation, mushroom-shaped vents or floor vents) are fitted to the vehicle. Never cover or block forced ventilations from the inside or outside with objects such as e.g. a winter mat. Keep forced ventilations clear of snow and leaves. There is a danger of suffocation due to increased CO₂ levels.



- Although sufficient ventilation is provided, in certain weather conditions, condensation can form on metal objects (e.g. screwed connections in the floor).
- ▷ Additional cold spots can occur at thermal "bridges" (e.g. lifting roof edges, mushroom-shaped vents, skylight edges, sockets, filler necks, flaps, etc.).

Condensation Ensure that there is a continuous exchange of air by providing frequent and efficient ventilation. This is the only method for ensuring that condensation and resulting mould is not formed during cool weather. During the colder season, a pleasant living climate is created if heating output, air distribution and ventilation are synchronised.

If the vehicle is laid up for a longer period, occasionally ventilate it well, especially in summer as heat accumulation can occur. Do not only air the interior, but also the storage compartments which are accessible from the outside. Air the parking place as well if the vehicle is parked in a closed space (e.g. garage). The occurrence of condensation could lead to the formation of mould.

6.8 Windows



irstner

The windows are fitted with a blind or Roman shade and with an insect screen or folding insect screen. After the latch has been released, the blind and insect screen automatically spring back to the initial position by tensile force. In order not to damage the tension mechanics, hold onto the blind or insect screen and allow it to slowly return to the initial position. The Roman shade and folding insect screen are made of thin woven fabric. In order not to damage the Roman shade or the insect screen, grasp the respective handle and carefully return it to the initial position.

- Do not keep blinds closed over a longer period of time as that can cause increased material wear.
- If the blind or the Roman shade is completely closed, exposure to direct sunlight can cause heat to accumulate between the blind/the Roman shade and the window. The window could be damaged.

Therefore, if the shade is installed in the bottom blind box, close the shade only 2/3 when sunlight is intense. This allows the heat to escape between the window and the shade.

If the shade is installed in the top blind box, close the shade fully and open it regularly.

Also move the window into the "continuous ventilation" position.

- \triangleright Before commencing the journey, close the windows.
- Depending on the weather, close the windows far enough to prevent moisture from entering.
- ▷ To open and close the window, open or close all catch levers which are fitted to the window.



- ▷ When leaving the vehicle, always close the windows.
- In extreme weather conditions or if the temperature fluctuates strongly, a light condensation film can form on the double-glazed acrylic glass. The glass is designed in such a way that condensation can evaporate when the external temperature increases. There is no danger of the double-glazed acrylic glass being damaged by condensation.



Hinged window with rotary hinges



When opening the hinged windows, ensure that there are no torsional forces. Open and close the hinged windows evenly.



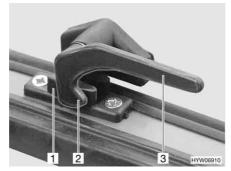




Fig. 45 Catch lever in "closed" position

Fig. 46 Hinged window with rotary hinges, open

- *Opening:* Turn the catch lever (Fig. 45,3) a quarter turn towards the centre of the window.
 - Open the hinged window until the required position has been reached and use knurled knob (Fig. 46,1) to secure in position.

The hinged window remains locked in the required position.

- Closing: Turn knurled knob (Fig. 46,1) until the latch is released.
 - Close the hinged window.
 - Turn the catch lever (Fig. 45,3) a quarter turn towards the window frame. The locking catch (Fig. 45,2) is located on the inside of the window catch (Fig. 45,1).

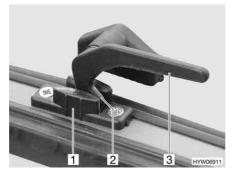


Fig. 47 Catch lever in the "continuous ventilation" position

Continuous ventilation With the catch lever, the hinged window can be placed in 2 positions:

- "Continuous ventilation" (Fig. 47)
- Firmly closed (Fig. 45)

To place the hinged window into the "continuous ventilation" position:

- Turn the catch lever (Fig. 47,3) a quarter turn towards the centre of the window.
- Lightly open the hinged window outwards.
- Return the catch lever to its initial position. The locking catch (Fig. 47,2) has to be moved into the recess of window catch (Fig. 47,1).

During the journey, the hinged window may not be in "continuous ventilation" position.

If it rains, the "continuous ventilation" hinged window position could lead to splashing water penetrating the living area. Therefore, close the hinged windows completely.

6.8.2 Hinged window with automatic hinges



ürstner

- Open the window completely, to release the lock. If the locking device is not released and the window is closed nevertheless, there is the danger of the window breaking due to the massive counter-pressure.
- ▷ When opening the hinged windows, ensure that there are no torsional forces. Open and close the hinged windows evenly.

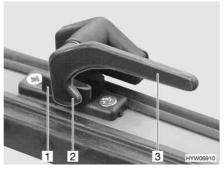




Fig. 48 Catch lever in "closed" position

Fig. 49 Hinged window with automatic hinges, open

Opening:

- Turn the catch lever (Fig. 48,3) a quarter turn towards the centre of the window.
- Open the hinged window to the desired latched position. The automatic hinge (Fig. 49,1) locks in place automatically.

The hinged window remains locked in the required position.

- *Closing:* Open the hinged window as wide as necessary until the latch releases.
 - Close the hinged window.
 - Turn the catch lever (Fig. 48,3) a quarter turn towards the window frame. The locking catch (Fig. 48,2) is located on the inside of the window catch (Fig. 48,1).

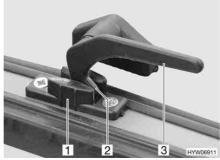


Fig. 50 Catch lever in the "continuous ventilation" position

Continuous ventilation

With the catch lever, the hinged window can be placed in two positions:

- "Continuous ventilation" (Fig. 50)
- Firmly closed (Fig. 48).



To place the hinged window into the "continuous ventilation" position:

- Turn the catch lever (Fig. 50,3) a quarter turn towards the centre of the window.
- Slightly open the hinged window outwards.
- Turn the catch lever a quarter turn towards the window frame. The locking catch (Fig. 50,2) has to be moved into the recess of window catch (Fig. 50,1).

During the journey, the hinged window may not be in "continuous ventilation" position.

If it rains, the "continuous ventilation" hinged window position could lead to splashing water penetrating the living area. Therefore, close the hinged windows completely.

6.8.3 Blind and insect screen



▷ Open blinds before commencing the journey. When the blinds are closed, vibrations can damage the spring shaft.



Depending on the window size, the blinds are fitted with one or two handles.

The windows are fitted with a blind and an insect screen. The blind and insect screen are adjusted separately.



Fig. 51 Hinged window

- Blind The blind is located in the upper blind box.
- *Closing:* Pull blind at the handle (Fig. 51,2) downwards. If the blind is to be completely closed, it is suspended into the locking devices (Fig. 51,3) situated on both sides of the window frame.
- *Opening:* If the blind is completely closed: Press handle (Fig. 51,2) downwards and, at the same time, tilt it slightly inward. The blind can be taken out of the locking devices situated on both sides of the window frame.
 - If the blind is in an intermediate position: Pull the handle (Fig. 51,2) slightly downwards until the locking device releases.
 - Use handle to return blind slowly to its initial position.

bürstner

Insect screen The insect screen is located in the upper blind box.

Closing: Pull insect screen at the handle (Fig. 51,1) down and hang it into the locking devices (Fig. 51,3) situated on both sides of the window frame.

Opening:

- Press handle (Fig. 51,1) downwards and, at the same time, tilt it slightly inward. The insect screen can be taken out of the locking devices situated on both sides of the window frame.
 - Use handle to return the insect screen slowly to its initial position.

6.8.4 Roman shade and insect screen (special equipment)

The windows are fitted with a Roman shade and an insect screen. The insect screen can only be operated together with the roman shade.

6	1		
	I		-
			1 1
	ê pî		W
	4	3 2 80	E01075

Fig. 52 Hinged window

Roman shade	The Roman shade is located in the upper blind box.
Closing:	Grip the Roman shade (Fig. 52,1) using the holding bar (Fig. 52,2), pull it from the bottom to the top and then release it at the desired height. The Roman shade will stay at this height.

Opening: Grip the Roman shade in the middle of the holding bar and push it up.

Insect screen The insect screen is located in the bottom blind box.

- *Closing:* Pull the insect screen (Fig. 52,3) upwards using the handle (Fig. 52,4) until it pushes against the Roman shade (Fig. 52,1).
 - Lock the insect screen in position with the Roman shade.

Opening:

- Tilt the handle (Fig. 52,4) attached to the insect screen.
- Use handle to return the insect screen slowly to its initial position.

6.9 Skylights

Depending on the model, skylights with or without forced ventilation are fitted to the vehicle. If a skylight is fitted without forced ventilation, the forced ventilation is performed using mushroom-shaped vents.



The apertures for forced ventilation must always be kept open. Never cover or block forced ventilations with objects such as e.g. a winter mat. Keep forced ventilations clear of snow and leaves.






- The skylights are fitted with a blind or Roman shade and with an insect \triangleright screen or folding insect screen. After the latch has been released, the blind and insect screen automatically spring back to the initial position by tensile force. In order not to damage the tension mechanics, hold onto the blind or insect screen and allow it to slowly return to the initial position. The Roman shade and folding insect screen are made of thin woven fabric. In order not to damage the Roman shade or the insect screen, grasp the respective handle and carefully return it to the initial position.
- ▷ Do not keep blinds closed over a longer period of time as that can cause increased material wear.
- ▷ If the blind or the Roman shade is completely closed, exposure to direct sunlight can cause heat to accumulate between the blind/the Roman shade and the skylight. The skylight could be damaged. For that reason, close the blind/Roman shade only 2/3 of the way in direct sunlight. Open the skylight slightly or move it to ventilation position.
- > Depending on the weather, close the skylights far enough to prevent moisture from entering.
- \triangleright Do not climb on the skylights.
- ▷ Before commencing the journey, close the skylights.
- > Before commencing the journey, check that the skylights are closed and locked.



▷ When leaving the vehicle, always close the skylights.

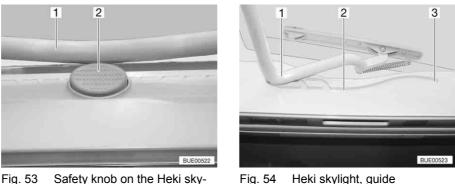

6.9.1 Heki skylight (mini and midi) (partially special equipment)

light

Heki skylight, guide

The Heki skylight is opened on one side only.

Opening: Press the safety knob (Fig. 53,2) and pull the bar (Fig. 53,1) down with both hands.


Use both hands to push the bar (Fig. 54,1) slightly upwards.

Pull the bar (Fig. 54,1) in the guides (Fig. 54,2) to the rearmost position (Fig. 54,3).

Closing:

- Push the bar back in the guides.
 - Push the bar upwards with both hands until it is above the safety knob (Fig. 53,2).



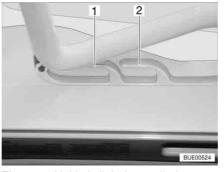

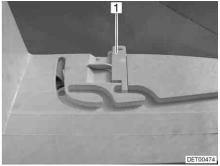


Fig. 55 Heki skylight in ventilation position

Fig. 56 Ventilation position locking mechanism

Ventilation position The Heki skylight can be put in two ventilation positions: Bad weather position (Fig. 55,1) and central position (Fig. 55,2). Depending on the model, the skylight can be locked in the central position with the latch (Fig. 56,1).

- Press the safety knob (Fig. 53,2) and pull the bar (Fig. 53,1) down with both hands.
- Pull the bar in the guides (Fig. 54,2) to the desired position.
- Push the bar slightly upwards and into the selected guide (Fig. 55,1 or 2) and lock if necessary.

Roman shade To close and open the Roman shade:

- *Closing:* Pull out Roman shade at the handle and release in the required position. The Roman shade will stay in that position.
- *Opening:* Slowly push the Roman shade at the handle to its initial position.
- **Insect screen** To close and open the insect screen:
 - *Closing:* Pull the insect screen by the handle to the opposite handle of the Roman shade.

Opening: Press the rear part of the handle of the insect screen. The latch is released.

■ Use handle to return the insect screen slowly to its initial position.

6.9.2 Heki skylight (partially special equipment)

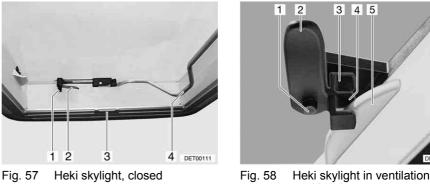


Fig. 58 Heki skylight in ventilation position 1

The Heki skylight may be opened on one side only.



- *Opening:* Press the safety knob (Fig. 57,1) and turn the catch lever (Fig. 57,2) one quarter turn inward.
 - Pull the bar (Fig. 57,4) downwards out of the latch.
 - Press the Heki skylight upwards using the bar.
 - Press the bar back into the latch.

Closing: ■ Pull the bar (Fig. 57,4) downwards out of the latch.

- Pull the Heki skylight downward using the bar.
- Turn the catch lever (Fig. 57,2 and Fig. 58,2) one quarter turn. The hook of the roof lock (Fig. 58,5) must engage in the upper locking fork (Fig. 58,3).
- Press the bar back into the latch.

Ventilation position (variant 1):

- Open Heki skylight and push lightly outwards.
- Press the safety knob (Fig. 58,1) and turn the catch lever (Fig. 58,2) back. The hook of the roof lock (Fig. 58,5) must engage in the lower locking fork (Fig. 58,4).
- Press the bar back into the latch.



Fig. 59 Heki skylight in ventilation position 2

- Ventilation position (variant 2):
- Open Heki skylight.
- Insert the bar (Fig. 59,3) into the holder (Fig. 59,1).
- Place the lever (Fig. 59,2) over the bar.

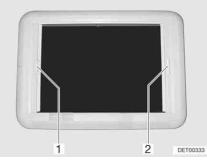


Fig. 60 Heki skylight, blind lock

- Blind To close and open the blind:
- *Closing:* Pull blind at the handle (Fig. 60,2) to the opposite handle of the insect screen (Fig. 60,1) and allow to engage.



Opening:	Hold the blind screen by the handle with one hand.
----------	--


- With your other hand, push the unlocking bar on the handle of the insect screen (Fig. 60,1) towards the handle. The lock is released.
- Use handle to return the blind slowly to its initial position.

Insect screen To close and open the insect screen:

- *Closing:* Pull insect screen at the handle (Fig. 60,1) to the opposite handle of the blind (Fig. 60,2) and allow to engage.
- *Opening:* Hold the insect screen (Fig. 60,1) by the handle and push the unlocking bar towards the handle. The lock is released.
 - Use handle to return the insect screen slowly to its initial position.

6.10 Tables

6.10.1 Suspension table with folding leg

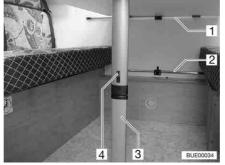

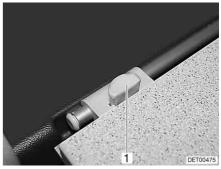


Fig. 61 Suspension table with folding leg

Fig. 62 Table-top lock (variant)

The suspension table may also be used as a bed foundation.

Conversion to bed foundation:

- Slightly lift the front of the table-top.
- Move the locking device (Fig. 61,4) toward the table-top.
- Fold the lower section of the foot (Fig. 61,3) under by 90°.
- When there is a lock: Press the release knob (Fig. 62,1) on the lock of the table top.
- Detach the suspension table from the upper attachment rail (Fig. 61,1).
- Attach the suspension table to the lower attachment rail (Fig. 61,2) and rest it onto the table leg hinge.
- When there is a lock: Lock the table top.

6.10.2 Lift-off table, rotatable

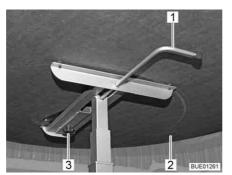


Fig. 63 Lift-off table, rotatable

The top of the lift-off table can be rotated.

Rotating table-top: Loosen knurled screw (Fig. 63,3).

- Rotate table-top (Fig. 63,2) to the required position.
- Retighten the knurled screw.

The table's lifting mechanism enables it to be also used as a bed foundation.

- *Conversion to bed foundation:* Swivel the catch lever (Fig. 63,1) to the left. The lock of the lifting mechanism is open.
 - Press table-top (Fig. 63,2) in the middle down to the stop limit and hold it down.
 - Swivel the catch lever (Fig. 63,1) to the right (Fig. 63). The lifting mechanism is locked.
- *Conversion to table:* Swivel the catch lever (Fig. 63,1) to the left. The lock of the lifting mechanism is open. The table-top moves upwards to the limit stop.
 - Swivel the catch lever to the right (Fig. 63). The lifting mechanism is locked.

6.11 Beds

6.11.1 Bunk bed



- Only use the upper bunk bed if the safety guard is fitted.
- ▶ The maximum permitted bunk bed load is 100 kg.
- ► The upper bunk bed must not be used by children under 6 years of age.
- ▶ Never allow small children to remain in the bunk bed without supervision.
- But in particular with regard to small children less than 6 years of age, users should ensure that they cannot fall out of the bunk bed.
- ▶ Use separate children's beds or travel cots suitable for children.

Depending on the model, the vehicle is fitted with a bunk bed. The bunk bed can be used immediately, without additional conversion.

Always use the access ladder provided to climb up to the top bed.

6.11.2 Fixed bed (manual setup)



▶ Do not let the slatted frame fall down when closing the bed!

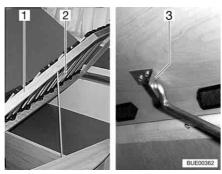


Fig. 64 Fixed bed

The bedding box is located underneath the bed. The bedding box may be used to store bedding.

Fold up the slatted frame to place items in the bedding box or to empty it. Depending on the model, a rail has been fitted to the slatted frame to set it up.

- *Opening:* Lift the slatted frame (Fig. 64,1), release the rail (Fig. 64,2) from its bracing and insert into the cavity in the holder (Fig. 64,3).
- Closing:
 - Lift the slatted frame (Fig. 64,1), release the rail (Fig. 64,2) from the holder (Fig. 64,3) and clamp into the bracing.
 - Carefully let go of the slatted frame.
- 6.11.3 Fixed bed (gas-pressure springs)

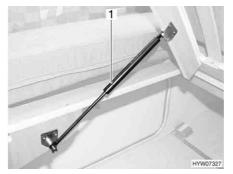


Fig. 65 Fixed bed

A storage compartment is underneath the bed. Lift up the slatted frame to place items in the storage compartment or to empty it from the inside of the vehicle.

Opening:

- Lift the mattress forwards and set it down on the panel.
- Lift slatted frame. The gas-pressure springs (Fig. 65,1) hold the slatted frame open.



- *Closing:* Press the slatted frame downwards against the resistance of the gas-pressure springs.
 - If necessary, push the mattress behind the panel.

6.11.4 Fixed bed (adjustable head section)



► Do not let the slatted frame fall down when closing the bed!



Fig. 66 Adjustable head section

Depending on the configuration, the head section of the slatted frame can be adjusted in several stages.


Raising the head section: Raise the head section (Fig. 66,2) of the slatted frame to the desired position. The support (Fig. 66,1) locks automatically into place.

The head section remains locked in the required position.

- Lowering the head section:
- Raise the head section (Fig. 66,2) of the slatted frame until the lock is released.
- Guide the head section downwards slowly.



6.11.5 Widening single beds (special equipment)

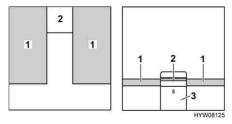

- 1 Mattress
- 2 Bedside locker cover
- 3 Bedside locker extension
- 4 Slatted frame
- 5 Additional cushion
- 6 Additional cushion

Fig. 67 Prior to conversion

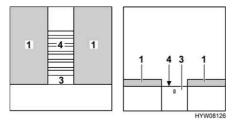


Fig. 68 During conversion

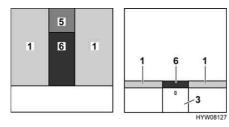


Fig. 69 After conversion

- Remove the bedside locker cover (Fig. 67,2) and put it to one side.
- Pull out slatted frame (Fig. 68,4) completely. To do this, pull on the extension (Fig. 68,3).
- Place the additional cushion (Fig. 69,5) on the bedside locker.
- Place the additional cushion (Fig. 69,6) between the mattresses (Fig. 69,1).



6.12 Converting seating groups for sleeping

6.12.1 Bench and central seating group without additional cushion

1 2

3

Back cushion

Seat cushion

Table

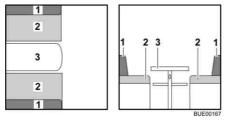


Fig. 70 Prior to conversion

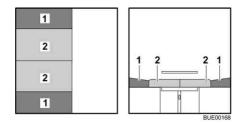


Fig. 71 After conversion


- Convert the table (Fig. 70,3) to a bed foundation (see section 6.10).
- Pull the seat cushions (Fig. 71,2) into the centre.
- Insert the back cushions (Fig. 71,1) between the seat cushions and the wall.



6.12.2 Round seating group with square table



> Depending on the model, the seating group can be different in shape and position to the one shown here.

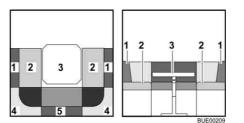

- Back cushion 1
- 2 3 Seat cushion
- Table
- 4 Back cushion
- 5 Back cushion
- 6 Additional cushion (basic or foldable)

Fig. 72 Prior to conversion

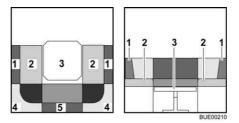


Fig. 73 During conversion

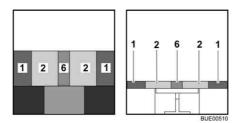


Fig. 74 After conversion

- Convert the table (Fig. 72,3) to a bed foundation (see section 6.10).
- Remove the back cushions (Fig. 73,4 and 5) and lay them aside.
- Pull the seat cushions (Fig. 73,2) into the centre of the table.
- Insert the back cushions (Fig. 73,1) between the seat cushions and the exterior wall. Observe the wedged form.
- Place the additional cushion (Fig. 74,6) between the seat cushions.



6.12.3 Round seating group without additional cushion



▷ Depending on the model, the seating group can be different in shape and position to the one shown here.

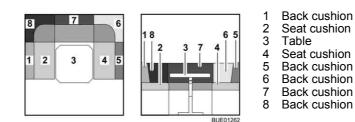


Fig. 75 Prior to conversion

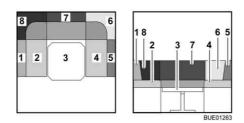


Fig. 76 During conversion

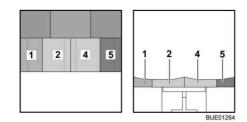


Fig. 77 After conversion


- Convert the table (Fig. 75,3) to a bed foundation (see section 6.10).
- Remove the back cushions (Fig. 76,6, 7 and 8) and lay them aside.
- Pull the seat cushions (Fig. 76,2 and 4) into the centre of the table.
- Insert the back cushions (Fig. 77,1 and 5) between the seat cushions and the exterior wall. Observe the wedged form.



6.12.4 Round seating group with additional cushion (foldable)



> Depending on the model, the seating group can be different in shape and position to the one shown here.

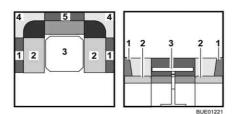

- Back cushion 1
- 2 3 Seat cushion Table
- 4 Back cushion 5 Back cushion
- 6 Additional cushion (foldable)

Fig. 78 Prior to conversion

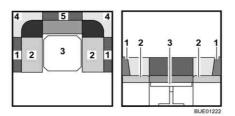


Fig. 79 During conversion



Fig. 80 After conversion

- Convert the table (Fig. 78,3) to a bed foundation (see section 6.10).
- Remove all back cushions (Fig. 79,1, 4 and 5) and lay them aside.
- Unfold the additional cushion (Fig. 80,6) and lay it between the seat cush-ions (Fig. 80,2).



6.12.5 Rear seating group

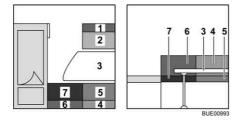


Fig. 81 Prior to conversion

 $\begin{array}{c}
1 \\
2 \\
3 \\
7 \\
5 \\
6 \\
4
\end{array}$

Fig. 82 During conversion

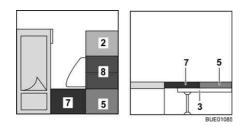


Fig. 83 After conversion

■ Convert the table (Fig. 81,3) to a bed foundation (see section 6.10).

1 2

345 678 Back cushion Seat cushion

Back cushion Seat cushion

Back cushion Seat cushion

Additional cushion (foldable)

Table

- Remove the back cushions (Fig. 82,1, 4 and 6) and lay them aside.
- Place the additional cushion (Fig. 83,8) between the seat cushions.



Chapter overview

This chapter contains instructions regarding the gas system of the vehicle. The instructions address the following topics:

- safety
- changing the gas bottles
- gas isolator taps
- external gas connection
- automatic switching facility
- the gas alarm system

The operation of the gas operation appliances of the vehicle is described in chapter 9.

7.1 General



- Before commencing the journey, when leaving the vehicle or when gas equipment is not in use, close all gas isolator taps and the main isolator tap on the gas bottle.
- No appliance operated by a naked flame (e.g. heater or refrigerator) may be in operation when filling the tank, on ferries or in the garage. Danger of explosion!
- Do not use appliances operated with a naked flame in closed spaces (e.g. garages). Danger of poisoning and suffocation!
- Only have the gas system maintained, repaired or altered by an authorised specialist workshop.
- Have the gas system checked by an authorised specialist workshop according to the national regulations before commissioning. This also applies for not registered vehicles. For modifications to the gas system have the gas system immediately checked by an authorised specialist workshop.
- The gas pressure regulator and exhaust gas pipes must also be inspected. The gas pressure regulator has to be replaced after 10 years at the latest. The vehicle owner is responsible for seeing that this is carried out.
- In case of a defect of the gas system (gas odour, high gas consumption) there is danger of explosion! Close regulator tap on the gas bottle immediately. Open doors and windows and ventilate well.
- If the gas system is defective: Do not smoke; do not ignite any open flames, and do not operate electric switches (light switches etc.).
- Before using the cooker make sure that there is sufficient ventilation. Open windows or the skylight.
- ▶ Do not use the gas cooker or gas oven for heating purposes.
- If there are several gas devices, each gas device must have its own gas isolator tap. If individual gas devices are not in use, close the respective gas isolator tap.
- Ignition safety valves must close within 1 minute after the gas flame has extinguished. A clicking sound is audible. Check function from time to time.
- The built-in gas devices are exclusively meant for use with propane or butane gas or a mixture of both. The gas pressure regulator as well as all built-in gas devices are designed for a gas pressure of 30 mbar.





- Propane gas is capable of gasification up to -42 °C, whereas butane gas gasifies at 0 °C. Below these temperatures no gas pressure is available. Butane gas is unsuitable for use in winter.
- Regularly inspect the gas tube fitted to the gas bottle connection for tightness. The gas tube must not have any tears and must not be porous. Have the gas tube replaced by an authorised specialist workshop no later than ten years after the manufacturing date. The operator of the gas system must see to it that the parts are replaced.
- Due to its function and construction, the gas bottle compartment is a space which is open to the exterior. Never cover or block up the standard forced ventilations. Otherwise gas that is emitted can not be diverted to the outside.
- Do not use the gas bottle compartment as storage space as it is not moisture-proof.
- Secure the gas bottle compartment against unauthorised access. To do this, lock the compartment.
- ▶ The regulator tap on the gas bottle must be accessible.
- Only connect gas-operated devices (e.g. gas grill) which have been designed for a gas pressure of 30 mbar.
- The exhaust gas pipe must be fitted tightly to the heating system and to the vent and must be sealed. The exhaust gas pipe must not show any evidence of damage.
- ► Exhaust fumes must be able to escape into the atmosphere unhindered and fresh air must be able to enter unhindered. For this reason, keep the exhaust pipe and intake openings clean and unobstructed (e.g. free from snow and ice). For this reason, no snow walls or aprons may lie against the vehicle.

7.2 Gas bottles



- Gas bottles are only to be transported within the designated gas bottle compartment.
- Place the gas bottles in vertical position in the gas bottle compartment.
- Fasten the gas bottles so that they are unable to turn or tilt.
- If the gas bottles are not connected to the gas tube, always place the protective cap on top.
- Close the regulator tap on the gas bottle before the gas pressure regulator or gas tube are removed from the gas bottle.
- Use your hands only to connect the gas pressure regulator or the gas tube to the gas bottles. Do not use any tools.
- Only use special gas pressure regulators with a safety valve designed for vehicle use. Other gas pressure regulators are not permitted and cannot meet the demanding requirements.
- Use the gas pressure regulator defroster if the temperature falls below 5 °C.
- Use only 11 kg or 5 kg gas bottles. Camping gas bottles with built-in check valve (blue bottle with max. 2.5 or 3 kg content) are can be used in exceptional cases with a safety valve.



- Use the shortest possible tube lengths (150 cm max.) for external gas bottles.
- ▶ Never block the floor ventilation openings below the gas bottles.



- \triangleright For gas-operated units the gas pressure must be reduced to 30 mbar.
- Connect gas pressure regulator complete with safety valve directly to bottle valve.

The gas pressure regulator reduces the gas pressure in the gas bottle down to the operating pressure of the gas devices.

- ▷ For filling and connecting the gas bottles in Europe the accessories shops have corresponding Euro filling sets and Euro bottle sets.
- > Information available at the dealers or service centre.
- \triangleright For information on the gas supply in Europe see chapter 17.

7.3 Changing gas bottles



- When changing gas bottles, do not smoke or create any open fire.
- When you have changed the gas bottle, check whether gas escapes at the connection points and unions. Use a leakage search spray to spray the relevant connection point or union. These agents are available at the accessories shop.

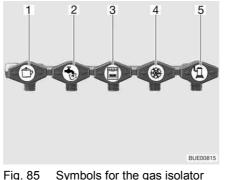


Fig. 84 Gas bottle compartment

- Open external gas bottle compartment (see chapter 6).
- Close the regulator tap (Fig. 84,1) on the gas bottle (Fig. 84,2). Pay attention to the direction of the arrow.
- Unscrew the gas tube (Fig. 84,3) by hand from the gas bottle.
- Release the fixing belts and remove the gas bottle.
- Place a filled gas bottle in the gas bottle compartment.
- Fix gas bottle in place with the fixing belts.
- Screw gas tube on gas bottle by hand.



7.4 Gas isolator taps



Cooker

- 2 Boiler (special equipment)
- 3 Oven (special equipment) 4
- Refrigerator 5 Heater
- Symbols for the gas isolator taps

A gas isolator tap (Fig. 85) for every gas device is built into the vehicle. The gas isolator taps are located behind a flap in the kitchen area.

7.5 External gas connection (special equipment)



- If the external gas connection is not in use, always close the gas isolator tap.
- Only gas appliances with a suitable adapter should be connected to the external gas connection.
- Connect only external gas appliances which are designed for an operation pressure of 30 mbar.
- Once you have made the connection and opened the gas isolator tap, make sure that no gas is escaping at the connection point. If there is a leak in the external gas connection, gas will escape into the open air. Immediately close the gas isolator tap and the regulator tap on the gas bottle. Have the external gas connection checked by an authorised specialist workshop.
- ▶ When connecting an external gas appliance, make sure that there is nothing near the external gas connection that could cause a spark.
- Do not use the external gas connection to fill gas bottles. Observe the information stickers on the external gas connection.

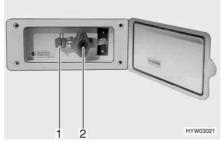


Fig. 86 External gas connection, gas isolator tap closed

The external gas connection (Fig. 86) is located at the rear or to the left or right of the vehicle depending on the model.



- Connect the external gas device to the connection point (Fig. 86,1).
- Open the gas isolator tap (Fig. 86,2).


7.6 **DuoControl switching facility (special equipment)**

- \land
- Do not use the switching facility in closed spaces.



 \triangleright Also read the manufacturer's instruction manual.

The DuoControl is an automatic switching facility with a remote display for a two-bottle gas system. The DuoControl switching facility automatically switches gas supply from the primary bottle to the reserve bottle as soon as the primary bottle is either empty or no longer ready for operation. The gas appliances may still continue operation. The DuoControl switching facility is suitable for all commercial gas bottles from 3 kg to 33 kg.

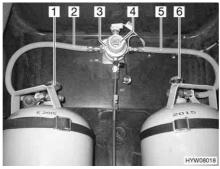

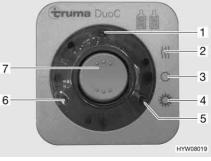


Fig. 87 DuoControl switching facility

Fig. 88 Operating unit

Construction of the unit The DuoControl switching facility consists of a reversing valve (Fig. 87,3) and an operating unit (Fig. 88). The reversing valve is installed between the gas tubes (Fig. 87,2 and 5). The knob (Fig. 87,4) on the reversing valve is used to select which of the gas bottles is to be used as a primary bottle and which is to be used as a reserve bottle.

The reversing valve is equipped with the regulator defroster Eis-Ex. This prevents damage to the gas system during the winter months.

Only the electrical functions can be switched at the operating unit (Fig. 88). The regulator taps on the gas bottles (Fig. 87,1 and 6) must be opened manually.

The reversing valve provides a constant gas pressure, regardless of which gas bottle is being drawn upon. The two indicator lamps on the operating unit indicate the level of the primary bottle. When the green indicator lamp (Fig. 88,6) illuminates, the primary bottle is full. When the red indicator lamp (Fig. 88,5) illuminates, the primary bottle is empty. In this case, the reserve bottle is used for the gas supply.

Operating modes

The DuoControl switching facility has two operating modes:

- Winter operation "On and heating"
- Summer operation "On"



Putting into operation:	 Open the regulator taps on the gas bottles (Fig. 87,1 and 6). Use the knob (Fig. 87,4) on the reversing valve (Fig. 87,3) to select the gas bottle which is to be the primary source of gas (primary bottle). Always turn the knob as far as it will go. Switch on the DuoControl switching facility at the operating unit (Fig. 88). To do so, set the rocker switch (Fig. 88,7) to winter operation "On and heating" (Fig. 88,2) or to summer operation "On" (Fig. 88,4). The reversing valve is now deaerated. The yellow indicator lamp (Fig. 88,1) illuminates if the winter operation has been selected and the regulator defroster is activated. 	
Switching off:	 vated. Set the rocker switch (Fig. 88,7) to "O" (Fig. 88,3). The yellow indicator lamp (Fig. 88,1) goes out. Close the regulator taps on the gas bottles (Fig. 87,1 and 6). 	
Remote display	The indicator lamps on the operating unit (Fig. 88,5 and 6) indicate in the vehicle interior whether the primary bottle is ready for operation.	
Changing gas bottles	ottles If the green indicator lamp (Fig. 88,6) stops illuminating during operation the red indicator lamp (Fig. 88,5) illuminates, the gas bottle selected as p mary bottle is empty and needs to be changed. The reserve bottle contin supplying the gas appliances with gas.	
\bigwedge	When changing gas bottles, do not smoke or create any open fire.	

Changing gas bottles:

- Close the regulator tap on the empty gas bottle.
- Unscrew the gas tube of the gas bottle.
- Connect the full gas bottle to the gas tube.
- Open the regulator tap on the gas bottle.
- Set the knob on the reversing valve with a half-turn, so that the newly replaced gas bottle will serve as a reserve bottle.

A

7.7

- ▷ If the gas sensor or a cable is defective, the buzzer sounds until the defect has been rectified.
- If a deodorant spray, hairspray or a powerful cleaning agent is used in the immediate vicinity of the gas sensor, a false alarm may be triggered. Extended time in a tunnel (traffic jam) may also trigger a false alarm.
- ▷ Also read the manufacturer's instruction manual.

Gas alarm system (special equipment)

The gas alarm system has two functions:

- Alarm in the case of an attack with narcotic gas
- Alarm if there is a leak in the gas system

The gas alarm system is ready for operation as soon as the 12 V power supply is supplied with power.





Fig. 89 Gas sensor

The flashing LED (Fig. 89,2) next to the terminal block of the gas sensor (Fig. 89,1) indicates readiness for operation.

- Switching off the buzzer:
- Briefly switch off the 12 V power supply and switch it on again (e.g. on the safety cut-out in the power pack).



bürstner

Chapter overview

This chapter contains instructions regarding the electrical system of the vehicle.

The instructions address the following topics:

- safety
- explanations of terms relating to the battery
- 12 V power supply
- power supply unit
- electric kit
- 230 V power supply
- connection to the 230 V power supply
- fuse rating
- towing vehicle connection
- external socket
- electrical wiring

The operation of the electrical appliances of the housing body is described in chapter 9.

8.1 General safety instructions



Only allow qualified personnel to work on the electrical system.

The vehicle is a safe place during a storm (Faraday cage). However, to protect the electrical devices, disconnect the 230 V connection and retract the antennae as a precaution.

8.2 Terms

Capacity Capacity refers to the amount of electricity which can be stored in a battery.

The capacity of a battery is given in ampere hours (Ah). The so-called K20 value is normally used.

The K20 value indicates how much current a battery is able to dispense over a time period of 20 hours without causing damage, or how much current is required to charge a flat battery within 20 hours.

For example, if a battery can dispense 4 amps for 20 hours, then it has a capacity of 4 A x 20 h = 80 Ah.

If more current flows, the capacity of the battery reduces proportionately.

External influences, such as temperature and age may alter the storage capacity of the battery. Capacity details refer to new batteries operating at room temperature.



12 V power supply

- If you use the battery of the towing vehicle to provide power for the caravan, bear in mind that the battery capacity is restricted. If you place too great a burden on the battery, this may lead to starting difficulties.
- Always disconnect the electrical connection between the towing vehicle and the caravan before the caravan is connected to the local power supply. In order to carry this out, disconnect the plug from towing vehicle socket.



When the caravan is not connected to the 230 V power supply, 12 V power supply is performed either by the starter battery of the connected towing vehicle or by the living area battery (electric kit).


The starter battery has a limited power supply only. For this reason, the electrical appliances should not be operated for a long time without using the 230 V power supply when the engine of the towing vehicle is switched off.

If the caravan is electrically connected to the towing vehicle and the vehicle engine is running, the living area battery is charged by the vehicle generator (electric kit).

8.4 Power supply unit CSV 400-1



Do not cover the ventilation slots on the power supply unit. Danger of overheating.

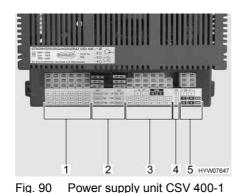

- 1 Connections: Consumer circuits 3 and 5 (awning light, TV), water pump
- Fuses (see table in section 8.7)
 Connections: Consumer circuits 1
- and 2, refrigerator control4 Connection: 12 V indicator (optional)
- 5 Connections: Towing vehicle connecting cable, refrigerator load circuit
- **Functions** The power supply unit distributes the current to the 12 V circuits and secures them.

If the vehicle is **not** connected to the 230 V supply, the requisite power supply is provided by the battery of the towing vehicle, as long as contact 9 "constant positive" is connected to the towing vehicle socket (see connection diagram at the end of this chapter). The 12 V living area lamps and the 12 V plug sockets can be used, with the exception of the TV output plug socket.

Devices with a maximum of 10 A can be connected to the sockets.

If the vehicle is connected to the 230 V power supply, the power supply unit switches the power supply in the living area automatically from the towing vehicle battery to mains operation. The internal power pack in the power supply unit provides 12 V plug sockets and 12 V appliances with power.



▷ The power supply unit is not used to charge the starter battery of the towing vehicle.

Position

The power supply unit (Fig. 90) is installed in the wardrobe.



Further information can be obtained in the manufacturer's instruction manual.



8.5 Electric kit (special equipment)

Scope The following components belong to the electric kit:

- Battery 12 V, 90 or 110 Ah
- Battery charging unit
- Panel
- Booster

The multi-function power supply (EVS) is a product of the most modern switched-mode power supply technology. This technology enables high output with low weight and small dimensions. By using top quality electronics, it works without almost any power loss. Automatic charging is performed in a protective manner, without a damaging overloading of the battery. This significantly increases battery life.

The EVS is equipped with a charging output for the living area battery. When in operation, the electronics regulator uses the B+ measurement connection to check:

- Terminal voltage of the battery
- Connection of the battery for the correct polarity

The EVS has been built for parallel operation and buffer operation. Appliances can stay continuously connected, switched on or disconnected. The appliances are supplied with power and the battery is charged at the same time.



▷ The current to the appliances must be smaller than the maximum charging current otherwise no charging of the battery will take place.

8.5.1 Appliance relay

The outputs of the appliances only conduct +12 V if the appliance relay has turned on. The appliance relay only turns on when the external main switch is closed. In order to achieve a greater operational comfort, the external main switch is fitted on a Calira operating panel or in a position of your choice in the caravan. The connection of the external main switch is described under "Connection" or "Connection diagram 2".

8.5.2 Voltage regulator

When the towing vehicle is in operation, the living area battery (battery II) in the caravan is charged by the starter battery (battery I) in conjunction with the alternator of the towing vehicle and the refrigerator is also supplied with electricity at the same time. In order for the living area battery to reach an ideal condition, a voltage of at least 14.2 V is necessary. This voltage is not available in the caravan in the event of power loss.

With an input voltage of between 10 and 15 V, the integrated voltage regulator regulates the output voltage so that the living area battery is supplied with 14.2 V. It equalises fluctuations of voltage such as power loss, and automatically switches the 12 V power supply to the refrigerator.



8.5.3 Charging procedure for the living area battery

Power operation If the mains connection has been made, the EVS works as a power supply during mains operation. The EVS has an electronic protection against incorrect polarity. The charging current is only supplied if the battery is correctly connected and a minimum voltage of 1.5 V is present. During the charging process, the battery voltage is monitored continuously using the B+ measurement connection.

Until a battery voltage is just under the gassing voltage, it is charged with the maximum constant current. After this, the EVS charges with continuously decreasing voltage until the gassing voltage is attained. The charging procedure is performed according to the charging characteristics under low power loss.

If the battery has attained its gassing voltage and the charging current has sunk to under a particular value, the EVS automatically switches to a float charge with a constant voltage of 13.8 V.

The main charging process begins anew, when the float charge current raises above 3 A.

Mobile operation In mobile operation, the EVS detects whether the alternator is running using the cable of contact 9 on the coupling plug. The voltage of the starter battery is determined using a comparative measurement. If the voltage of the starter battery is greater than 13 V, the voltage regulator continues to regulate the output voltage to the living area battery to 14.2 V and enables fridge operation. If the voltage of the starter battery falls below 13 V, the voltage regulator switches the living area battery and the refrigerator off. This prevents the starter battery from becoming completely discharged by the living area battery or the refrigerator.

The starter battery can still be used to start the vehicle.

Panel LT 232The 12 V power supply of the living area can be switched on and off and the
charging condition of the living area battery can be checked via the panel. The
"TANK" rocker switch and the associated LEDs have no function.



Fig. 91 Panel

- **12 V main switch** The 12 V main switch (Fig. 91,6) switches the 12 V power supply of the living area on and off.
 - Switching on: Push "12 V" rocker switch (Fig. 91,6) to the left: The 12 V living area power supply is switched on. The 12 V indicator lamp (Fig. 91,7) lights up in green.
 - *Switching off:* Push "12 V" rocker switch (Fig. 91,6) to the right "_O": The 12 V living area power supply is switched off. The 12 V indicator lamp (Fig. 91,7) goes off.





- ▷ When leaving the vehicle, switch off the main 12 V power supply from the panel. This prevents any unnecessary discharge of the living area battery.
- ▷ The power supply unit then only supplies a current, if the battery is connected and the battery voltage is not under 8 V.

Charging condition of the living area battery

Displays:

The "BATTERIE" (battery) rocker switch can be used in order to check the charging condition of the living area battery.

Press the left "BATTERY" rocker switch "I" (Fig. 91,5): This displays the charging condition of the living area battery.

The right half of the "BATTERIE" "II" rocker switch (Fig. 91,4) has no function.

After the rocker switch is pressed, either the red, yellow or green indicator lamps light up.

The red indicator lamp (Fig. 91,1) with the symbol "_____" is illuminated: The living area battery is discharged. Completely charge living area battery immediately.

The green indicator lamp (Fig. 91,3) with the symbol "**The living area battery is fully charged**.

Changing the battery



- The acid in the battery is poisonous and corrosive. Any contact with the skin or the eyes is to be avoided.
- In the event of contact with the skin or eyes, rinse immediately with clear water.
- Keep naked flames and possible sources of sparks away from the battery. Danger of explosion!



When replacing the battery, only use the same type of battery (same capacity and voltage, cycle stability).

Changing the battery:

- Release negative (-) terminal clamp.
- Release positive (+) terminal clamp.
- Remove the battery.
- Put in a new battery.
- Connect the new battery in the reverse order.



Connection diagram

8

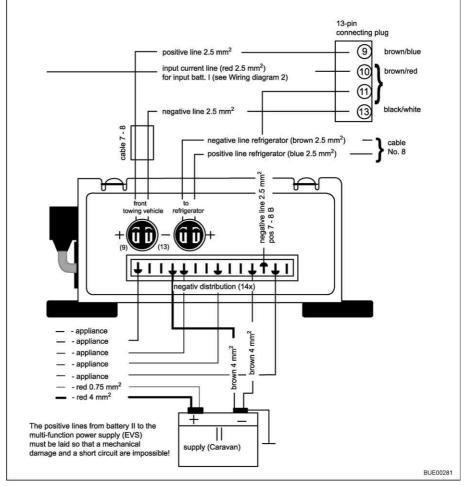


Fig. 92 Connection diagram 1

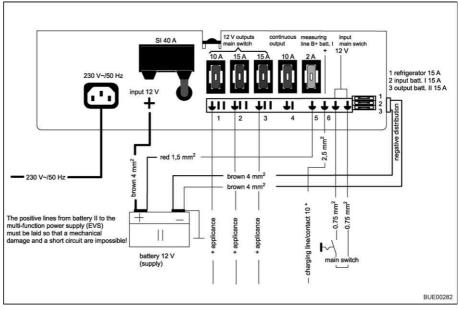


Fig. 93 Connection diagram 2



8.6 230 V power supply



Only allow qualified personnel to work on the electrical system.

The 230 V power supply provides electricity for:

- sockets with earth contact for appliances with maximum 16 A
- refrigerator
- power pack or power supply unit

The electrical appliances connected to the 12 V power supply of the living area are supplied with voltage by the power pack, power supply unit or living area battery (if available).

Connect the vehicle to an external 230 V power supply system as often as possible. If a living area battery is installed, this is automatically charged via a charger module.

8.6.1 230 V connection



The external 230 V power supply must be protected by fuse with a fault current protection switch (FI-switches, 30 mA).



Always disconnect the electrical connection between the towing vehicle and the caravan before the caravan is connected to the local power supply. In order to carry this out, disconnect the plug from towing vehicle socket.



- ▷ For the connection points on camp sites (camping distributors) highly sensitive fault current protection switches (FI-switches, 30 mA) are obligatory.
- The vehicle is already already equipped with a fault current protection switch (FI-switch).

The vehicle can be connected to an external 230 V power supply. The cable may have a length of maximum 25 m.



2 Power cable for external 230 V connection



Completely unwind the cable on cable drums to prevent overheating.


Power cable

- Three-core (3 x 2.5 mm²) flexible rubber sheathed cable
 Maximum 25 m in length
- 1 plug with earth contact
- 1 socket with earth contact (plug-in devices according to EN 60309)

Connection possibilities

For your power cable, we recommend using a CEE connection cable with a CEE plug and coupling. If this type of connection is not feasible, we recommend the following combination with a safety plug:



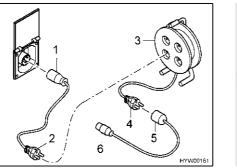

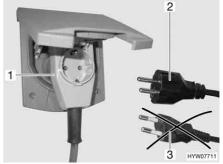


Fig. 94 Connection possibilities 230 V connection

Fig. 95 Connecting an angled connector with socket

- Adapter cable: CEE 17 socket with earth contact (Fig. 94,1) – plug with earth contact (Fig. 94,2)
- Cable reel: Socket with earth contact (Fig. 94,3) – plug with earth contact (Fig. 94,4)
- Adapter cable: CEE 17 socket with earth contact (Fig. 94,5) – plug with earth contact (Fig. 94,6)



When using a CEE 17 angled connector with rear socket (Fig. 95,1) only use a rubberised and sealed IP 44 socket with earth contact (Fig. 95,2). Do not use sockets without earth contact (Fig. 95,3). Danger of electrocution!

Depending on the design, the flap for the 230 V connection is designated with the symbol "**4**".

Connecting the power cable:

Swivel external flap upwards.Insert connector.



 $\,\triangleright\,\,$ Depending on the design, disconnect the connector before removing it.

8.7 Fuses




- Only replace defective fuses when the cause of the defect is known and has been remedied.
- ▶ Replace defective fuses only after the power supply has been turned off.
- ▶ Never bridge or repair fuses.
- Only replace faulty fuses with a new fuse with the same rating.

8.7.1 12 V fuses

The appliances connected to the 12 V power supply in the living area are fused individually. The fuses are accessible at the power supply unit or in a separate fuse holder close to the power supply unit.

- 1 Unbroken fuse element
- 2 Broken fuse element

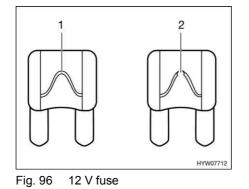

An intact 12 V fuse can be detected by the unbroken fuse element (Fig. 96,1). If the fuse element is broken (Fig. 96,2), change the fuse.

Before changing fuses, take the function, value and colour of the relevant fuses from the following specifications. When changing fuses, only use flat fuses with the values shown below.

Function	Value/colour
Circuit 1	15 A blue
Circuit 2	15 A blue
Circuit 3	15 A blue
Water pump	5 A light brown
Circuit 5 (TV, awning light)	7.5 A brown
Refrigerator control	2 A grey

Fuse for the refrigerator

Fuses on the power supply unit CSV 400-1

iirstner

The fuse is located in a fuse holder in the vicinity of the power supply unit unit.

• Type of fuse: Flat fuse 15 A/blue

Changing:

- Remove cover on the floor of the wardrobe.
- Replace fuse.
- Reattach cover once fuse has been replaced.

Fuse for the Thetford toilet (swivel toilet)

The fuse is located in the locker wall of the Thetford cassette.

1 Flat fuse 3 A/purple

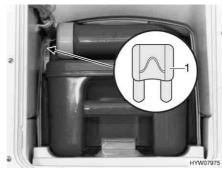


Fig. 97 Fuse for the Thetford toilet

- *Changing:* Open the flap for the Thetford cassette on the outside of the vehicle.
 - Pull out the Thetford cassette completely.
 - Replace fuse (Fig. 97,1).



Fuse for the Thetford toilet (fixed seat)

The fuse is located in the locker wall of the Thetford cassette.

1 Flat fuse 3 A/purple

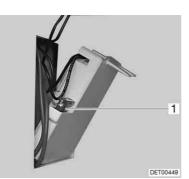


Fig. 98 Fuse for the Thetford toilet

Changing:

Remove the Thetford cassette and swing out the flap in the housing panel.

Open the flap for the Thetford cassette on the outside of the vehicle.

Replace fuse (Fig. 98,1).

8.7.2 230 V fuse



Check the fault current protection switch for each connection to the 230 V power supply, at least once every 6 months.



Fig. 99 230 V fuse box with safety cutout and FI-switch

A fault current protection switch (FI-switch) (Fig. 99,4) in the fuse box (Fig. 99,3) protects the complete vehicle from fault current (0.03 A).

The fuse box is installed close to the 230 V connection.

The downstream safety cut-out (10 A) (Fig. 99,2) secures the 230 V sockets, the power supply unit, the auxiliary charging unit and the refrigerator.

For vehicles with special equipment, e.g. air conditioning unit, an additional safety cut-out (16 A) (Fig. 99,1) secures the device.

Position

Checking fault current protection switch:

When the vehicle is connected to the 230 V power supply, press the test button (Fig. 99,5). The fault current protection switch (RCD) must be activated.



8.8 Thirteen-pin plug connection diagram



- Note the colours of the connecting cable of the socket which is fitted to the towing vehicle. This makes any new connection which may be necessary easier.
- ▷ To connect the thirteen-pin plug to a seven-pin socket, use a commercially available adaptor.

The following plugs are illustrated in the following:

- Plug variant 1 (left illustration)
- Plug variant 2 (right illustration)

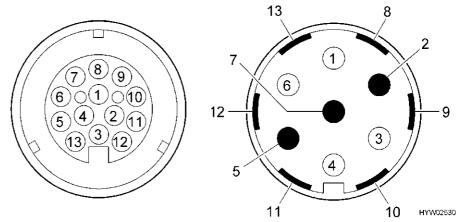


Fig. 100 Contact diagram of the thirteen-pin plug

Contact number	DIN- specifi- cation	Function	Cable colour	Cross section of the wire
1	L	Left direction indicator	Yellow	1.5 mm ²
2	54 G	Fog tail light	Grey	1.5 mm ²
3 ¹⁾	31	Earth (contacts 1, 2, 4 - 8)	White	2.5 mm ²
4	R	Right direction indicator	Green	1.5 mm ²
5	58 R	Right tail light, side marker light, clearance light, marker light, li- cence plate light	Brown	1.5 mm ²
6	54	Brake lights	Red	1.5 mm ²
7	58 L	Left tail light, side marker light, clearance light, marker light, li- cence plate light	Black	1.5 mm ²
8		Back-up light	Purple	1.5 mm ²
9		Constant positive	Blue	2.5 mm ²
10		Positive charging line	Orange	2.5 mm ²

Connection diagram



Contact number	DIN- specifi- cation	Function	Cable colour	Cross section of the wire
11		Earth charging line	Orange- white	2.5 mm ²
12		Not assigned	_	_
13 ¹⁾		Earth (contacts 9 - 12)	Blue- white	2.5 mm ²

¹⁾ These earth cables may not be connected to electrical conductors on the trailer side.

8.9 External socket (special equipment)

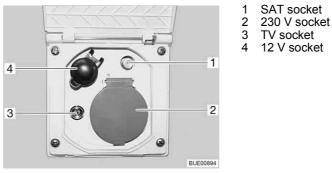
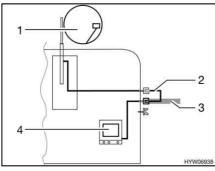


Fig. 101 External socket

The 230 V socket and the 12 V socket can be used to power electrical devices in the awning.

Connection possibilities

TV socket and SAT socket offer various possibilities for TV operation:



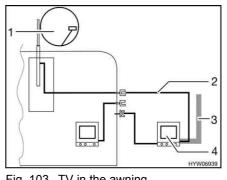


Fig. 102 TV inside the vehicle

Fig. 103 TV in the awning

- TV inside the vehicle (Fig. 102,4): Connection to roof antenna (Fig. 102,1) with connection cable (Fig. 102,2)
- TV inside the vehicle (Fig. 102,4): Connection to external antenna (Fig. 102,3)
- TV inside the awning (Fig. 103,4): Connection to roof antenna (Fig. 103,1) with connection cable (Fig. 103,2)
- TV inside the awning (Fig. 103,4): Connection to external antenna (Fig. 103,3)



8.10 **Circuit diagrams**

8.10.1 Circuit diagram, interior

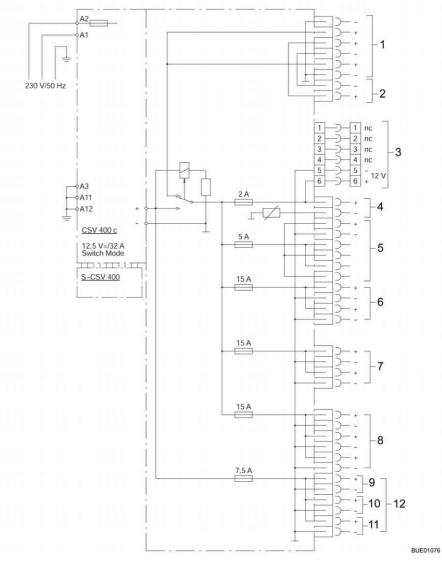


Fig. 104 Circuit diagram, interior

- Towing vehicle connecting cable (external fuse max. 15 A) Refrigerator 1
- 12 V indicator (panel)
- Refrigerator control Water pump
- 2345678
- Circuit 1 Circuit 2 Circuit 3
- 9 ΤV
- 10 Awning light
- 11 Spare
- 12 Circuit 5



8.10.2 Circuit diagram, exterior



▷ Cable installation can differ depending on the model.

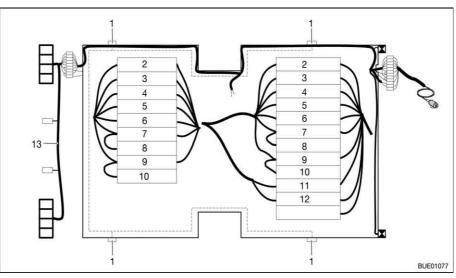


Fig. 105 Circuit diagram, exterior

- Side marking light (number depends on type) Left direction indicator (yellow) 1
- 2 3
- 4 5
- Fog tail light (grey) Earth 1 8 (white) Right direction indicator (green)
- 6
- Brake lights (red) Right tail light (brown) Right side marking lamps (brown) 7 8
- 9
- Left tail light (black) Left side marking lamps (black) 10
- 11 Constant positive (blue)
- 12 Earth 9 12 (blue-white)
- 13 Wiring harness, bumper (dependent on type)



Chapter overview

This chapter contains instructions regarding the appliances of the vehicle.

The instructions refer exclusively to the operation of the appliances.

Further information about the appliances can be found in the instruction manuals for the appliances, included separately with the vehicle.

The instructions address the following topics:

- heater
- air conditioning unit
- boiler
- gas cooker
- gas oven
- microwave oven
- extractor hood
- refrigerator

9.1 General



- The heat exchanger of the Truma hot-air heater has to be replaced after 30 years. The heat exchanger of the Alde hot-water heater has to be replaced after 10 years. Only the manufacturer of the heater or an authorised specialist workshop is allowed to replace the heat exchanger. The operator of the heater must see to it that the parts are replaced.
- For safety reasons, spare parts for pieces of heating appliances must correspond with manufacturer's instructions and be permitted by the manufacturer as a spare part. These spare parts may only be fitted by the manufacturer or an authorised specialist workshop.




▷ Further information can be obtained in the instruction manual for the respective appliance.

The heater, boiler, cooker and refrigerator are fitted depending on the model of the vehicle.

In this instruction manual a description is given only for the operation of the appliances and their particular features.

To operate gas appliances, first open the regulator tap on the gas bottle and the gas isolator tap corresponding to the appliance.

1

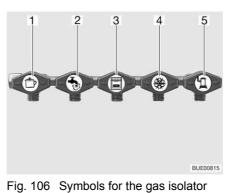

taps

- Cooker
- 2 Boiler (special equipment)
- 3 Oven (special equipment)
- 4 Refrigerator 5 Heater



9.2 Heater



- In winter, check that the waste gas vent on the vehicle roof is free of snow and ice before using the heater.
- ▶ Never let gas escape unburned due to danger of explosion.
- When filling the fuel tank of the towing vehicle, on ferries or in the garage, never run the heater in gas operation. Danger of explosion!
- Never operate the heater in gas operation in closed spaces (e.g. garages). Danger of poisoning and suffocation!
- ► If the circulation fan does not activate automatically, switch the circulation fan on from heating level 3 to 4. There is danger of overheating for the heater!
- ▶ Do not damage the exhaust gas pipe.
- ▶ The waste gas vent may neither be closed nor blocked.
- When camping in winter, the Truma waste gas vent extension should be used to prevent snow from choking the waste gas vent.
- ▶ Do not use the space behind the heater as a storage compartment.

When lighting the heater for the first time a small amount of smoke and odour will occur. Immediately set the operating switch of the heater to its highest position. Open doors and windows and ventilate well. Smoke and odour will disappear by themselves after a while.

9.2.1 Models with waste gas vent on the right-hand side of the vehicle



If the awning is put up and the heater is running in gas operation, exhaust gases from the heater can escape into the awning area. Danger of suffocation! Make sure the area is sufficiently ventilated.

9.2.2 To heat properly



Fig. 107 Air outlet nozzle

Hot air distribution Several air outlet nozzles (Fig. 107) are built into the vehicle. Pipes conduct the warm air to the air outlet nozzles. Turn the air outlet nozzles in a suitable position so the air can escape as required.



Adjusting the air outlet nozzles

- Fully open: Full hot air stream
- Half or partially open: Reduced hot air stream

When five air outlet nozzles are completely opened, less warm air escapes through each nozzle. However, if only three air outlet nozzles are opened, more warm air flows out of each nozzle.

9.2.3 Hot-air heater

In case of problems wait for two minutes before trying again.



Fig. 108 Heater control knob

Switching on:

- Open the regulator tap on the gas bottle and the gas isolator tap "Heater".
- Turn control knob on the heater to the required position and press it firmly. The automatic ignition produces ignition sparks. A clicking noise can be heard.
- Keep the control knob pressed until the flame burns. The burning of the flame can be checked in the inspection window in the heater cover.
- Hold the control knob down for a further 10 seconds, until the ignition fuse starts up.



- ▷ The automatic ignition sparks until the gas ignites. If there is no gas, it will continue to spark until the battery in the automatic ignition is empty. When the heater is not required, set the control knob to "0" to avoid the battery in the automatic ignition running flat.
- ▷ If the clicking noise cannot be heard at all or only in intervals of several seconds during ignition: Change the battery in the automatic ignition.
- ▷ Insert a new batteries before the start of every heating season.

Switching off:

- Turn the control knob on the heater to "0". The automatic ignition is switched off simultaneously.
- Close the gas isolator tap "Heater" and the regulator tap on the gas bottle.
- ▷ Further information can be obtained in the manufacturer's instruction manual.





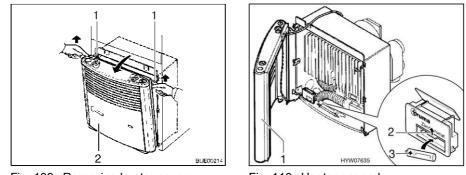


Fig. 109 Removing heater cover

Fig. 110 Heater opened

- Changing the battery on the automatic ignition:
- Make certain that the heater is switched off.
- Remove heater cover (Fig. 109,2). Pull the heater cover upwards and forwards, press up the retaining springs (Fig. 109,1) to the side and tip the cover forwards.
- Turn the cover (Fig. 110,1) to the side, so that the connecting cables for the hot-air fan as well as the ignition control lamp do not need to be disconnected.
- Push battery chamber cover on the automatic ignition (Fig. 110,2) upward.
- Remove the old battery out of the battery chamber of the automatic ignition.
- Insert a new battery (Fig. 110,3) of the same type, correctly aligned (+/-), into the battery chamber of the automatic ignition. Only use temperature resistant (+70 °C) and leak-proof Mignon batteries.
- Push battery chamber cover on the automatic ignition upward.
- Press the stop lever to the right, until the lock engages audibly.

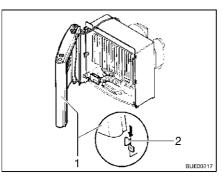


Fig. 111 Heater cover, retaining clips

- Mount the heater cover. To do this, place the cover (Fig. 111,1) on the lower retaining clips (Fig. 111,2).
- Insert the operating rod from underneath into the grip socket and allow the cover to catch in place above.

9.2.4 Circulation fan

The circulation fan together with the hot-air heater ensures a better distribution of hot air throughout the caravan.

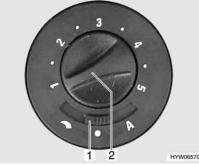


Fig. 112 Operating switch for circulation fan

Switching circulation fan on:

irstner

- Set sliding switch (Fig. 112,1) to "¬" (manual control) or "A" (automatic operation).
- Turn the knob (Fig. 112,2) to set (manual control) or limit (automatic operation) the power of the circulation fan.

Switching circulation fan off:



- Set sliding switch (Fig. 112,1) to "●" (off).
- ▷ Further information can be obtained in the manufacturer's instruction manual.

9.2.5 Airmix comfort package (special equipment)

The air circulation fan can be installed on the floor or on the wall with the Airmix comfort package. This guarantees a particularly quiet running, since no noise transferring connection is made to the fitted cover of the heater.

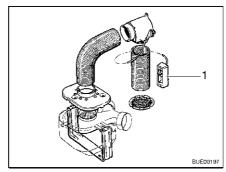


Fig. 113 Airmix comfort package

Fresh outside air is guided into the caravan by the Airmix. Advantages of outside air are:

- Cooling effect in the summer
- Drying effect in the winter

The outside air can be mixed progressively with the inside air that has already been heated by adjusting the operating controls (Fig. 113,1).



See installation instructions of the separate instruction manual for the Airmix comfort package.



9.2.6 Alde hot-water heater



- > Never run hot-water heater without heating fluid. Observe notes in chapter 12.
- ▷ Never drill holes in the floor. This might damage the hot-water pipes.




- \triangleright The circulating pump must always be turned on when the hot-water heater is in operation.
- ▷ We recommend to bleed the heating system after the initial heater operation and to check the glycol content. Observe notes in chapter 12.
- \triangleright When the heater is turned on, it starts with the last settings used.
- > For further information, see the separate manufacturer's instruction manual and observe the maintenance instructions found in chapter 12.

1

▷ For further information about the use of the boiler see section "Boiler".

Operating unit The operating unit is divided into two sections:

- Display (touch screen)
- Control buttons

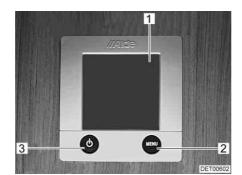

- Display (touch screen) "Menu" button
- 2 3 On/Off button

Fig. 114 Operating unit for hot-water heater



- > When no button is pressed, the operating unit automatically switches to home position after two minutes.
- ▷ Changes to the settings are saved automatically after 10 seconds.

Control buttons

The control buttons have the following functions:

Pos. in Fig. 114	Button	Function
2	MENU	Open adjustment menu
3	\bigcirc	Activate heating

Display The display (Fig. 114,1) is designed as a touch screen. Touching the symbols calls up the relevant function.

Start screen

The Start screen appears on the display after the heater is switched on. The Start screen contains the following information:

Symbol	Signification
\bigcirc	This symbol appears when the circulating pump is activated
	This symbol appears when a switching facility for gas cylinders is activated
đ	This symbol appears when a voltage of 230 V is present at the heater
⑪	The internal temperature is displayed next to this symbol
Ĝ۱	The external temperature is displayed next to this symbol if an external sensor is fitted

Adjustment menu The "MENU" button calls up the adjustment menu. The meanings of the individual symbols are described in the following table.

The values can be increased or reduced via the "+" or "-" symbols.

Symbol	Signification	
쉾	Set the desired temperature of +5 °C to +30 °C	
T T T T T	Set the water temperature in the boiler	
4	Set the heat output in electrical operation	
۵	Activate the function "Heating in gas operation"	
	Call up the enabling menu for the tool menus	

Tool menus The various heater functions can be called up and adjusted via the tool menus. The arrow symbols are used to change between the menus. The meanings of the individual symbols are described in the manufacturer's instruction manual.

The hot-water heater can be operated with the following energy sources:

- Gas operation
- 230 V electrical operation
- Gas and 230 V electrical operation

The operating mode is selected from the operating unit.

- Press the "On" button next to the "⁶ " symbol. The gas operation is activated.
- Press the "+" button next to the " f " symbol until the desired heat output is reached.
- Select the output level during 230 V electrical operation in such a way that it corresponds to the 230 V connection protection:
 Level 1 (1050 W) at 6 A
 Level 2 (2100 W) at 10 A

Level 3 (3150 W) at 16 A

Selecting gas and 230 V electrical operation:

Selecting the operating

Selecting gas operation:

Selecting 230 V electrical

mode

operation:

Select gas operation and 230 V electrical operation on the operating unit.



If gas and 230 V electrical operation is selected and if the vehicle is connected to the 230 V power supply, then the hot-water heater at first only operates in 230 V electric operation. Only if the heat output is insufficient does the gas operation also automatically switch on. ▷ The gas operation is only possible when the regulator tap on the gas bottle and the gas isolator tap are opened. ▷ 230 V electrical operation is only possible when the vehicle is connected to the 230 V power supply. When the heater is turned on, it starts with the last set operating mode. Switching on the heater: Press "(')" button. The Start screen appears in the display. The heater starts automatically. Switching the heater off: ■ Press "()" button. The heater is turned off. 9.2.7 Ultraheat additional electric heater (special equipment) The Ultraheat additional electric heater is built-in to the hot-air heater. Therefore there are three heating options: Only the hot-air heater Hot-air heater and electric heater Only the electric heater

The vehicle can be heated more quickly with the additional electric heater.



- The additional electric heater only operates if the vehicle is connected to the 230 V power supply.
- If the heater is operated by electricity and gas simultaneously, the additional electric heater switches off to prevent possible overheating by the stronger gas burner.

1 Rot 2 Off

3



Fig. 115 Operating unit for Ultraheat additional electric heater

- Switching on:
- Connect the vehicle to the 230 V power supply (see section 8.6).
- Turn the rotary switch (Fig. 115,1) to the desired output level (500, 1000 or 2000 W).
- Turn temperature control knob (Fig. 115,3) to the desired output level.
- *Switching off:* Turn the rotary switch (Fig. 115,1) to "_O" (Fig. 115,2).

Temperature control knob

Rotary switch

heated more quickly with



9.2.8 Warming unit for waste water pipes (special equipment)

 \triangleright Always only press the test button briefly.





The warming unit only functions when the vehicle is connected to a 230 V power supply.

In order to prevent waste water pipes freezing up, the waste water pipes can be electrically warmed.

When the warming unit is turned on, the temperature of the waste water pipes is monitored by temperature sensors. If the temperature falls below 5 °C, the heating elements are switched on and the waste water pipes are warmed. If the temperature rises above a certain level, the heating elements are switched off again.

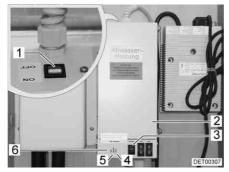


Fig. 116 Transformer with control unit

The 230 V AC/12 V DC transformer (Fig. 116,2) is installed in the wardrobe or in the storage area beneath the seating group, depending on the model.

The control unit is integrated in the transformer housing. The control lamps have the following meanings:

- The indicator lamp (Fig. 116,5) lights up in green: Regulation in operation
- The indicator lamps (Fig. 116,4 and 6) light up in red: Waste water pipes are warmed

A test button (Fig. 116,3) is integrated in the housing with which the control unit can be operated for a short time. By pressing the test button, the function of the warming unit can be tested, even if the ambient temperature is above 5 °C.

- Switching on:
- Connect the vehicle to a 230 V power supply (see section 8.6.1).
- Turn switch (Fig. 116,1) on the transformer (Fig. 116,2) to "ON".

Switching off:

■ Turn switch (Fig. 116,1) on the transformer (Fig. 116,2) to "OFF".



9.2.9 Electrical floor warming unit (special equipment)



On models with electrical floor warming unit, never drill holes in the floor or screw in any screws. Careful with sharp objects. There is danger of a power cut or a short circuit due to damage to a heater wire.



▷ Do not cover the transformer. Danger of overheating!



- > The electrical floor warming unit only operates if the vehicle is connected to the 230 V power supply.
- \triangleright The output of the electrical floor warming unit alone is not sufficient to heat the living area.

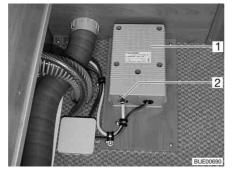




Fig. 117 Transformer for electrical floor warming unit

Fig. 118 Switch for electrical floor warming unit

The transformer (Fig. 117,1) for the electrical floor warming unit is installed either in the bench seat or in the bedding box, depending on the model.

- Switching on:
- Connect the vehicle to the 230 V power supply (see chapter 8).
- Press the rocker switch (Fig. 118,2). The indicator lamp (Fig. 118,1) on the switch is illuminated.
- Switching off: Press the rocker switch (Fig. 118,2). The indicator lamp (Fig. 118,1) on the switch goes off.

After switching off, the floor remains warm for a while, due to residual heat. If the transformer is overloaded, the overload protection is actuated. The pin (Fig. 117,2) jumps out.


Press the pin (Fig. 117,2) on the overload protection when the transformer Switching on overload protection: is cooled.

9.3 Air conditioning unit (special equipment)

9.3.1 **Dometic**



▷ If the unit is operating, always open at least one ventilation flap.

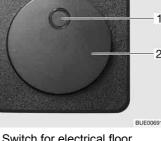

100



arepsilon In the winter, vehicle heating can be supported but not replaced by the air conditioning unit.

1

2 3 * 0 1 4 20 * 3 5 10:00-6 C g 7 19 10 18 11 anul 8 17 -12 16 13 15 14 DETO

▷ Also read the manufacturer's instruction manual.

Fig. 119 Remote control

- Symbol for automatic mode
- Symbol for cold mode 2
- 3 Symbol for warm mode
- Symbol for ventilation mode 4
- 5 Symbol for discharged batteries Tíme
- 6
- Temperature display 7 8 Fan speed display
- 9 ON/OFF button
- 10
- 11
- Fan speed button "MODE" button "CLOCK" button 12
- 13 Reset key
- 14 Interior temperature display button "ROOM"
- 15 Store button "SET"
- 16 Light button "LIGHT"(optional)
- Temperature unit change button "F/ 17 C°
- Temperature decrease button "-" 18
- Temperature increase button "+" 19
- 20 Display

To execute the individual switching commands, always point the remote control in the direction of the ceiling unit.

Operating modes The air conditioning unit has the following operating modes:

- Automatic •
- Ventilation, manual
- Cooling, manual
- Heating, manual

Switching on:

- Press the ON/OFF button (Fig. 119,9).
- Press the "Mode" button (Fig. 119,11) as often as required until the required mode (Fig. 119,1, 2, 3 or 4) is indicated on the display (Fig. 119,20).
- Use the "+" (Fig. 119,19) and "-" (Fig. 119,18) buttons to set the desired temperature.
- Use the fan speed button (Fig. 119,10) to select the desired fan level.

Switching off:

Press the ON/OFF button (Fig. 119,9).



Fig. 120 Air conditioning unit (Dometic)



LED The LED (Fig. 120,4) on the ceiling unit (Fig. 120,1) displays the operating status of the air conditioning unit:

Status LED	Signification
Off	Air conditioning unit off
Orange	Air conditioning unit ready to operate
Green	Air conditioning unit in operation
Red (continuous)	No 230 V power connection
Red (flashes once intermit- tently)	Fault in the interior temperature gauge
Red (flashes twice intermit- tently)	Fault in the exterior temperature gauge

Air current The air current can be directed in different directions. The distribution of the air current toward the front or back is continuously adjustable.

Adjusting air current:

- Align the two deflectors (Fig. 120,3 and 5) in the desired position.
- Rotate knob (Fig. 120,2) on sliding regulator in an anticlockwise direction. The sliding regulator for air distribution is released.
- Slide the sliding regulator forwards or backwards to the desired position. The side on which the sliding regulator is located is closed.
- Turn the knob tight in the clockwise direction.

9.3.2 Telair



- Always wait at least 2 minutes between switching off and switching on again. Otherwise the compressor will be damaged.
- ▷ If the unit is operating, always open at least one ventilation flap.



- ▷ The air conditioning unit only runs if the vehicle is connected to a 230 V power supply.
- ▷ In the winter, vehicle heating can be supported but not replaced by the air conditioning unit.
- ▷ Following switch-on the air conditioning unit needs approx. 3 minutes until the compressor starts to run and cold air or hot air is output.
- > Also read the manufacturer's instruction manual.


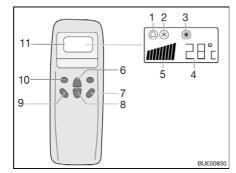


Fig. 121 Remote control

- Symbol for automatic
- 2 Symbol for cooling
- 3 Symbol for heater
- 4 Temperature (set) display5 Fan speed display
- 6 Temperature increase button
- 7 "ON/OFF" button
- 8 Temperature reduction button
- 9 Ventilation speed button
- 10 "Mode" button
- 11 Display



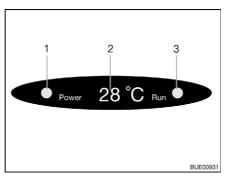

- 1 Mains connection indicator lamp
- 2 Temperature (current) display
- 3 Mode indicator lamp Green: Cooling Red: Heater

Fig. 122 Display on the diffusor

To execute the individual switching commands, always point the remote control in the direction of the receiver.

Operating modes

- AutomaticCooling
- Heater

Switching on:

- Press the "ON/OFF" button (Fig. 121,7).
- Press the "Mode" button (Fig. 121,10) as often as required until the required mode (Fig. 121,1, 2 or 3) is indicated on the display. The corresponding indicator lamp on the diffusor display (Fig. 122,3) lights up.
- Use the temperature increase button (Fig. 121,6) or temperature reduction button (Fig. 121,8) to set the required temperature.
- Use the ventilation speed button (Fig. 121,9) to select the required ventilation level.

Switching off:



- Press the "ON/OFF" button (Fig. 121,7).
- ▷ If the air conditioning unit has run in heating mode, the blower will run on for some minutes in order to dissipate the heat completely.

9.4 Boiler



- Never let gas escape unburned due to danger of explosion.
- Never run the boiler in gas operation when refuelling, on ferries or in the garage. Danger of explosion!
- Never operate the boiler in gas operation in closed spaces (e.g. garages). Danger of poisoning and suffocation!
- ▶ The water in the boiler can be heated up to 65 °C. Risk of scalding!



- \triangleright Switch on the boiler and empty it if the vehicle is not used.
- ▷ Never use boiler when empty.
- \triangleright If the boiler is not being used, empty it if there is any risk of frost.
- Only operate the boiler with the maximum temperature setting if you require a large quantity of warm water. This protects the boiler against the build-up of limescale.



 \triangleright Do not use the water from the boiler as drinking water.



9.4.1 Models with waste gas vent on the right-hand side of the vehicle



If the awning is put up and the boiler is running in gas operation, exhaust gases from the boiler can escape into the awning area. Danger of suffocation! Make sure the area is sufficiently ventilated.

9.4.2 Hot water source



- ▷ Do not fit a check valve in the cold water pipe between the hot water source and the water pump.
- Use a pressure reducer when connecting to a central water supply or with strong pumps. The hot water source is designed only for pressures of up to 1.2 bar. In addition, insert a safety/drainage valve in to the cold water pipe.



 \triangleright Do not use the water from the hot water source as drinking water.



Fig. 123 Operating switch for hot water source

The hot water source can either be operated using the 230 V power supply (electrical mode of operation), with the hot air of the heater system or both types of energy. The hot water source heats approx. 5 I water to a temperature of approx. 65 $^{\circ}$ C.

The electrical mode of operation is activated using the operating switch (Fig. 123). The indicator lamp (Fig. 123,1) on the switch must illuminate.

During hot air operation, the water in the hot water source is heated up by the heater and the circulating air.

Depending on the model, the vehicle is fitted with one or two hot water source drain cocks.

- Switching on: Connect the vehicle to the external 230 V power supply and switch on the 230 V automatic circuit breaker.
 - Switch on the operating switch (Fig. 123). Indicator lamp (Fig. 123,1) on the switch is illuminated. The water in the hot water source is heated up to 65 °C.
- *Switching off:* Switch off the operating switch (Fig. 123). Indicator lamp (Fig. 123,1) on the switch goes off.

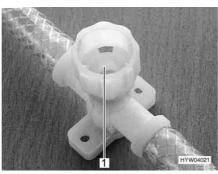


Fig. 124 Drain cock for hot water source

Filling the hot water source with water:

Emptying the hot water

irstner

- Connect the vehicle to the external 230 V power supply and switch on the 230 V automatic circuit breaker.
- Switch off the operating switch (Fig. 123). Indicator lamp (Fig. 123,1) in the switch is not on.
- Close all drain cocks. To do this, close the caps (Fig. 124,1) by turning them in a clockwise direction.
- Set all the water taps to "Hot" and open them. The water pump is turned on. The warm water pipes are filled with water.
- Keep the taps open until the water flowing out of the taps has no bubbles in it. This is the only way to ensure that the hot water source is full of water.
- Close all water taps.
- Switch off the 230 V power supply on the 230 V automatic circuit breaker.
- Open the stopper of the water tank.
- Open all water taps and set to the central position.
- Hang the shower handset up in the shower position.
- Hold the water pump up until the water pipes are completely empty.
- Open all drain cocks of the hot water source. To do this turn the caps (Fig. 124,1) in an anticlockwise direction.
- Check whether the water is completely drained from the hot water source.
- ▷ Further information can be obtained in the manufacturer's instruction manual.



source:

Truma boiler (special equipment)



9.4.3

Remove cap from waste gas vent before using the Truma boiler.

Operating modes

The boiler has three operating modes:

- Gas operation
- 230 V electrical operation
- Combined operation

The operating mode is set with the operating controls.

The regulation of the water temperature in the boiler is only possible with gas operation.



Temperature control knob

Red indicator lamp "Fault"

Rotary switch

Gas operation The boiler is operated exclusively with gas.

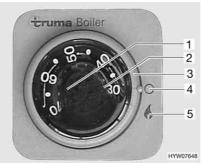


Fig. 125 Operating unit for Truma boiler

(gas operation)

- Switching on:
- Remove cap from waste gas vent.
- Open the regulator tap on the gas bottle and the gas isolator tap "Boiler".

1 2

3

4 Off 5 On

- Set the rotary switch (Fig. 125,3) to "A" (Fig. 125,5). The green "Operation" indicator lamp illuminates the knob (Fig. 125,1).
- Adjust the knob (Fig. 125,1) to the required water temperature.

The red indicator lamp (Fig. 125,2) illuminates when there is a fault (see chapter 14).

- Switching off: Set the rotary switch (Fig. 125,3) on the operating unit (Fig. 125) to "O" (Fig. 125,4).
 - Close the gas isolator tap "Boiler" and the regulator tap on the gas bottle.
 - Place cap on waste gas vent.

The red indicator lamp (Fig. 125,2) illuminates when there is a fault (see chapter 14).

230 V electrical operation

The boiler is operated exclusively with electricity.



230 V electrical operation is only possible when the vehicle is connected to the 230 V power supply.



Fig. 126 Flip switch for Truma boiler (230 V electrical operation)

Switching on:

- Connect the vehicle to the external 230 V power supply and switch on the 230 V automatic circuit breaker.
- Set flip switch (Fig. 126,1) to on. The indicator lamp on the switch is illuminated. The water in the boiler is heated up to 65 °C.



Switching off:

Combined operation



Filling/emptying the boiler

Filling the boiler with water:

off.

Set the flip switch (Fig. 126,1) to "O". The indicator lamp on the switch goes

The water is heated more quickly in the boiler if gas operation and 230 V electrical operation are switched on simultaneously.

Further information can be obtained in the manufacturer's instruction manual.

The boiler can be supplied with water from the water tank.

Depending on the model, the vehicle is fitted with one or several boiler drain cocks. The drain cocks can have different designs (rocking lever or twist cap).

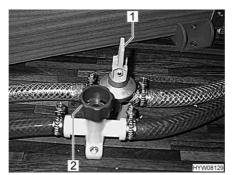


Fig. 127 Drain cocks

- Close all boiler drain cocks. To do this, position the rocking lever (Fig. 127,1) horizontally or turn the cap (Fig. 127,2) in a clockwise direction.
- Set all the water taps to "Hot" and open them. The water pump is turned on. The warm water pipes are filled with water.
- Keep the taps open until the water flowing out of the taps has no bubbles in it. This is the only way to ensure that the boiler is full of water.
- Close all water taps.

Emptying the boiler:

- Set the rotary switch (Fig. 125,3) on the operating unit (Fig. 125) to "_O" (Fig. 125,4) or the flip switch (Fig. 126,1) to "_O".
- Turn knob (Fig. 125,1) anticlockwise until it can go no further.
- Open all boiler drain cocks. To do this, position the rocking lever (Fig. 127,1) vertically or turn the cap (Fig. 127,2) in an anticlockwise direction.
- Check whether the water has been drained completely from the boiler (approx. 12.5 litres).

9.4.4 Alde boiler (partially special equipment)

Switching the boiler on/ off

Filling/emptying the boiler



- possible. For operating the hot-water heater, see section 9.2.6. The boiler can be supplied with water from the water tank.
- \triangleright Depending on the model, the vehicle is fitted with one or two drain cocks.

The boiler is integrated in the hot-water heater. A separate operation is not



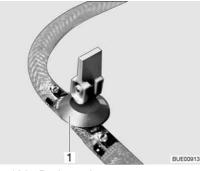


Fig. 128 Drain cock

Filling the boiler with water:

- Close the drain cock(s). Position the rocking lever (Fig. 128,1) horizontally.
- Switch on 12 V power supply on the panel.
- Set all the water taps to "Hot" and open them. The water pump is turned on. The warm water pipes are filled with water.
- Keep the taps open until the water flowing out of the taps has no bubbles in it. This is the only way to ensure that the boiler is full of water.
- Close all water taps.

Emptying the boiler: Switch off boiler.

- Open all water taps and set to the central position.
- Open drain cock(s) (Fig. 128). To do so, set the rocking lever (Fig. 128,1) in a vertical position. The boiler is drained to the outside.
- Check whether the water has been drained completely from the boiler (approx. 10 litres).



▷ For further information, see the separate manufacturer's instruction manual and observe the maintenance instructions found in chapter 12.

9.5 Cooker



- Never let gas escape unburned due to danger of explosion.
- Before using the cooker make sure that there is sufficient ventilation. Open windows or the skylight.
- Do not use gas cooker or gas oven for heating.
- Do not fit any curtains in the immediate proximity of the cooker. Fire hazard!
- Always protect your hands with cooking gloves or potholders when handling hot pots, pans and similar items. There is a risk of injury.

9.5.1 Gas cooker



- During activation and operation of the gas cooker, no flammable objects or highly inflammable objects such as dishcloths, napkins etc. must be near the gas cooker. Fire hazard!
- ► The process of ignition must be visible from above and must not be covered by cooking pans placed on the cooker.



- If there is a flame protection, always put it up when using the gas cooker.
- Depending on the model, the gas cooker lid is held closed by a spring. When closing there is danger of getting injured!



- \triangleright Do not use the glass gas cooker lid as a hob.
- \triangleright Do not close the gas cooker lid while the gas cooker is in operation.
- $\,\triangleright\,\,$ Do not apply pressure on the gas cooker lid when it is closed.
- \triangleright Do not place hot cooking pans on the gas cooker lid.
- ▷ Keep the gas cooker lid open after cooking until the burners are cool. Otherwise the glass plate could shatter.



- Only use pots and pans whose diameter is appropriate for the gas cooker burners.
- When the flame goes out, the thermocouple automatically cuts the gas supply.
- ▷ Further information can be obtained in the manufacturer's instruction manual.

The vehicle kitchen unit is fitted with a three-burner gas cooker.



Fig. 129 Operating controls for gas cooker

Switching on:

- Open the regulator tap on the gas bottle and the gas isolator tap "Cooker".
 - Open the gas cooker lid.
 - Depending on the model, fold out or set up the flame protection.
 - Turn the control knob (Fig. 129,1) on the burner you wish to use to the ignition position (large flame).
 - Press the control knob down and hold it.
 - Light the burner with a gas lighter, a match or other suitable means of lighting.
 - Once the flame is burning, the control knob must be held down for 10 to 15 seconds, until the thermocouple automatically keeps the gas supply open.
 - Release the control knob and turn to the desired setting.
 - If ignition is unsuccessful, repeat the entire procedure.

Switching off:

- Turn the control knob to the 0-position. The flame fades.
- Close the gas isolator tap "Cooker" and the regulator tap on the gas bottle.



9.5.2 Gas oven (Dometic) (special equipment)



- ► Keep the ventilation openings on the gas oven open at all times.
- There must be no flammable objects near the gas oven when it is being lit.
- If ignition has not taken place, repeat the entire procedure. If necessary, check if there is gas and/or current in the gas oven.
- If the gas oven still does not work, close the gas isolator tap and notify your service centre.
- ► If the burner flame is accidentally extinguished, turn the control knob to "O" and leave the burner off for at least 1 minute. Then ignite it again.



- > Depending on the model the gas oven may come equipped with a grill.
- ▷ Before using the gas oven for the first time run it for 30 minutes at maximum temperature without any contents.
- ▷ When the flame goes out, the thermocouple automatically cuts the gas supply.
- ▷ Further information can be obtained in the manufacturer's instruction manual.

The oven is equipped with electronic ignition.



Fig. 130 Gas oven (Dometic)

Switching on:

- Open the regulator tap on the gas bottle and the gas isolator tap "Oven".
- Gently press the control knob (Fig. 130,1) and turn left to any position.
- Press the control knob and hold it down for 5 to 10 seconds. Ignition will take place automatically.
- Release the control knob and turn to the desired setting.

Switching off:

- Turn control knob (Fig. 130,1) to "_O". The flame fades.
- Close the gas isolator tap "Oven" and the regulator tap on the gas bottle.

9.5.3 Microwave oven (special equipment)



- Only qualified personnel may repair the microwave oven. Improper repairs can cause major risks to the user.
- The protection device against the escape of microwave energy should never be removed.
- ▶ Use the microwave oven only if it has been properly installed.
- Only use the microwave oven when the door seal is free of damage.



- ▶ Never leave the microwave oven unattended when it is in operation.
- If there is smoke, keep the microwave oven closed, switch it off and interrupt the power supply.



- Operate the microwave oven only with the rotary plate and the rotary cross in place.
- \triangleright Use only crockery suitable for microwave use.



- The microwave oven only functions with correct 230 V power supply. In the case of fluctuations of the voltage or of voltage below 230 V, the microwave oven switches itself off completely. Therefore, do not switch on additional 230 V appliances when the microwave oven is in operation. Particularly in southern countries it happens that the line voltage is described as having 230 V but it really does not amount to this value. So it may happen that the microwave oven cannot be operated in these countries.
- ▷ Further information can be obtained in the manufacturer's instruction manual.



Fig. 131 Operating controls for microwave oven

Switching on:

- Press the key (Fig. 131,3) to open the door and place food into the cooking area.
- Close the door. A clicking noise can be heard when it engages.
- Select the output on the control knob (Fig. 131,1).
- Select the cooking time with the control knob (Fig. 131,2). Cooking begins.

The end of the cooking process is signalled by a signal tone. The microwave oven will switch off automatically.

Switching off: Press the key (Fig. 131,3) to open the door and take out the food.



9.5.4 Extractor hood (partially special equipment)

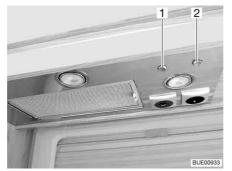


Fig. 132 Extractor hood

The cooking area is equipped with an extractor hood. The powerful fan blows the cooking steam directly outside. To switch on the extractor hood, press the right flip switch (Fig. 132,2).

Use the left flip switch (Fig. 132,1) to switch on the two lights in the extractor hood.

9.6 Refrigerator

During the journey, only operate the refrigerator via the 12 V power supply. At high ambient temperatures the refrigerator is unable to reach its full cooling power. At high external temperatures, the full cooling power of the cooling unit is only guaranteed if the refrigerator is ventilated sufficiently. In order to achieve a better ventilation the refrigerator ventilation grill can be removed.



- When leaving the vehicle, always mount the refrigerator ventilation grill. Otherwise water can enter during rain.
- ▷ The cooling power of the refrigerator depends on the vehicle setup. The cooling power can decrease if the vehicle is inclined by 5° or more. Therefore, always park the vehicle on level ground.
- Absorption refrigerators operate at normal room temperature (approx. 21 °C) within the specified temperature range. At significantly higher ambient temperatures (> 30 °C), the cooling power is reduced. This is because the "evaporating temperature" of the refrigerant is lower in absorption refrigerators than it is in compressor refrigerators.



9.6.1 Refrigerator ventilation grill


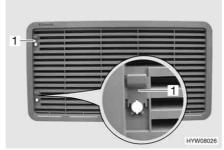


Fig. 133 Refrigerator ventilation grill (with sliding trap)

Removal: ■ Push sliding trap (Fig. 133,1) upward.

Remove refrigerator ventilation grill.

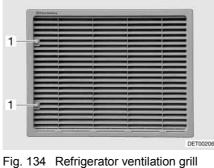

g. 134 Refrigerator ventilation gi (with screw)

Removal:

- Turn screw (Fig. 134,1) one quarter turn using a coin.
- Remove refrigerator ventilation grill.

The refrigerator has 3 operating modes:

9.6.2 Operation (Dometic 7 series, automatic ignition)

Operating modes

- Gas operation
- 230 V AC
- 12 V DC

The operating mode is set with the operating controls on the refrigerator panel.


- 6
- \triangleright Select only one energy source.
- ▷ The refrigerator always requires a 12 V control voltage, regardless of which type of energy it is using. The control voltage is present as soon as the transformer/rectifier is switched on. Therefore the closed circuit current always flows even if the refrigerator is switched off. Always switch off the transformer/rectifier for a temporary lay-up.

Gas operation



- ► Never let gas escape unburned due to danger of explosion.
- ▶ It is not permitted to operate the refrigerator with car gas.



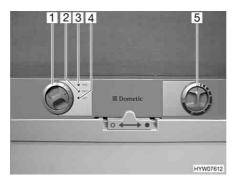

- Energy selector switch "230 V" operating indicator
- 2
- "GAS" operating indicator "12 V" operating indicator 3
- 4
- 5 Control knob for setting the temperature
- Fig. 135 Operating controls for the refrigerator (Dometic 7 series)
- Open the regulator tap on the gas bottle and the gas isolator tap "Refriger-Switching on: ator".
 - Set the energy selector switch (Fig. 135,1) to "GAS".
 - Set the control knob (Fig. 135,5) to maximum power. Gas supply is open. Ignition will take place automatically. A ticking sound can be heard until ignition has been completed successfully. The "GAS" operating indicator (Fig. 135,3) lights up yellow.
 - Adjust the refrigerating temperature with the control knob.
- Switching off:
- Set energy selector switch to "O". Refrigerator is switched off.
- Close the gas isolator tap "Refrigerator" and the regulator tap on the gas bottle.

Electrical operation



▷ Close the gas isolator tap "Refrigerator" when the refrigerator is operated electrically.

The refrigerator can be operated with the following voltages:

- 230 V AC
- 12 V DC

Switching the 230 V operation on:

- Set energy selector switch (Fig. 135,1) to "230 V". The "230 V" operating indicator (Fig. 135,2) lights up green.
- Use the control knob (Fig. 135,5) to adjust the refrigerating temperature.
- Switching the 230 V operation off:
- Switching the 12 V operation on:
- Switching the 12 V operation off:
- Set energy selector switch to "O". Refrigerator is switched off.
- Set energy selector switch (Fig. 135,1) to "12 V". The "12 V" operating indicator (Fig. 135,4) lights up green.
 - Use the control knob (Fig. 135,5) to adjust the refrigerating temperature.
 - Set energy selector switch to "O". Refrigerator is switched off.

When operated with 12 V, the refrigerator draws power only from the starter battery of the towing vehicle. The starter battery of the towing vehicle only supplies the refrigerator with 12 V when the vehicle engine is running and the alternator receives adequate voltage. When the vehicle engine is not running, the refrigerator is cut off from the power supply in the living area. For this reason, change over to gas operation during prolonged driving breaks.





> Further information can be obtained from the separate instruction manual "Refrigerator".

9.6.3 **Operation (Dometic 7 series with frame heater)**

Volume

Model RM 7651: 150 I (arched door)

Operating modes

The refrigerator has 2 operating modes:

- Gas operation
- Electrical operation (230 V AC or 12 V DC)

The operating mode is set with the operating controls on the refrigerator panel.


 \triangleright Select only one energy source.



Gas operation



- Never let gas escape unburned due to danger of explosion.
- It is not permitted to operate the refrigerator with car gas.

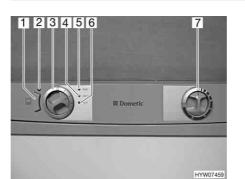

- Frame heater (FH) button
- 2 Indicator lamp, frame heater
- 3 Energy selector switch
- 4 "230 V" operating indicator
- "GAS" operating indicator "12 V" operating indicator 5
- 6
- Control knob for setting the temperature

Operating controls for the Fig. 136 refrigerator (Dometic 7 series with FH)

- Switching on:
 - Open the regulator tap on the gas bottle and the gas isolator tap "Refrigerator".
 - Set energy selector switch (Fig. 136,3) to "GAS".
 - Set the control knob (Fig. 136,7) to maximum power. Gas supply is open. Ignition will take place automatically. A ticking sound can be heard until ignition has been completed successfully. The "GAS" operating indicator (Fig. 136,5) lights up yellow.
 - Adjust the refrigerating temperature with the control knob.

Switching off:

- Set the energy selector switch (Fig. 136,3) to "_O". Refrigerator is switched off.
- Close the gas isolator tap "Refrigerator" and the regulator tap on the gas bottle.



Electrical operation



Close the gas isolator tap "Refrigerator" when the refrigerator is operated electrically.

The refrigerator can be operated with the following voltages:

- 230 V AC
- 12 V DC

Switching the 230 V operation on:

- Set energy selector switch (Fig. 136,3) to "230 V". The "230 V" operating indicator (Fig. 136,4) lights up green.
- Use the control knob (Fig. 136,7) to adjust the refrigerating temperature.

Switching the 230 V operation off:

Switching the 12 V operation on:

- Set energy selector switch (Fig. 136,3) to "12 V". The "12 V" operating indicator (Fig. 136,6) lights up green.
- Use the control knob (Fig. 136,7) to adjust the refrigerating temperature.

Switching the 12 V operation off:

Set energy selector switch to "O". Refrigerator is switched off.

Set energy selector switch to "o". Refrigerator is switched off.

When operated with 12 V, the refrigerator draws power from the starter battery of the towing vehicle. Therefore, 12 V operation of the refrigerator is only possible if the alternator signal D+ is present. During prolonged driving breaks, always change over to gas operation.

Frame heater (FH)



If the frame heater is switched on, it will always consume current. Therefore, switch off the frame heater if the engine of the towing vehicle is off and the vehicle is not connected to the 230 V power supply.

High external temperatures and high humidity can cause drops of water to form on the metal frame of the freezer compartment. This is why the refrigerator is equipped with a frame heater for the freezer compartment. If the temperature and humidity are high, switch on the frame heater by pressing the button (Fig. 136,1). This prevents corrosion. If the frame heater is switched on, the indicator lamp (Fig. 136,2) will be lit.



Further information can be obtained from the separate instruction manual "Refrigerator".

9.6.4 Operation (Dometic 8 series with manual power selection MES)

Operating modes

Gas operation

The refrigerator has 3 operating modes:

- 230 V AC
- 12 V DC

The operating mode is set with the operating controls on the refrigerator panel.



 \triangleright Select only one energy source.

> The refrigerator always requires a 12 V control voltage, regardless of which type of energy it is using. The control voltage is present as soon as the transformer/rectifier is switched on. Therefore the closed circuit current always flows even if the refrigerator is switched off. Always switch off the transformer/rectifier for a temporary lay-up.

Gas operation



Never let gas escape unburned due to danger of explosion.

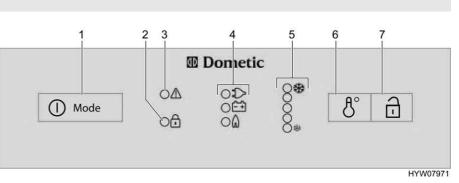


Fig. 137 Operating controls for the refrigerator (Dometic 8 series with MES)

- On/off switch/energy selector switch 1
- Display-LED "open door" (only for central locking system of the refrigerator door) Display-LED "fault" 2
- 3
- Operating indicators 4
- 5 Display-LED "temperature range"
- 6 Switch for temperature setting
- Door opener (only for refrigerator door central locking system)

Switching on:

- Open the regulator tap on the gas bottle and the gas isolator tap "Refriger-ator".
- Press the on/off switch/energy selector switch (Fig. 137,1) down for 2 seconds in order to switch on the appliance. The LED of the operating mode chosen most recently lights up.
- If appropriate press the on/off switch/energy selector switch (Fig. 137,1)

until the gas operating indicator ", " lights up. Gas supply is open. Ignition will take place automatically. A ticking sound can be heard until ignition has been completed successfully.

Use switch (Fig. 137,6) to adjust refrigerating temperature.

Switching off:

- Press down the on/off switch/energy selector switch for 2 seconds. Refrigerator is switched off.
- Close the gas isolator tap "Refrigerator" and the regulator tap on the gas bottle.

Electrical operation



▷ Close the gas isolator tap "Refrigerator" when the refrigerator is operated electrically.



The refrigerator can be operated with the following voltages:

- 230 V AC
- 12 V DC

Switching the 230 V operation on:

- Press the on/off switch/energy selector switch (Fig. 137,1) down for 2 seconds in order to switch on the appliance. The LED of the operating mode chosen most recently lights up.
 - If appropriate press the on/off switch/energy selector switch (Fig. 137,1) several times until the operating indicator 230 V " is lights up.
 - Use switch (Fig. 137,6) to adjust refrigerating temperature.
- Switching the 230 V operation off: Press down the on/off switch/energy selector switch for 2 seconds. Refrigerator is switched off.

Switching the 12 V operation on:

- Press the on/off switch/energy selector switch (Fig. 137,1) down for 2 seconds in order to switch on the appliance. The LED of the operating mode chosen most recently lights up.
- If appropriate press the on/off switch/energy selector switch (Fig. 137,1) several times until the operating indicator 12 V "-----" lights up.
- Use switch (Fig. 137,6) to adjust refrigerating temperature.
- Switching the 12 V operation off:
- Press down the on/off switch/energy selector switch for 2 seconds. Refrigerator is switched off.

When operated with 12 V, the refrigerator draws power only from the starter battery of the towing vehicle. The starter battery of the towing vehicle only supplies the refrigerator with 12 V when the vehicle engine is running and the alternator receives adequate voltage. When the vehicle engine is not running, the refrigerator is cut off from the power supply in the living area. For this reason, change over to gas operation during prolonged driving breaks.



Further information can be obtained from the separate instruction manual "Refrigerator".

9.6.5 Refrigerator door locking mechanism

With some models, the refrigerator has a separate freezer compartment. The specifications in this section correspondingly also apply to the door of the freezer compartment.



During the journey the refrigerator door must always be closed and locked in the closed position.



Lock the refrigerator door in ventilation position when the refrigerator is switched off. This prevents mould forming.

There are two positions for locking the refrigerator door in place:

- Closed refrigerator door during travel and when the refrigerator is in operation
- Slightly opened refrigerator door as a ventilation position when the refrigerator is switched off

Dometic 7 series

ürstner

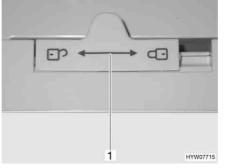


Fig. 138 Locking of the refrigerator door (Dometic 7 series)

■ Fully close the refrigerator door.

Slightly open refrigerator door.

slightly open (Fig. 139).

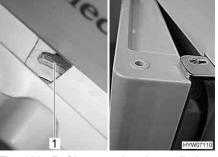


Fig. 139 Refrigerator door in ventilation position (Dometic 7 series)

Opening:

- Push the lock (Fig. 138,1) to the left "[]].
- Use recessed grip to open refrigerator door.

Push the lock (Fig. 138,1) completely to the right "".

Push the lock completely to the right. The door latch (Fig. 139,1) keeps the refrigerator door in a fixed position. The refrigerator door will then stay

Closing:

Locking in the ventilation position:

separate freezer compartment

2 3 HYW07716

Fig. 140 Locking of the refrigerator door/freezer compartment door (Dometic 7 series with separate freezer compartment)

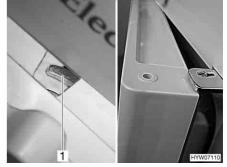


Fig. 141 Refrigerator door/freezer compartment door in ventilation position (Dometic 7 series with separate freezer compartment)

Opening:

- Push the lock (Fig. 140,1) to the side, so that the open lock "[] (Fig. 140,3) is completely visible.
- Use recessed grip to open refrigerator door/freezer compartment door.

Closing:

- Fully close the refrigerator door/freezer compartment door.
 - Push the lock (Fig. 140,1) to the side, so that the closed lock " (Fig. 140,2) is completely visible.

Dometic 7 series with



Locking in the ventilation position:

- Slightly open refrigerator door/freezer compartment door.
- Push the lock completely to the right. The door latch (Fig. 141,1) keeps the refrigerator door/freezer compartment door in a fixed position. The refrigerator door/freezer compartment door will then stay slightly open (Fig. 141).

Dometic 8 series



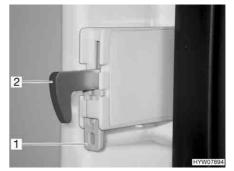


Fig. 142 Release button of the refrigerator door (Dometic 8 series)

Fig. 143 Lock hook fixture

- Opening:
- *Closing:* Close the refrigerator door. The lock hook engages audibly.

When the vehicle has been positioned, the lock hook can be fixed. The refrigerator door can now be opened without having to press the release button.

Press the release button (Fig. 142,1) and open the refrigerator door.

- *Fixing the lock hook:* Press the fixture (Fig. 143,1) upwards. The lock hook (Fig. 143,2) is pressed upwards and has no function.
- Unlocking the lock hook:
- Push the lock hook (Fig. 143,2) down. The lock hook functions again.

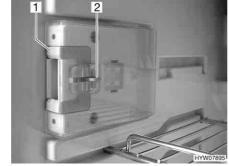


Fig. 144 Locking device in normal position

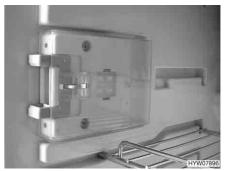


Fig. 145 Locking device in ventilation position

Locking in the ventilation position:

- Open the refrigerator door.
- Press down the unlocking device (Fig. 144,2).
- Push locking device (Fig. 144,1) forwards (Fig. 145).

If the refrigerator door is closed now, a gap will remain between the refrigerator door and the refrigerator.



Chapter overview

This chapter contains instructions regarding the sanitary fittings of the caravan.

The instructions address the following topics:

- water tank
- waste water tank
- complete water system
- toilet compartment
- toilet

10.1 Water supply, general



- Fill water tank from supply systems that have been verified to provide drinking water quality.
- Only use such hoses or containers when filling that have been approved for use with drinking water.
- Thoroughly rinse filling hose or container with drinking water before use (2 to 3 times capacity).
- Empty filling hose or container completely after use and close openings of the filling hose or container.
- Water left standing in the water tank or in the water pipes becomes undrinkable after a short period. Therefore, before each use of the vehicle, thoroughly clean the water pipes and the water tank. After each use of the vehicle completely empty the water tank and the water pipes.
- In the case of lay-ups lasting more than a week disinfect the water system before using the vehicle.



- If the vehicle is not used for several days or if it is not heated when there is a risk of frost, empty the entire water system. Leave the water taps on in central position. Leave the safety/drainage valve (if there is one) and all drain cocks open. Frost damage to appliances, frost damage to the vehicle and deposits in water-carrying components can be avoided in this way.
- ▷ The water pump will overheat without water and can get damaged. Never operate water pump when the water tank is empty.

The vehicle is equipped with a fitted water tank. An electric water pump pumps the water to the individual water taps. Opening a water tap automatically switches on the water pump and pumps water to the tap.

A canister or a waste water tank collects the waste water.



- > Before using the water fittings: Connect the 230 V power supply and switch on the 230 V automatic circuit breaker, or connect the caravans electrics to the towing vehicle. Otherwise the water pump will not work. (This only applies to caravans that are not equipped with a separate battery.)
- When the water tank is re-filled, an air bubble may form at the bottom of the pump. This air bubble will prevent water from being drawn in. Shake the water pump up and down energetically in the water.



10.2 Water tank



When filling the water tank, observe the maximum permissible gross weight of the vehicle. Luggage must be reduced accordingly when the water tank is full.

10.2.1 Water tank 22 I with external flap (special equipment)

The water tank is mobile or portable.



Fig. 146 Water tank 22 I

When transporting the water tank, close it with the cap (Fig. 146,1).

Filling the water tank with drinking water:

- Close all water taps.
- Open service flap (Fig. 146,3) (see chapter 6).
- Pull the water pump out of the water tank.
- Pull out the water tank (Fig. 146,2).
- Clean or disinfect water tank.
- Fill the water tank with drinking water.
- Pouring water:
- Open the water taps.

Emptying the water tank:

- Close all water taps.
- Open service flap (Fig. 146,3) (see chapter 6).
- Pull the water pump out of the water tank.
- Pull out the water tank (Fig. 146,2) and empty it.



10.2.2 Water tank 40 I

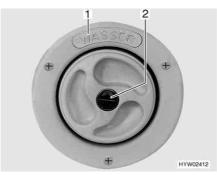


Fig. 147 Drinking water filler neck

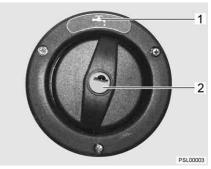


Fig. 148 Drinking water filler neck (alternative)

The drinking water filler neck is on the right or left side of the vehicle, depending on the model.

The drinking water filler neck is labelled by the word "WASSER" (water)

(Fig. 147,1) or marked by the symbol " closed using the key for the external flap locks.

The water tank is built into the seating group.





Fig. 149 Water tank

Fig. 150 Stopper

- Open drinking water filler neck (Fig. 147 or Fig. 148) (see chapter 6).
- Clean or disinfect water tank.
- Fill the water tank with drinking water.

Pouring water:

drinking water:

Emptying the water tank:

Filling the water tank with

- Open the water taps. Close all water taps.
- Turn the handle (Fig. 149,1) on the water tank in an anticlockwise direction as far as it will go. The stopper (Fig. 150,1) at the bottom of the tank is lifted.
- Let the water drain out.
- Turn the handle (Fig. 149,1) on the water tank in a clockwise direction as far as it will go. The stopper at the bottom of the tank (Fig. 150,1) closes the drain.



10.3 Waste water tank (special equipment)



Before commencing the journey, empty the waste water tank.



- \triangleright If there is any risk of frost, empty the waste water tank.
- ▷ Never pour boiling water directly into the sink outlet. Boiling water could cause deformation and leaks in the waste water pipe system.



Only empty the waste water tank at disposal stations, camping sites or caravan sites especially provided for this purpose.

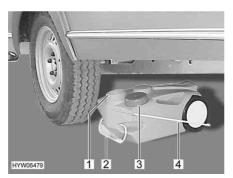


Fig. 151 Waste water tank, mobile

Emptying:

- Use the cap (Fig. 151,3) to close the opening of the waste water tank (Fig. 151,1).
 - Use the handle (Fig. 151,2) to pull out the waste water tank.
- Fold the carrying handle (Fig. 151,4) up and upright the waste water tank.
- Completely empty the waste water tank at disposal stations that are especially provided for this purpose.

10.4 Filling the water system



When filling the water tank, observe the maximum permissible gross weight of the vehicle. Luggage must be reduced accordingly when the water tank is full.



▷ The water pump will overheat without water and can get damaged. Never operate water pump when the water tank is empty.



Fig. 152 Drain cock (with rocking lever)

- Position the vehicle horizontally.
- Connect the 230 V power supply and switch on the 230 V automatic circuit breaker. If the vehicle is equipped with a self-sufficiency package with battery, it is not necessary to connect it to a 230 V power supply.
- Clean or disinfect water system.
- Close all water taps.
- Switch off the boiler.
- Close all drain cocks. To do this, position the drain cock's rocking lever (Fig. 152,1) horizontally or turn the drain cock's cap (Fig. 153,1) in a clockwise direction.
- Close the drainage opening of the water tank.
- Fill the water tank with drinking water. Use a water hose, a water canister with a funnel or similar for filling.
- Set all the water taps to "Hot" and open them. The water pump is turned on. The warm water pipes are filled with water.
- Keep the taps open until the water flowing out of the taps has no bubbles in it. This is the only way to ensure that the boiler is full of water.
- Set all water taps to "Cold" and leave them open. This will fill the cold water pipes with water.
- Keep the taps open until the water flowing out of the taps has no bubbles in it.
- Close all water taps.
- Check that the cap on the water tank is not leaking.

10.5

iirstner

Emptying the water system



If the vehicle is not used for several days or if it is not heated when there is a risk of frost, empty the entire water system. Leave the water taps on in central position. Leave the safety/drainage valve (if there is one) and all drain cocks open. Frost damage to appliances, frost damage to the vehicle and deposits in water-carrying components can be avoided in this way.



> Take note of the environmental tip in this chapter.

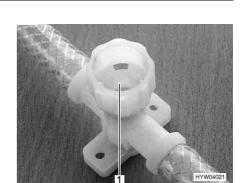


Fig. 153 Drain cock (with twist cap)



To empty and ventilate the water system, proceed as follows. Frost damage and deposits are avoided in this way:

- Position the vehicle horizontally.
- Switch off the 230 V power supply on the 230 V automatic circuit breaker.
- Open all drain cocks. To do this turn the drain cock's cap in an anticlockwise direction or set the drain cock's rocking lever in a vertical position.
- Open the drainage opening of the water tank.
- Set water tap in kitchen and shower compartment (toilet compartment) in an exact central position (hot – cold), and open.
- Hang the shower handset up in the shower position.
- Remove the cap of the water tank. Hold the water pump up until the water pipes are completely empty.
- Check whether the water tank is completely empty.
- Blow out the remaining water in the water pipes (max. 0.5 bar).
- Empty the waste water tank. Take note of the environmental tip in this chapter.
- Empty toilet cassette. Take note of the environmental tip in this chapter.
- After emptying, leave all water taps open in the central position.
- Leave all drain cocks open.

10.6 Toilet compartment



▷ Do not transport any loads in the shower tray. The shower tray or other items of equipment in the toilet compartment can be damaged.



- ▷ For ventilation purposes during or after a shower, and for drying wet clothing, close the toilet compartment door and open the window or the toilet compartment skylight. This improves the air circulation.
- $\,\triangleright\,\,$ Close the shower curtain completely when showering, so that no water is able to enter the area between the wash room wall and the shower tray.
- ▷ After taking a shower, rinse soap residue from the shower tray, otherwise cracks can appear in the shower tray over time.
- > After using the shower, wipe it dry to prevent moisture from collecting.
- ▷ Further information about cleaning the toilet compartment can be found in the section 11.2.

10.7 Toilet



- If there is any risk of frost and the vehicle is not heated, empty the sewage tank (cassette).
- ▷ Do not sit on the lid of the toilet. The lid is not designed to bear the weight of a person and could break.
- ▷ Use a suitable chemical for this toilet. The ventilation will merely remove the odour but not germs and gases. Germs and gases will have a detrimental effect on the sealing rubbers.





▷ Further information can be obtained in the manufacturer's instruction manual.



Only empty the sewage tank (cassette) at disposal stations, at camping sites or caravan sites, that are especially provided for this purpose.

Depending on the design, the toilet is flushed either directly via the vehicle's water system, or via a separate water tank.



Swivel toilet (Thetford C-200)

- \bigcirc
- > The Thetford cassette can only be taken out if the sliding trap is closed.

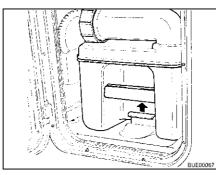


Fig. 154 Pulling the retaining clip

Preparing toilet:

Open the flap for the Thetford cassette and pull the retaining clip upwards to remove the Thetford cassette.

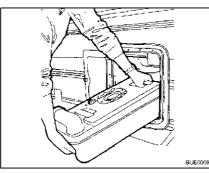


Fig. 155 Removing the Thetford cassette

- Pull out the Thetford cassette as far as it can go.
- Tip the Thetford cassette slightly and then pull it out completely.



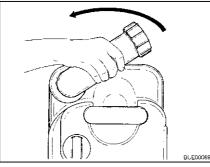


Fig. 156 Turning drainage neck

- Place the Thetford cassette upright.
- Turn the drainage neck upwards.
- Remove the cap of the drainage neck.
- > Never put the sanitary liquid directly in the toilet bowl.



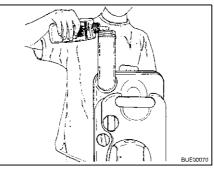


Fig. 157 Filling with sanitary liquid

- Fill the Thetford cassette with the specified quantity of sanitary liquid.
- Then add enough water to completely cover the bottom of the Thetford cassette.
- Close drainage neck with the cap.
- Return the drainage neck to its original position.
- > When inserting, do not use force. The Thetford cassette can be damaged.



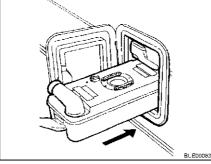


Fig. 158 Inserting the Thetford cassette

■ Push the Thetford cassette back to its original position.

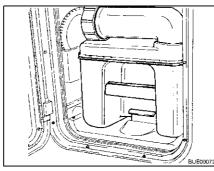


Fig. 159 Thetford cassette secured

- Ensure that the Thetford cassette is secured by the retaining clip.
- Lock the flap for the Thetford cassette.

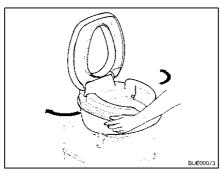


Fig. 160 Rotating the toilet bowl

Using the toilet:

■ Move the toilet bowl into a convenient position.



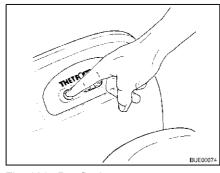


Fig. 161 Pre-flush

- Fill the toilet bowl with some water. Press the flush button. Flushing continues as long as the button is pressed.
- Use the toilet.

C-200 S cassette With the C-200 S cassette, proceed as follows to flush the toilet:

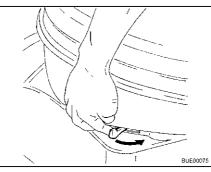


Fig. 162 Operating the sliding trap

Open the sliding trap. To do this, turn the slide lever in an anticlockwise direction.

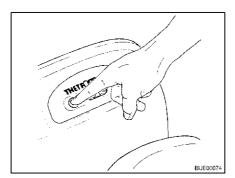



Fig. 163 Operating the flush


- Flush the toilet. Press the flush button.
- After flushing close the sliding trap.



C-200 E cassette

With the C-200 E cassette, proceed as follows to flush the toilet:

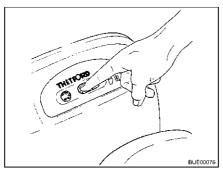

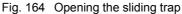

 Open the sliding trap. To do this, press the left side of the sliding trap button.

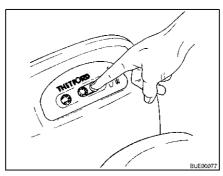


Fig. 165 Closing the sliding trap

- Flush the toilet. Press the flush button.
- After flushing close the sliding trap. To do this, press the right side of the sliding trap button.
- 0
- > The Thetford cassette can only be taken out if the sliding trap is closed.

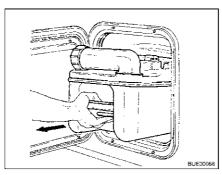


Fig. 166 Removing the Thetford cassette

Emptying the Thetford cassette:

- Open the flap for the Thetford cassette and pull the retaining clip upwards to remove the Thetford cassette.
- Pull out the Thetford cassette as far as it can go.
- Tip the Thetford cassette slightly and then pull it out completely.



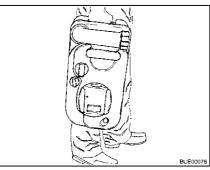


Fig. 167 Carrying the Thetford cassette

Take the Thetford cassette to a proper disposal area. As you do this, point the drainage neck upwards.

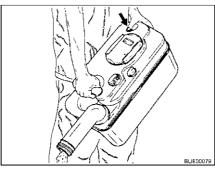


Fig. 168 Emptying the Thetford cassette

- Turn the drainage neck upwards.
- Remove the cap of the drainage neck.
- Point the Thetford cassette with the drainage neck downwards.
- Activate the aeration knob with your thumb. The Thetford cassette empties.
- Rinse the Thetford cassette thoroughly with fresh water.
- Close drainage neck with the cap.
- Return the drainage neck to its original position.

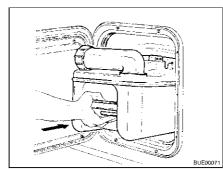


Fig. 169 Inserting the Thetford cassette

- Prepare the Thetford toilet for use.
- Push the Thetford cassette back to its original position.
- Ensure that the Thetford cassette is secured by the retaining clip.
- Lock the flap for the Thetford cassette.

10.7.2 Toilet with fixed seat (Thetford C-402)

The Thetford toilet of some models is equipped with its own water tank.

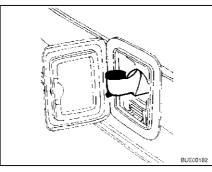


Fig. 170 Fresh water filler neck, swung out

Filling the water tank:

ürstner

- Open the flap for the Thetford cassette.
- Swing the fresh water filler neck towards the outside.

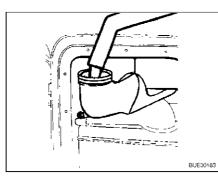


Fig. 171 Filling with fresh water

- Remove the screw cap.
- Fill with fresh water until the fluid level reaches the top edge. This corresponds to approx. 15 I.

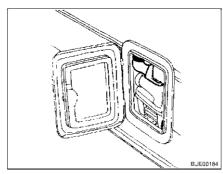


Fig. 172 Fresh water filler neck, swung in

- Close the screw cap.
- Swivel the fresh water filler neck inwards.



 \triangleright The Thetford cassette can only be taken out if the sliding trap is closed.





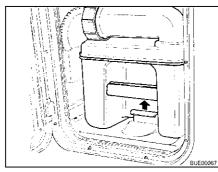


Fig. 173 Pulling the retaining clip

Preparing toilet: • Open the flap for the Thetford cassette and pull the retaining clip upwards to remove the Thetford cassette.

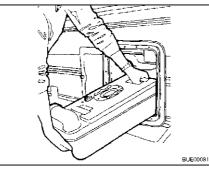

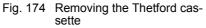

- Pull out the Thetford cassette as far as it can go.
- Tip the Thetford cassette slightly and then pull it out completely.

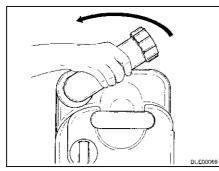


Fig. 175 Turning drainage neck

- Place the Thetford cassette upright.
- Turn the drainage neck upwards.
- Remove the cap of the drainage neck.
- > Never put the sanitary liquid directly in the toilet bowl.





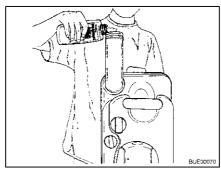


Fig. 176 Filling with sanitary liquid

- Fill the Thetford cassette with the specified quantity of sanitary liquid.
- Then add enough water to completely cover the bottom of the Thetford cassette.
- Close drainage neck with the cap.
- Return the drainage neck to its original position.



 $Descript{When}$ inserting, do not use force. The Thetford cassette can be damaged.

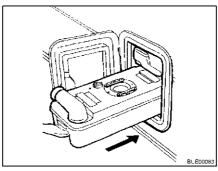


Fig. 177 Inserting the Thetford cassette

■ Push the Thetford cassette back to its original position.

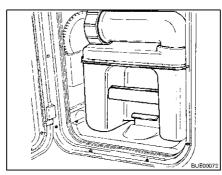


Fig. 178 Thetford cassette secured

- Ensure that the Thetford cassette is secured by the retaining clip.
- Lock the flap for the Thetford cassette.

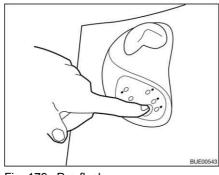


Fig. 179 Pre-flush

- *Using the toilet:* Fill the toilet bowl with some water. Press the flush button. Flushing continues as long as the button is pressed.
 - Use the toilet.



Fig. 180 Operating the sliding trap

Open the sliding trap. To do this, turn the slide lever in an anticlockwise direction.

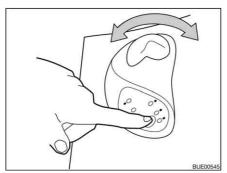


Fig. 181 Operating the flush

- Flush the toilet. Press the flush button.
- After flushing close the sliding trap again. To do this turn the slide lever in a clockwise direction.



> The Thetford cassette can only be taken out if the sliding trap is closed.



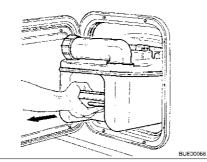


Fig. 182 Removing the Thetford cassette

Emptying the Thetford cassette:

- Open the flap for the Thetford cassette and pull the retaining clip upwards to remove the Thetford cassette.
- Pull out the Thetford cassette as far as it can go.
- Tip the Thetford cassette slightly and then pull it out completely.



Fig. 183 Transporting the Thetford cassette

- Place the Thetford cassette upright on the wheels.
- Press down the handle of the draw bar and move away from the Thetford cassette. The lock of the draw bar releases itself.
- Pull the draw bar out completely by the handle.
- Take the Thetford cassette to a proper disposal area.
- Insert the draw bar completely using the handle.

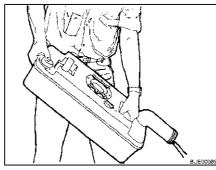


Fig. 184 Emptying the Thetford cassette

- Turn the drainage neck upwards.
- Remove the cap of the drainage neck.
- Point the Thetford cassette with the drainage neck downwards.



- Activate the aeration knob with your thumb. The Thetford cassette empties.
- Rinse the Thetford cassette thoroughly with fresh water.
- Close drainage neck with the cap.
- Return the drainage neck to its original position.

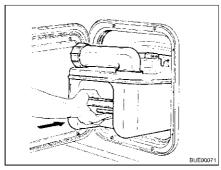


Fig. 185 Inserting the Thetford cassette

- Prepare the Thetford toilet for use.
- Push the Thetford cassette back to its original position.
- Ensure that the Thetford cassette is secured by the retaining clip.
- Lock the flap for the Thetford cassette.

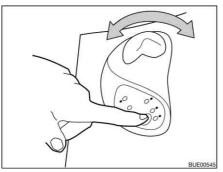


Fig. 186 Emptying the water tank

- *Emptying the water tank:*
- Open the sliding trap. To do this, turn the slide lever in an anticlockwise direction.
- Press the flush button until water ceases to flow into the bowl.
- Close the sliding trap. To do this turn the slide lever in a clockwise direction.

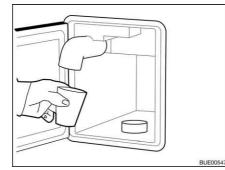


Fig. 187 Emptying the fresh water filler neck

- Open the flap for the Thetford cassette.
- Swing the fresh water filler neck towards the outside.



- Remove the screw cap from the fresh water filler neck.
- Turn the fresh water filler neck in an anticlockwise direction until the residual water flows out.
- Turn the fresh water filler neck back in a clockwise direction.
- Screw the screw cap onto the fresh water filler neck.
- Swivel the fresh water filler neck inwards.
- Empty Thetford cassette.





Chapter overview

This chapter contains instructions regarding the care of the vehicle.

The instructions address the following topics:

- exterior of the vehicle
- interior
- water system
- extractor hood
- air conditioning unit
- winter operation

At the end of the chapter there is a checklist of measures you must carry out if you are not going to use the vehicle for an extended period of time.

The checklist address the following topics:

- temporary lay-up
- winter lay-up
- start-up after a lay-up

11.1 External care

11.1.1 General

Standard external care consists of regular washing. The use and the environmental conditions will determine how often the vehicle needs to be washed. Wash the vehicle more frequently in areas which are exposed to heavy air pollution or heavy traffic or roads treated with de-icing salts. If the vehicle is exposed to salty and humid air (coastal areas, humid climates), wash the vehicle more frequently.

Do not park under trees if at all possible. The resin-like discharge which many trees secrete, give the paintwork a matt look and can promote the onset of corrosion.

Wash off bird droppings straight away and thoroughly, as the acid it contains is extremely corrosive.

11.1.2 Washing with a high-pressure cleaner



- ▷ Do not clean the tyres with a high-pressure cleaner. The tyres might be damaged.
- ▷ Do not spray external applications (deco-films) directly with the high-pressure cleaner. The external applications could come off.

Before cleaning the vehicle with a high-pressure cleaner, observe the operating instructions of the high-pressure cleaner.

When cleaning with the nozzle for circular jet between the vehicle and the cleaning nozzle, maintain a minimum distance of approx. 700 mm.

Take into consideration that the jet of water comes out of the cleaning nozzle with pressure. The vehicle may be damaged by incorrect handling of the high-pressure cleaner. The temperature of the water should not be above 60 °C. Keep the jet of water in constant movement during the washing process. Do not direct the water jet at clearances, built-in electrical parts, plugs, seals, the ventilation grill or the skylights. The vehicle may be damaged or water may enter the interior.



11.1.3 Washing the vehicle



- Never clean the vehicle in the car wash. Water can enter the refrigerator grills, the waste gas vents, the ventilation of the extractor hoods or the forced ventilations. The vehicle could be damaged.
- Wash the vehicle only on a washing site intended for this purpose. Avoid full sunshine. Observe environmental measures.
- Only clean external applications and synthetic parts with plenty of warm water, dish washing liquid and soft cloth.
- Wash down the vehicle with plenty of water, a clean sponge or a soft brush. In the case of stubborn dirt add dish washing liquid to the water.
- Painted exterior walls may also be cleaned with a caravan cleaner.
- Add-on parts made of glass-fibre reinforced plastic (GRP) require a regular follow-up treatment with a polisher. This way these parts will not turn yellow and the sealing of the surface remains intact.
- Treat rubber seals of doors and storage flaps with talc.
- Treat locking cylinder of doors and storage flaps with graphite dust.

11.1.4 Windows of acrylic glass

Acrylic glass windows are delicate and require very careful handling.



- Never rub acrylic glass windows dry as dust particles might damage the surface!
- Only clean acrylic glass windows with plenty of warm water, some dish washing liquid and a soft cloth.
- Never use glass cleaning agents with chemical, abrasive or alcohol-containing additives. Premature brittleness of the panes and associated cracks may result from their use.
- ▷ Avoid contact of cleansing agents used for the body (e.g. tar- or siliconeremoving agents) with acrylic glass.
- ▷ Do not clean vehicle in car wash.
- \triangleright Do not attach stickers to the acrylic glass windows.
- ▷ Having cleaned the vehicle rinse acrylic glass with sufficient clear water.
- \triangleright Apply talcum powder to rubber seals.



An acrylic glass cleanser with antistatic effect is suitable for a follow-up treatment. Small scratches can be treated with an acrylic glass polish. These agents are available at the accessories shop.

11.1.5 Hot galvanized chassis

Salt deposits damage the hot galvanized chassis and can cause white rust. But so-called white rust represent no defects. It is only a visual damage. The most frequent causes for white rust are:

- Abrasives and de-icing salts (e.g. when driving during winter months)
- Condensation (e.g. by covering the vehicle with plastic foils or awning)
- Humidity (e.g. by parking the vehicle in high grass, in puddles or sludge)
- Cleaning agents (e.g. by cleaning with aggressive cleaning agents)



- Snow (e.g. by standing too long in snow)
- Defective ventilation (e.g. by covering with aprons in the floor area)

To avoid formation of white rust or to remove any existing white rust, we recommend the following method:

- After driving in winter, rinse out the hot galvanized surfaces with clean water.
- If hot galvanized parts are affected by white rust, clean with a zinc cleaner (e.g. Poligrat).

11.1.6 Underbody

The underbody of the vehicle is partly coated with an age-resistant underbody protection. Should the underbody protection be damaged, repair immediately. Do not treat areas coated with underbody protection with spray oil.



Only use products approved by the manufacturer. Our authorised dealers and service centres will be happy to advise you.

11.1.7 Waste water tank

Clean the waste water tank after every use of the vehicle.

Cleaning:

- Open the cleaning opening on the waste water tank.
- Thoroughly rinse out the waste water tank with fresh water.

11.2 Interior care



▷ If possible, treat stains immediately.

Empty the waste water tank.

- Acrylic glass windows are delicate and require very careful handling (see section 11.1.4).
- Synthetic parts in the toilet and living area are very delicate and should be treated with care. Do not use solvents, alcohol-containing cleansers or scourers containing sand. This procedure will help you to avoid brittleness and formation of cracks.
- Do not pour any corrosive agents into the drain holes. Never pour boiling water directly into the drain holes. Corrosive agents and boiling water cause damage to drainage pipes and siphon traps.
- Do not use vinegar based products to clean the toilet and water system, or for decalcification of the water system. Vinegar-based products may cause damage to seals or parts of the installation. Use standard decalcifying products for decalcification.
- ▷ Save water. Mop up all remaining water.
- ▷ Vacuum off carpets and cushions with a suitable brush attachment.



▷ For information about the use of maintenance products, our representatives and service centres will be glad to advise.





- Surface and knobs of furniture, lamps and synthetic parts in the toilet and living area should be cleaned with water and a wool cloth. A mild cleanser may be added to the water. If required, use furniture polish for the painted surfaces.
- Clean upholstery with dry foam specially manufactured for the use on upholstery or with the foam of a mild detergent. Do not wash upholstery. Always have it cleaned. Protect upholstery from direct sunlight so that it does not loose its colour.
- Clean upholstery made of novalife[®] with clear water only.
- Leather covers should be cleaned with a cotton cloth and a mild soap (curd soap). Make sure that the leather is not soaked through and that no water seeps through the seams of the leather covers.
- Curtains and net curtains should be dry cleaned.
- Vacuum clean the carpet, if necessary clean with carpet shampoo.
- Clean PVC-floor covering with a mild, soapy cleanser for PVC floors. Do not place carpet on wet PVC-floor covering. The carpet and the PVC-floor covering may stick together.
- Never clean the sink or the gas cooker with a scourer. Avoid anything which may cause scratching or grooves.
- Clean the burners on the gas cooker using a damp cloth only. Prevent any water from penetrating the burner covers. Water may damage the burners on the gas cooker.
- Brush insect screens on doors, windows and skylights with a soft brush or vacuum with the brush attachment of the vacuum cleaner.
- Brush blinds with a soft brush or vacuum with the brush attachment of the vacuum cleaner. Grease or stubborn dirt may be removed with a mild soap at 30 °C (curd soap).
- Brush Roman shades with a soft brush or vacuum with the brush attachment of the vacuum cleaner. Grease or stubborn dirt may be removed with a mild soap at 30 °C (curd soap).

11.3 Water system

11.3.1 Cleaning the water tank

- Empty the water tank and close the drainage opening.
- Remove the cap of the water tank.
- Fill water tank with water and some washing-up liquid (do not use any scourers).
- Using a trade standard brush for washing dishes, scrub the water tank until there is no longer any visible deposit.
- Scrub also the pump housing.
- If possible, clean fresh water sensors through the cleaning openings by hand.
- Rinse water tank with copious amounts of drinking water.

11.3.2 Cleaning the water pipes

0

> Only use suitable cleaning agents as sold by the specialist trade.





- Collect any emerging mixture of water and cleaning agent for correct disposal.
- Empty the water system.
- Close all drain holes and drain cocks.
- Fill mixture of water and cleaning agent into the water tank. Observe the manufacturer's instructions regarding the mixing ratio.
- Open the drain cocks one by one.
- Leave the drain cocks open until the mixture of water and cleaning agent has reached the respective drain.
- Close the drain cocks.
- Set all the water taps to "Hot" and open them.
- Leave the water taps open until the mixture of water and cleaning agent has reached the drain.
- Set all water taps to "Cold" and open them.
- Leave the water taps open until the mixture of water and cleaning agent has reached the drain.
- Close all water taps.
- Flush the toilet several times.
- Allow the cleaning agent to act in accordance with the manufacturer's instructions.
- Empty the water system. Collect the mixture of water and cleaning agent for correct disposal.
- For rinsing fill the entire water system with drinking water and empty again several times over.

11.3.3 Disinfecting the water system

- **A**
 - \triangleright Only use suitable disinfectants as sold by the specialist trade.



- > Collect any emerging mixture of water and disinfectant for correct disposal.
- Empty the water system.
- Close all drain holes and drain cocks.
- Fill mixture of water and disinfectant into the water tank. Observe the manufacturer's instructions regarding the mixing ratio.
- Open the drain cocks one by one.
- Leave the drain cocks open until the mixture of water and disinfectant has reached the respective drain.
- Close the drain cocks.
- Set all the water taps to "Hot" and open them.
- Leave the water taps open until the mixture of water and disinfectant has reached the drain.
- Set all water taps to "Cold" and open them.



- Leave the water taps open until the mixture of water and disinfectant has reached the drain.
- Close all water taps.
- Flush the toilet several times.
- Allow the disinfectant to act in accordance with the manufacturer's instructions.
- Empty the water system. Collect the mixture of water and disinfectant for correct disposal.
- For rinsing fill the entire water system with drinking water and empty again several times over.

11.4 Extractor hood

Clean the extractor hood filter occasionally. How often cleaning is necessary depends on how often the extractor hood is used. Do not wait to clean the filter until the performance of the extractor hood has noticeably decreased.

Cleaning the filter: • Wash the filter with warm water and some washing-up liquid.

11.5 Air conditioning unit

11.5.1 Dometic



Fig. 188 Air conditioning unit (Dometic)

A lint filter and an activated carbon filter are each located in the lower part of the air conditioning system ceiling unit (Fig. 188,2) behind the ventilation grills (Fig. 188,1 and 3). The lint filters must be cleaned at regular intervals and replaced if necessary. The manufacturer recommends replacing the activated carbon filter yearly.

On the left side of the ceiling unit (outside of the vehicle) is located the drainage opening for the condensation. Keep the drain openings free from dirt, leaves or similar to allow the condensation to be drained.

11.5.2 Telair

Every now and then clean the filter and the ventilation grilles on the outside of the housing. How often cleaning is necessary depends on how often the air conditioning unit is used. Do not wait to clean the filter and the ventilation grill until the performance of the air conditioning unit has noticeably decreased.



▷ Only use mild cleaning solutions to clean the filter, never use benzene or solvents.



Cleaning the filter:

Wash

- Wash the filter with warm water and some washing-up liquid.
- Allow the filter to dry thoroughly before reassembly.

Cleaning the ventilation grill:

Use a brush to remove coarse dirt or deposits from the external ventilation grilles. If a cleaning solution is used, ensure that no water ingresses into the inside of the housing.

11.6 Winter care

De-icing salt damages the underbody and the parts open to water spray. We recommend that you wash the vehicle more frequently during wintertime. Mechanical and surface treated parts and the underside are under particular strain, and should therefore be cleaned thoroughly.



- If there is any risk of frost, always run heater at a minimum of 15 °C. Switch the circulation fan (if there is one) to automatic. In the case of extreme external temperatures, the furniture flaps and doors should be left slightly open. The inflowing warm air can help prevent the freezing of water pipes, for example, and counteract the formation of condensation in the storage spaces.
- ▷ If there is any risk of frost, cover the outside surface of the windows with winter insulation mats.
- Keep the waste gas vent, skylights with forced ventilation and mushroomshaped vents free of snow. For a roof vent, use a vent extension which is at least 10 cm (4 inch) long.

11.6.1 Preparations

- Check the vehicle for paint and rust damage. Repair damage as necessary.
- Make certain that water cannot penetrate the automatic floor ventilation system and the heater.
- Use a wax-based rust inhibitor to protect the metal parts of the underbody.
- Use appropriate protection for external painted surfaces.

11.6.2 Winter operation

During winter operation, condensation develops when the vehicle is occupied under low-temperature conditions. To ensure good interior air quality and avoid vehicle damage from condensation, sufficient ventilation is essential.

- Attach vent extension with a length of at least 10 cm.
- When heating the vehicle, the heater should be at the highest setting and roof storage cabinets, curtains and blinds should be opened. This ensures optimal ventilation.
- If the vehicle is equipped with a circulation fan, always switch the fan on when the heater is on. Otherwise, there is a danger of overheating for the heater!
- In the morning, lift up all cushions, air out storage boxes and dry any damp areas.



- ▷ If condensation has still developed, just wipe it off.
- It is only possible to guarantee unrestricted operation during winter in connection with the "winter package" from the original equipment.



11.6.3 At the end of the winter season

- Thoroughly clean the underbody. When this is done, corrosion-inducing anti-freeze agents (salts, alkaline residues) are removed.
- Clean the exterior and use regular car wax to protect metal surfaces.
- Remove vent extension.

11.7 Lay-up

11.7.1 Temporary lay-up



- If the vehicle has been stationary for a long period (approx. 10 months) have the braking and gas systems checked by an authorised specialist workshop.
- ► Take into consideration that water is undrinkable after only a short time.

Before laying up the vehicle, go through the following checklist:

	Activities	Done
Chassis	Lubricate the moving parts of the caravan coupling	
	▶ Do not lubricate the friction pads on the stabiliser!	
	Jack up caravan with suitable support so that the wheels do not bear any load, or move caravan every four weeks. This prevents pressure points on the tyres and wheel bearings	
	Never use the fitted corner steadies as a car jack but only external support.	
	Protect the tyres from direct exposure to the sun. Danger of forma- tion of cracks!	
	Inflate tyres up to the recommended maximum pressure	
	Always provide for sufficient ventilation in the underbody area	
	• Humidity or lack of oxygen e.g. by covering with plastic film may cause optical irregularities to the underbody.	
Body	All vents should be sealed with the appropriate caps and all other openings (apart from forced ventilations) should also be sealed. This prevents animals (e.g. mice) from gaining entry	
	Air the interior, all storage compartments accessible from the out- side, and the parking space (e.g. garage) every 3 weeks in order to prevent the occurrence of condensation and resulting mould forma- tion	
Interior	Place upholstery in an upright position for ventilation, and cover	
	Clean refrigerator	
	Allow refrigerator and freezer compartment doors to remain slightly open	
	Disconnect the flat screen from the mains and, if necessary, remove it from the vehicle	



	Activities	Done
Gas system	Close regulator tap on the gas bottle	
	Close all gas isolator taps	
	Always remove gas bottles from the gas bottle compartment, even if they are empty	
Electrical system	Spray the contacts on the thirteen-pin connector with contact spray	
	Fully charge the living area battery (if there is one)	
	\bigtriangleup Charge the battery for at least 20 hours before laying up.	
	Disconnect the living area battery from the 12 V power supply	
Water system Empty the entire water system. Blow out the residual water from the water pipes (0.5 bar max.). Leave the water taps on in central position. Leave the safety/drainage valve (if there is one) and all drain cocks open. Observe the notes in chapter 10		

11.7.2 Winter lay-up

Additional measures are required if laying up the vehicle over winter:

	Activities	Done
Chassis	Clean body and underbody thoroughly and spray with hot wax or protect with varnish	
	Rectify damage to the paintwork	
_ .		
Body	Clean vehicle from outside thoroughly	
	Keep the forced ventilation open	
	Clean and grease installed supports	
	Clean and grease all door and flap hinges	
	Brush oil or glycerine on all locking mechanisms	
	Rub all rubber seals with talc	
	Use graphite dust to treat locking cylinders	
Interior	Position de-humidifiers	
	Remove upholstery from the vehicle and store in a dry place	
	Air the interior every 3 weeks	
	Empty all cabinets and storage compartments, open flaps, doors and drawers	
	Thoroughly clean the interior	
	If there is a risk of frost, do not leave the flat screen in the vehicle	
Electrical system	Remove living area battery (if there is one) and store in a place pro- tected from frost (see chapter 8)	
Water system	Clean the water system using a cleaning agent from a specialised store	



	Activities	Done
Complete vehicle	Clean the awning area and store in a dry place	
	Arrange the tarpaulins in such a way that the ventilation openings are not covered, or use porous tarpaulins	

11.7.3 Starting up the vehicle after a temporary lay-up or after layup over winter

Go through the following checklist before start-up:

	Activities	Done
Chassis	Chassis Check the tyre pressure on all tyres	
	Check the tyre pressure of the spare wheel	
Body	Check the functioning of the fitted supports	
	Check that the windows and skylights are working properly	
	Check that all the external locks are working, such as the external flaps, the filler neck and the conversion door	
	Remove the cover from the waste gas vent of the heater (if there is one)	
	Remove the winter cover from the refrigerator grills (if there is one)	
- · ·		
Gas system	Put the gas bottles in the gas bottle compartment, tie down and con- nect to the gas pressure regulator	
Electrical system	-	
	Fully charge the living area battery (if there is one)	
\triangleright Charge the battery for at least 20 hours after lay-up.		
	Connect the living area battery (if there is one) with the 12 V power supply (see chapter 8)	
	Check that the electrical system are working, e.g. interior light, sock- et and all installed electrical appliances	
Water system	tem Disinfect water pipes and water tank	
	Close all drain cocks and water taps	
	Check the water taps, drain cocks and water distributors for leaks	
Appliances	Check the function of the appliances	
	Change heating fluid of the hot-water heater every 2 years	



Chapter overview

This chapter contains instructions about inspection and maintenance work concerning the vehicle.

The maintenance instructions address the following topics:

- caravan couplings
- hitching device Easy-Pull
- braking system
- doors
- Alde hot-water heater
- replacing light bulbs
- spare parts

At the end of the chapter you will find important instructions on how to obtain spare parts.

12.1 Inspection work

Like any technical appliance, the vehicle must be inspected at regular intervals.

This inspection work must be carried out by qualified personnel.

Special technical knowledge, which cannot be taught within the framework of this instruction manual, is required for these tasks. Personnel possessing this technical knowledge are available for assistance at all service centres. Their experience and regular technical instruction by the factory as well as equipment and tools guarantee expert and up-to-date inspection of the vehicle.

Have the "First Programmed Inspection" carried out at a service centre 12 months after initial registration.

Further inspections should be carried out once a year.

The service centre in charge will confirm the work performed.



- Observe the inspections indicated by the manufacturer and have them carried out at the specified intervals. The value of the vehicle is thus preserved.
- The confirmation of the inspection work carried out serves as valid proof in the event of damage and guarantee claims.

12.2 Maintenance work

As with every machine, this vehicle requires maintenance. The extent and frequency of the maintenance work required depend on conditions of operation and use. More difficult operating conditions make it necessary to service the vehicle more often.

Have the appliances serviced at the intervals specified in the corresponding instruction manuals.

12.3 Stabilisers

12.3.1 General

Clean the stabiliser and the coupling head regularly. Use either thinners or white spirit. When lubricating the stabiliser ensure that no lubricant is on the friction pads.



12.3.2 AKS 1300

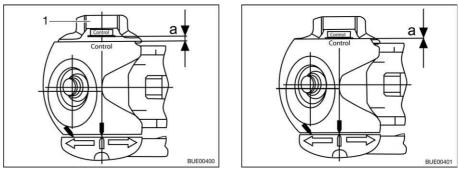


Fig. 189 Friction control

Fig. 190 Friction control


Checking the stabilising device (on the side of the friction pads) Prerequisite: Connection to AKS 1300, ball diameter 50 mm

- Turn the handwheel (Fig. 189,1), until it can be heard and felt that the torque limiting mechanism grates. Direction of rotation: In a clockwise direction.
- Check distance a:
 - Distance a > 0 (Fig. 189): Wear within the permissible range.
 - Distance a = 0 (Fig. 190): Check and, if necessary, replace the friction pads.



▷ Resetting the friction pads is not required.

12.3.3 AKS 3004

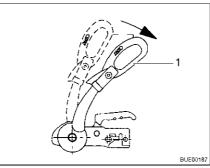

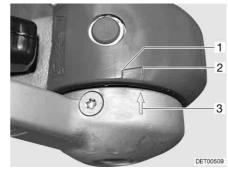


Fig. 191 Stabilising handle

Fig. 192 Friction pads

Checking the stabilising device (on the side of the friction pads)

■ Open the stabilising handle (Fig. 191,1).

Prerequisite: Connection to AKS 3004, ball diameter 50 mm


- Close the stabilising handle until a resistance can be felt (the friction pads lie on the ball, they have not been tightened yet).
- If the arrow on the pressure pad (Fig. 192,3) is in front of or on the marked surface (Fig. 192,2), then the friction pads are still in good condition.
- If the arrow on the pressure pad is within the marked surface (Fig. 192,1 to 2), then the friction pads are slightly worn.
- If the arrow on the pressure pad is at the end of the marked surface (Fig. 192,1) or exceeds it, then the friction pads are worn.





▷ Resetting the friction pads is not required.

12.3.4 WS 3000 D

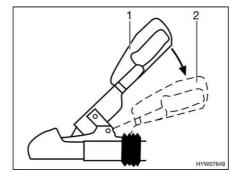

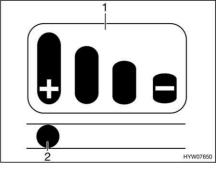


Fig. 193 Stabilising handle


Fig. 194 Wear indicator

Checking the stabilising device (on the side of the friction pads)

- Prerequisite: Connection to WS 3000, ball diameter 50 mm
- Activate the stabilising mechanism. To do this, press the coupling handle downwards (Fig. 193,2) from the closed position (Fig. 193,1) to its stop limit.

A wear indicator (Fig. 194) with a bar diagram (Fig. 194,1) is attached on the coupling handle.

- When the pin (Fig. 194,2) is in the longitudinal hole at the marking with the "+", the friction pads are still in good condition.
- When the pin is at both centre markings, the friction pads are slightly worn.
- When the pin is at the marking with the "-", the friction pads are worn and must be replaced.

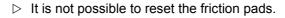

12.4 Hitching device Easy-Pull

Check the belt of the hitching device on a regular basis. If you discover any cracks, abraded areas or ruptured fibres on the belt, replace it immediately.

12.5 Braking system

Have maintenance work on the braking system carried out by a specialist workshop.

Model	First inspection	Braking system	Brake lining
BPW chassis	-	Every 2,000 or 3,000 km or every 12 months	Every 5,000 km or every 12 months
AL-KO chassis	After 1,500 km or after 6 months	Every 10,000 or 15,000 km or every 12 months	Every 5,000 km or every 12 months

Look up the following table for the inspection deadlines.



12.6 Doors

To maintain gliding capability between springs and hinges, grease the conversion door hinges occasionally.



 \triangleright We recommend either Molykote PG 65 or Vaseline as lubricants.

12.7 Alde hot-water heater



- $\,\triangleright\,\,$ Check the level of the heating fluid regularly on the compensator reservoir.
- During or after the first operating hours of the hot-water heater, the filling level may fall below the minimum mark. If this is the case, top up the heating fluid.
- ▷ We recommend to bleed the heating system after the initial heater operation and to check the glycol content.
- Have heating fluid changed by an authorised dealer or a service centre at intervals of approximately two years as corrosion-protection wears off after some time.
- ▷ Top up heating system with a water-glycol mixture (60 : 40) only. This mixture offers frost protection up to approx. -25 °C.



▷ Further information can be obtained in the manufacturer's instruction manual.

12.7.1 Checking the fluid level



Fig. 195 Compensator reservoir hotwater heater

- Switch off the hot-water heater and allow it to cool down.
- Check if the fluid level is between the marks "MIN" (Fig. 195,3) and "MAX" (Fig. 195,2) on the compensator reservoir (Fig. 195).

12.7.2 Topping up heating fluid

- Position the vehicle horizontally. This prevents the formation of bubbles.
- Switch off the hot-water heater and allow it to cool down.
- Unscrew or pull off the panel.
- Open the rotary lid (Fig. 195,1) on the compensator reservoir.
- Remove cover.

- Check anti-freeze with an anti-freeze hydrometer. The frost protection content must be 40 % or correspond to a frost protection of -25 °C.
- Fill water frost protection mixture slowly into the compensator reservoir.



- 0
- ▷ The optimum fluid level is reached when the fluid in the compensator reservoir is 1 cm above the "MIN" mark when it is cooled down.

12.7.3 Bleeding the heating system



Fig. 196 Bleeding valve of hot-water heater

The bleeding valves are built in nearby the radiators.

- Switch off the hot-water heater and allow it to cool down.
- Open bleeding valve (Fig. 196,1) and leave open until no more air escapes.
- Close bleeding valve.
- Repeat this procedure at all bleeding valves.
- Check to see if the hot-water heater warms up.

12.8 Replacing bulbs, external

- Bulbs and light fittings can be extremely hot. Therefore, allow lights to cool down before changing bulbs.
- Store bulbs in a safe place inaccessible to children.
- Do not use any bulb that has been dropped or which shows scratches in its glass. The bulb might burst.



- ▷ A new bulb should not be touched with the fingers. Use a cloth when installing the new bulb.
- Use only bulbs of the same type and with the correct wattage (see table "Types of bulbs for exterior lighting").
- ▷ If LEDs in lights are defect, contact an authorised dealer or service centre.



Types of bulbs

Different types of bulbs are used in the vehicle. Below, we have described how to change the different types of bulbs.


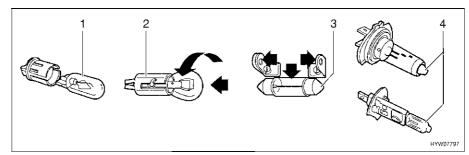


Fig. 197 Types of bulbs

Pos. in Fig. 197	Fixture type/bulb type	Changing		
1	Plug-in fixture	To remove, pull out the bulb		
		To mount, push the bulb into the socket with gentle pressure		
2	Bayonet socketTo remove, press the bulb down and to in an anticlockwise direction		Bayonet socket	To remove, press the bulb down and turn in an anticlockwise direction
		To insert, place the bulb in the socket and turn in a clockwise direction		
3	Cylindrical bulbs	To remove and to insert, carefully bend the contacts of the lamp holder outwards		
4	Halogen bulb	To remove, release retaining springs		
		After inserting, hook the retaining springs again		

12.8.1 Front lights

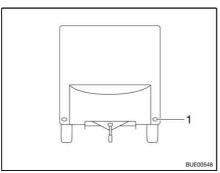


1 Front light

Fig. 198 Front lights

The front lights (Fig. 198,1) have LEDs. To change the LEDs, contact an authorised dealer or a service centre.



12.8.2 **Rear lights**

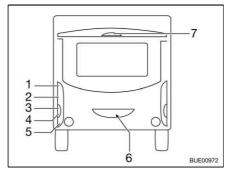

- Rear light Brake light 1
- 2
- 3 Direction indicator
- Reverse light 4
- Fog tail light 5
- Licence plate light Brake light 6

Side marker light Marker light

1 2

7

- Fig. 199 Rear lights
- Undo five housing screws.
- Remove housing.
- Remove bulb.
- Put in a new bulb.
- Reassemble the lamp in the reverse order.
- ▷ Only replace the third brake light (Fig. 199,7) entirely.

12.8.3 Side lights

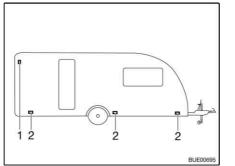


Fig. 200 Side lights

Marker lights The marker lights (Fig. 200,2) have LEDs. To change the LEDs, contact an authorised dealer or a service centre.

Side marker light The side marker light (Fig. 200,1) is fixed at the top of the side wall area.

- Remove housing.
- Remove bulb.
- Put in a new bulb.
- Reassemble the lamp in the reverse order.



	ltem no.	Exterior lighting	Type of bulb
Front	1	Front light	LED
Rear	1	Rear light	Ba15s 12 V 5 W
	2	Brake light	Ba15s 12 V 21 W
	3	Direction indicator	Ba15s 12 V 21 W orange
	4	Reverse light	Ba15s 12 V 21 W
	5	Fog tail light	Ba15s 12 V 21 W
6	6	Licence plate light	Soffitte 12 V 5 W
	7	Third brake light	T5 12 V 2.3 W
Side	1	Side marker light	Ba15s 12 V 5 W
	2	Marker light	LED

12.8.4 Types of bulbs for exterior lighting

12.9 Replacing bulbs, internal



- Bulbs and light fittings can be extremely hot. Therefore, allow lights to cool down before changing bulbs.
- Shut off the power supply on the safety cut-out in the 230 V fuse box before changing bulbs.
- Store bulbs in a safe place inaccessible to children.
- Do not use any bulb that has been dropped or which shows scratches in its glass. The bulb might burst.
- Lights can get very hot. When the light is switched on, there must always be a safety distance of 30 cm between light and flammable objects. Fire hazard!
- Do not replace the LEDs in lamps with standard light bulbs. Risk of fire due to intense heat build up.



- ▷ A new bulb should not be touched with the fingers. Use a cloth when installing the new bulb.
- $\,\triangleright\,\,$ Only use bulbs of the same type and with the correct wattage.
- > If LEDs in lights are defect, contact an authorised dealer or service centre.



12.9.1 Ceiling lamp



Fig. 201 Ceiling lamp

The ceiling lamp has LEDs.

Changing bulbs:

- Press the two ends (Fig. 201,2) of the spring ring (Fig. 201,1) together and remove.
- Remove the housing (Fig. 201,3) with LED from the lamp.
- Pull out the plug and fully replace the housing with LED.
- Reassemble the lamp in the reverse order.

12.9.2 Recessed halogen light (flat)

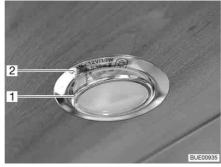


Fig. 202 Recessed halogen light (flat)

Halogen bulb 12 V/10 W

The recessed halogen light (Fig. 202,2) is installed flush with the panel.

Changing bulbs:

- Use a suitable tool (e.g. a screwdriver) to lever out the internal cover ring with glass disk (Fig. 202,1) from the housing.
 - Remove halogen bulb.
 - Put in a new halogen bulb.
 - Reassemble the lamp in the reverse order.





12.9.3 Recessed halogen light



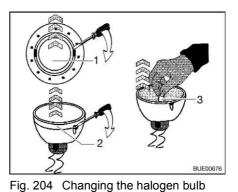


Fig. 203 Recessed halogen light

Halogen bulb 12 V/10 W

The recessed halogen light (Fig. 203,1) is installed flush with the panel.

- *Changing bulbs:* Use a screwdriver to remove the inner cover ring (Fig. 204,1) from the housing.
 - Use a screwdriver to remove the cover ring with the glass (Fig. 204,2) from the lower section of the recessed halogen light.
 - Remove halogen bulb (Fig. 204,3).
 - Put in a new halogen bulb.
 - Reassemble the lamp in the reverse order.

12.9.4 Halogen spotlight (swivelling)



Fig. 205 Halogen spotlight (swivelling)

Halogen bulb 12 V/10 W

- *Changing bulbs:* Turn outer ring (Fig. 205,2) in an anticlockwise direction until it separates from the housing.
 - Remove retaining ring (Fig. 205,1).
 - Remove halogen bulb.
 - Put in a new halogen bulb.
 - Reassemble the lamp in the reverse order.



12.10 Spare parts



- Every alteration of the original condition of the vehicle can alter road behaviour and jeopardize road safety.
- The special equipment and original spare parts recommended by us have been specially developed and supplied for your vehicle. These products are available at the authorised dealer or service centre. The authorised dealer or service centre is informed about admissible technical details and carries out the required work correctly.
- The use of accessories, parts and fittings not supplied by us may cause damage to the vehicle and jeopardize road safety. Even if an expert's report, a general type approval or a design certification exists, there is no guarantee for the proper quality of the product.
- No liability can be assumed for damage caused by products which have not been released by us. This also applies to impermissible alterations to the vehicle.

For safety reasons, spare parts for pieces of equipment must correspond with manufacturer's instructions and be permitted by the manufacturer as a spare part. These spare parts may only be fitted by the manufacturer or an authorised specialist workshop. The authorised dealers and service centres are available for any spare parts requirement.


Here are some suggestions of important spare parts:

- Fuses
- Bulbs
- Water pump (submerged pump)

When ordering spare parts please indicate the chassis number and the vehicle type to the dealer.

The vehicle described in this instruction manual is built and equipped to factory standards. Special equipment is offered depending on its purpose or use. When fitting special equipment check if such equipment has to be entered in the vehicle documents. Observe the max. permissible gross weight. The authorised dealer or service centre will be happy to advise you.

12.11 Vehicle identification plate

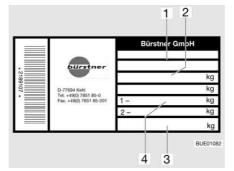

- 1 Chassis number
- 2 Maximum permissible gross weight
- 3 Permissible drawbar nose weight
- 4 Permissible axle load

Fig. 206 Vehicle identification plate

The vehicle identification plate (Fig. 206) with the chassis number is mounted on the front right side, in the gas bottle compartment.



Do not remove the vehicle identification plate. The vehicle identification plate:

- Identifies the vehicle
- Helps with the procurement of spare parts
- Together with the vehicle documents identifies the vehicle owner



▷ Always include the chassis number with all inquiries for the customer service office.

12.12 Warning and information stickers

There are warning and information stickers on and inside the vehicle. Warning and information stickers are for the sake of safety and must not be removed.



▷ Replacement stickers can be obtained from an authorised dealer or a service centre.



Chapter overview

This chapter contains instructions regarding the tyres of the vehicle.

The instructions address the following topics:

- tyre selection
- handling of tyres
- changing wheels
- spare wheel support

At the end of the chapter there is a table you can use to find the correct tyre pressure for your vehicle.

13.1 General



Check tyre pressure before a journey or every 2 weeks. Wrong tyre pressure causes excessive wear and can lead to damage or even to tyre burst. You can lose control of the vehicle.



- \triangleright Only check the tyre pressure on cold tyres.
- ▷ Tubeless tyres have been installed on the vehicle. Never install tubes in these tyres.
- \triangleright When using alloy wheel rims, snow chains should not be used.



- ▷ In the case of a puncture, pull over to the side of the road. Make vehicle and caravan safe with a hazard warning triangle. Switch on the warning lights.
- \triangleright Tyres on vehicles with tandem axles may wear faster.
- Tyres must not be older than 6 years as the material will become brittle over time. The four-digit DOT number on the tyre flank indicates the date of manufacture. The first two digits designate the week, the last two digits the year of manufacture.

Example: (0510) Week 05, year of manufacture 2010.

Observe:

- Check the tyres regularly (every 2 weeks) for equal tread wear, tread depth and external damage.
 - Replace tyres at the latest, when the minimum depth of tread stipulated by law is reached.
 - Always use tyres of the same model, same brand and same style (summer and winter tyres).
 - Only use tyres approved for the wheel rim type fitted. The permitted rim and tyre sizes are quoted in the vehicle documents and the authorised dealer or service centre will always be glad to give you advice.
 - Run-in new tyres for approx. 100 km (60 miles) at low speed since only then do they reach full strength.



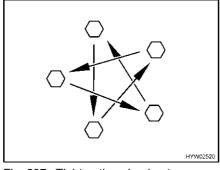


Fig. 207 Tighten the wheel nuts or wheel bolts cross-wise

- Check regularly that the wheel nuts or wheel bolts are firmly seated. Retighten the wheel nuts or wheel bolts of a changed wheel cross-wise (Fig. 207) after 50 km (30 miles).
 See section 13.5.2 for tightening torque.
- When using new or newly painted rims, re-tighten the wheel nuts or wheel bolts once again after approx. 1,000 to 5,000 km (600 miles to 3,000 miles).
- For lay-ups or long periods of inactivity, keep the tyres and tyre bearings free from pressure points: Jack up the vehicle so that the wheels do not bear any load, or move the vehicle every 4 weeks in such a way that the position of the wheels is changed.

13.2 Tyre selection



A wrong tyre can damage the tyres during the journey and even cause it to burst.



If tyres that are not approved for the vehicle are used, then the type approval for the vehicle and subsequently the insurance coverage can lapse. The authorised dealer or service centre will be happy to advise you.

The tyre sizes approved for the vehicle are given in the vehicle documents or can be obtained from the authorised dealers or service centres. Each tyre must fit the vehicle on which it will be driven. This applies to the external dimensions (diameter, width), which are indicated with the standardised size designations. In addition, the tyres must meet the requirements of the vehicle with regard to weight and speed.

Weight refers to the maximum permissible axle load which can be distributed on two tyres. The maximum load-carrying capacity of a tyre is indicated by its load index (= LI, load index code).

The maximum permissible speed for a tyre (with full load-carrying capacity) is indicated by the speed index (= SI). Together, load index and speed index form the operating code of a tyre. This is an official component of the complete, standardised dimensions description which appears on every tyre. The information on the tyres must correspond to the specifications which appear in the vehicle papers.



13.3 Tyre specifications

Description	Explanation
215	Tyre width in mm
70	Height-to-width proportion in percent
R	Tyre design (R = radial)
15	Rim diameter in inches
С	Commercial (transporter)
109	Load index code for single tyres
107	Load index code for twin tyres
Q	Speed index (Q = 160 km/h)

13.4 Handling of tyres

- Drive over kerbs at an obtuse angle. Otherwise the flanks of the tyres may get pinched. Driving over a kerb at a sharp angle can damage the tyre and result in it getting ruptured.
- Drive over high manhole covers at a slow speed. Otherwise the tyres may get pinched. Driving over a high manhole cover at high speed can damage the tyre and result in it getting ruptured.
- Check the shock absorbers regularly. Driving with poor shock absorbers significantly increases wear.
- Avoid block brakings. Block braking gives the tyres "brake plates" of varying strength. This reduces driving comfort. It might even make the tyres unserviceable.
- Do not clean the tyres with a high-pressure cleaner. The tyres can suffer serious damage within just a few seconds and rupture as a result.

13.5 Changing wheels

13.5.1 General instructions

The spare wheel (special equipment) is located in the gas bottle compartment or in a holder underneath the vehicle. To change the wheel, use a commercial scissor-type or hydraulic vehicle jack or the AL-KO vehicle jack (special equipment).



- The vehicle must be on level, firm ground, secure from slipping.
- ▶ Before jacking up the vehicle firmly apply the handbrake.
- Prevent the vehicle from rolling away by blocking the opposite wheel with the wheel chocks.
- Under no circumstances jack the vehicle with the fitted supports.
- Position the vehicle jack underneath the axle, not under any circumstances on the bodywork.
- Never overload the vehicle jack. The maximum permissible load is specified on the vehicle jack's identification plate.
- Use the vehicle jack only for lifting the vehicle briefly while changing the tyre.





- No persons may be in the vehicle while it is is raised.
- Whilst the vehicle is in a jacked up position, persons must not lie down under it.




- \triangleright Do not damage the thread of the thread bolts when changing the wheel.
- \triangleright Tighten the wheel nuts or wheel bolts cross-wise (Fig. 207).
- When changing wheels (e.g. alloy wheel rims or wheels with winter tyres), use the correct wheel bolts of the correct length and shape. The firm seating of the wheels and the function of the braking system depend on this.
- Wheel rims and tyres not permitted for use with the vehicle can jeopardize road safety.



- Protect the vehicle according to the national regulations, e.g. with a hazard warning triangle.
- Before changing the wheel, check the wheel rim and tyre size, the max. tyre load and the speed index on the tyres. Only use the wheel rim and tyre sizes stated in the vehicle documents.
- When alloy wheel rims are mounted, the wheel nuts or wheel bolts for the spare wheel (steel wheel rim) are located in the drawer in the kitchen unit.

13.5.2 Tightening torque

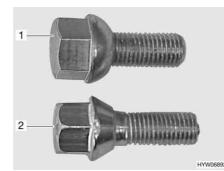

- 1 Wheel bolt steel wheel rim
- 2 Wheel bolt alloy wheel rim

Fig. 208 Wheel bolts

Wheel rim	Tightening torque
Steel wheel rim	90 Nm (67 ft/lbs)
Alloy wheel rim	120 Nm (89 ft/lbs)

13.5.3 Changing a wheel



- The footplate of the vehicle jack must be levelly positioned on the ground.
- Do not tilt the vehicle jack.
- Always insert the insertion profile of the AL-KO vehicle jack (special equipment) into the retention pouch as far as possible.
- If alloy wheel rims are mounted and a steel spare wheel is mounted after a puncture: Do not drive any further than necessary (car dealer, car workshop, tyre dealer). Only drive at a suitable speed. The different wheels affect driving handling.



- $\left[\begin{array}{c} \bullet \\ \bullet \\ \bullet \\ \end{array} \right]$
- ▷ A special vehicle jack from AL-KO with holder pockets is available as special equipment. These holder pockets are mounted on to the frame.
- $\,\triangleright\,\,$ The AL-KO jack has a bearing capacity of 800 kg.
- You should have a useable spare wheel available at all times. For this reason the wheel you have replaced should be repaired immediately.
- \triangleright Take note of the general instructions in this chapter.





Fig. 209 Securing support wheel

Fig. 210 Securing vehicle

- Loosen the stabilising device in caravan couplings with stabilising devices. Otherwise the friction pads will be highly loaded.
- Pull the handbrake of the towing vehicle and go to first gear or reverse gear.
- Park the vehicle on as even and stable a surface as possible.
- Apply the handbrake.
- Place the support wheel diagonal to the direction of travel and secure with suitable tools (Fig. 209).

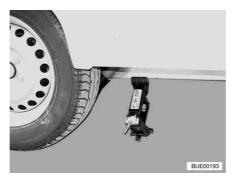


Fig. 211 Commercial vehicle jack



Fig. 212 AL-KO vehicle jack

- Place chocks or other appropriate objects beneath the opposite wheel of the vehicle to secure it (Fig. 210).
- Remove the spare wheel from the spare wheel support.
- If the ground is soft, place a stable support such as a wooden board beneath the vehicle jack.
- Commercial vehicle jack: Position the commercial scissor-type jack (Fig. 211) or hydraulic vehicle jack on the frame or on the axle.
- AL-KO vehicle jack: Insert the insertion profile (Fig. 212,2) of the AL-KO vehicle jack into the retention pouch (Fig. 212,1) as far as possible.

Preparing the connected caravan:

Preparing the disconnected caravan:

Changing the wheel:



- AL-KO vehicle jack: Hold on to the AL-KO vehicle jack with one hand and with the other turn the hand crank (Fig. 212,4) in a clockwise direction until the footplate (Fig. 212,3) is touching the ground and is in a level position.
- Turn the wheel bolts several times to loosen them, but do not remove them!
- Lift the vehicle until the wheel has been lifted 2 to 3 cm above the ground.
- Remove the wheel bolts and take off the wheel.
- Place the spare wheel on the wheel hub and adjust.
- Screw in the wheel bolts and slightly tighten them cross-wise.
- Crank down the vehicle jack and remove it.
- Using the wheelbrace, tighten the wheel bolts evenly. The target value of the tightening torque of the wheel bolts is 90 Nm for steel wheel rims or 120 Nm for alloy wheel rims.

13.5.4 Changing a wheel at alloy wheel rims



- The resting surfaces of the wheels on the break drums must be clean and free of burrs.
- Only use fastening parts provided for to loosen the wheels lightly and ensure that they rest correctly and move freely, subsequently tighten the wheel bolts cross-wise with a suitable wrench.
- Many axles do not have a centring aid, flange or bolts. It must be ensured that the wheel bolts are equally centered above the bolt circle (no jamming).
- Alloy wheel rims and steel wheel rims require different wheel bolts. When alloy wheel rims are mounted, the spare wheel (steel wheel rim) is accompanied by suitable wheel bolts.

13.6 Spare wheel support

13.6.1 Spare wheel support in gas bottle compartment (partially special equipment)



▷ If the spare wheel support is mounted in the gas bottle compartment, you can only take one gas bottle with you.

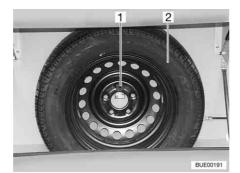


Fig. 213 Spare wheel support


The spare wheel support is fitted in the gas bottle compartment. The spare wheel (Fig. 213,2) is available for a surcharge.



Removing the spare wheel:

- Undo bolt (Fig. 213,1).
- Remove the spare wheel (Fig. 213,2).

13.6.2 Spare wheel support under the vehicle (special equipment)

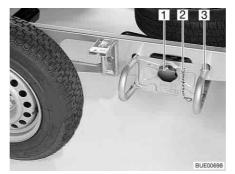

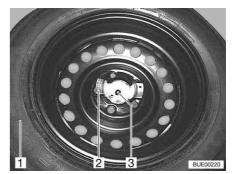


Fig. 214 Spare wheel support

Fig. 215 Spare wheel fixture

Removing the spare wheel:

- Unhook the safety chain (Fig. 214,2).
- Loosen and unscrew the star handle (Fig. 214,1).
- Pull out the spare wheel support (Fig. 214,3) about 10 cm and place it on the ground.
- Pull out the spare wheel support far enough that you can comfortably access the spare wheel.

The spare wheel support is located under the vehicle near the axle.

- Unscrew both nuts (Fig. 215,2 and 3).
- Remove the spare wheel (Fig. 215,1) from the spare wheel support.

13.7 Tyre pressure



- Tyres overheat if the tyre pressure is too low. This can cause serious tyre damage.
- Check tyre pressure before a journey or every 2 weeks. Wrong tyre pressure causes excessive wear and can lead to damage or even to tyre burst. You can lose control of the vehicle.
- ▶ Use only valves that are approved for the specified tyre pressure.




 \triangleright Only check the tyre pressure on cold tyres.

The payload and the durability of tyres is directly dependent on the tyre pressure. Air is a volatile medium. It is unavoidable that it will escape from tyres.

As a rule of thumb it can be assumed that a filled tyre loses pressure at a rate of 0.1 bar every two months. To prevent the tyres becoming damaged or burst, check the tyre pressure regularly.

The contact surface of the tyre changes, depending on the tyre pressure.



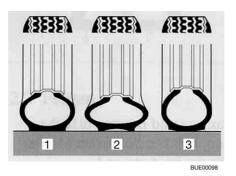

- Correct tyre pressure Tyre pressure too low
- 1 2 3
 - Tyre pressure too high

Fig. 216 Contact surface of the tyre



- > The information on pressure levels is valid for cold tyres and loaded vehicles.
- > Pressure in hot tyres must be 0.3 bar higher than in cold tyres. Recheck the pressure when the tyres are cold.
- \triangleright Tyre pressures in bar.
- \triangleright The tyre pressure tolerance is +/- 0.05 bar.

Tyres	Maximum per- missible gross weight mono axle (kg)	Maximum per- missible gross weight tandem axle (kg)	Tyre pressure (bar)
155/80 R 13 LI79	Up to 700		3.00
165/80 R 13 LI83	Up to 700		2.50
	800		2.75
	900		3.00
185 R 14 C LI102	Up to 1,100		3.75
	1,200		3.75
	1,300		4.00
	1,400		4.00
	1,500		4.50
	From 1,600	2,800	4.50
185/60 R 15 C LI94	Up to 1,200	2,200	4.00
	1,300	2,500	4.25
	1,350		4.25
185/65 R 14 LI88	1,200		3.40
185/70 R 13 LI86	Up to 700		2.50
	800		2.70
	900	1,800	2.70
	1,000	2,000	3.00
185/70 R 13 RF LI90	1,200		3.40
185/70 R 14 LI88	Up to 900	1,800	2.60
	1,000	2,000	2.80



13

Tyres	Maximum per- missible gross weight mono axle (kg)	Maximum per- missible gross weight tandem axle (kg)	Tyre pressure (bar)
195 R 14 C LI106	Up to 1,100		3.25
	1,200		3.25
	1,300		3.50
	1,400		3.50
	1,500		4.50
	1,600	2,800	4.50
	1,700		4.50
	From 1,800	3,500	4.50
195/65 R 14 LI89	Up to 1,000	2,000	3.00
	1,100	2,200	3.00
195/70 R 14 LI91	Up to 1,000	2,000	2.50
	1,100	2,200	2.70
195/70 R 14 XL95	Up to 1,100	2,000	2.90
	1,200	2,200	3.10
	1,350		3.40
195/70 R 14 RF LI96	Up to 900	1,800	2.70
	1,000	2,000	2.90
	1,100	2,200	2.90
	1,200		3.10
	1,300	2,500	3.30
	1,400	2,800	3.40
195/70 R 15 C LI104	Up to 1,100		3.25
	1,200		3.25
	1,300		3.50
	1,400		3.75
	1,500	2,800	4.00
	1,600		4.25
	From 1,700		4.50
205 R 14 C LI109	Up to 1,600		4.00
	1,700		4.25
	1,800	3,500	4.25
	1,900		4.50
205/65 R 15 RF LI98	1,500		3.40
215/55 R 16 XL LI97	Up to 1,100		2.70
	1,200		2.70
	1,300		3.00
	1,400		3.00

Tyres	Maximum per- missible gross weight mono axle (kg)	Maximum per- missible gross weight tandem axle (kg)	Tyre pressure (bar)
215/70 R 15 C LI109	Up to 1,100		3.00
	1,200		3.25
	1,300		3.50
	1,400		3.50
	1,500		4.00
	1,600	2,800	4.25
	1,700		4.50
	1,800	3,500	4.50
	1,900		4.50

Max. permissible speed = 100 km/h (60 mph).

Please always observe the speed limits in the individual countries (see chapter 17).

The vehicles are constantly brought up to the newest technical standards. It is possible that new tyre sizes are not yet included in this table. If this is the case, the Bürstner dealer will be happy to provide the newest values.



Chapter overview

This chapter contains instructions about possible faults in your vehicle.

The faults are listed with their possible causes and corresponding remedies. The instructions address the following topics:

- chassis
- braking system
- caravan control system
- electrical system
- gas system
- gas cooker
- gas oven
- microwave oven
- heater
- boiler
- hot water source
- refrigerator
- air conditioning unit
- water supply
- body

The specified faults can be remedied with relative ease and without a great deal of specialised knowledge. In the event that the remedies detailed in this instruction manual should not be successful, an authorised specialist work-shop must find and eliminate the cause of the fault.

14.1 Chassis

Fault	Cause	Remedy
Coupling does not lock in	Ball larger than Ø 50 mm	Remove dirt
place after being placed on top		Contact customer service
	The coupling interiors are soiled and no longer work automatically	Clean well and lubricate (not stabiliser)
Caravan cannot be de- tached	Ball worn	Position the caravan and towing vehicle in the same direction and de- tach. Immediately re- place the worn ball

14.2 Braking system



- Have defects on the braking system immediately remedied by an authorised specialist workshop.
- ▶ Follow maintenance or manufacturer specifications.



14.3 Caravan control system

14.3.1 Caravan control system (ATC)

Fault	Cause	Remedy
Control LED flashes green (possible to contin- ue journey)	ATC active Self test not yet complete	Drive approx. 30 m with the trailor at a minimum 10 km/h. If the control LED continues to flash, contact customer servic- es
Control LED lights up red (possible to continue journey)	ATC not active Fault in system	Separate the electrical connection between the caravan and the towing vehicle for at least 5 seconds Reconnect If the control LED contin- ues to light up red, con- tact customer services
Control LED flashes red (do not continue journey)	ATC brakes	Separate the electrical connection between the caravan and the towing vehicle for at least 5 seconds Reconnect If the control LED contin- ues to flash red, perform a visual check in accord- ance with the manufac- turer's instruction manual and, if necessary, reset the braking system
Control LED does not illu- minate (only possible to continue journey after	ATC without power (only possible to continue jour- ney after test)	Connect the electrics be- tween the caravan and the towing vehicle
test)	LED defect	Connect the electrics be- tween the caravan and the towing vehicle If the control LED still does not illuminate, per- form a visual check in ac- cordance with the manufacturer's instruc- tion manual and contact customer service



14.3.2 Caravan control system (IDC)

Fault	Cause	Remedy
Control LED flashes green (slowly)	Brake heated up (limited braking effect)	Allow the brake to cool down
Control LED lights up green (briefly, every 5 seconds)	Standby mode	Automatic reactivation during driving
Control LED flashes red (1 x flashing) (It is possible to continue driving without the IDC	Error in the central unit	Disconnect and then re- store the connection be- tween the towing vehicle and the caravan
functioning)		If the error is still dis- played, consult customer service
Control LED flashes red (2 x flashing)	Error in the sensor	Contact customer service
(It is possible to continue driving without the IDC functioning)		
Control LED flashes red (3 x flashing)	Error in the supply (low battery) or in the cables	Contact customer service
(It is possible to continue driving without the IDC functioning)		

14.4 Electrical system



 \triangleright See chapter 8 for changing the fuses.

Fault	Cause	Remedy
Road light system does no longer work correctly	Bulb is defective	Unscrew cover of the rel- evant light, replace bulb. Note volts and watts specifications
	Contacts on the plug and/or in the socket have oxidised and/or are con- taminated	Clean contacts and spray with contact spray
	Short circuit caused by water in the plug and/or socket	Open plug and/or sock- et, dry out, and spray with contact spray
	Cable interruption on the plug and/or socket	Open plug and/or sock- et, re-connect cable (see connection diagram in chapter 8)
Road light system does not match the towing ve- hicle light system	Contact connections within the plug have been reversed	Check contact allocation and wiring on the plug/ connector of the caravan
No 230 V power supply in spite of connection	230 V automatic circuit breaker has triggered	Switch on 230 V auto- matic circuit breaker



Fault	Cause	Remedy
12 V power supply in the living area does not work	230 V automatic circuit breaker switched off	Switch on 230 V auto- matic circuit breaker
	Fuse on the power sup- ply unit is defective	Replace fuse
	Power supply unit is de- fective	Contact customer service
Interior lighting does no longer work correctly	Bulb is defective	Unscrew cover of the rel- evant light, replace bulb. Note volts and watts specifications
	Fuse on the power sup- ply unit is defective	Replace the fuse on the power supply unit
No voltage from the living area battery (if there is one)	Living area battery is dis- charged	Charge living area bat- tery immediately
		➢ Total discharge damages the battery.
		If the vehicle is to be laid up for a long period, fully charge the living area battery beforehand
Extractor hood does not work	230 V automatic circuit breaker switched off	Switch on 230 V auto- matic circuit breaker
	Power supply unit is de- fective	Contact customer service
	Fuse on the power sup- ply unit is defective	Replace fuse
	Extractor hood defective	Contact customer service
Air conditioning unit can- not be switched on or off	230 V automatic circuit breaker has triggered	Switch on 230 V auto- matic circuit breaker
	Remote control battery is empty	Change remote control battery

14.5 Gas system



- In case of a defect of the gas system (gas odour, high gas consumption) there is danger of explosion! Close regulator tap on the gas bottle immediately. Open doors and windows and ventilate well.
- If the gas system is defective: Do not smoke; do not ignite any open flames, and do not operate electric switches (light switches etc.).
- Have the defective gas system repaired by an authorised specialist workshop.

Fault	Cause	Remedy
No gas	Gas bottle is empty	Change gas bottle
	Gas isolator tap closed	Open the gas isolator tap
	Regulator tap on the gas bottle is closed	Open regulator tap on the gas bottle
	External temperature is too low (-42 °C for pro- pane gas, 0 °C for bu- tane gas)	Wait for higher external temperatures
	Built-in appliance is de- fective	Contact customer service

14.6 Cooker

bürstner

14.6.1 Gas cooker/gas oven

Fault	Cause	Remedy
Ignition fuse does not op- erate (flame does not burn after the control	Heat-up time is too short	Keep control knob pressed for approx. 15 to 20 seconds after ignition
knobs are released)	Ignition fuse is defective	Contact customer service
Flame extinguishes when being reduced to its mini- mum setting	Thermocouple sensor is incorrectly set	Correctly reset thermo- couple sensor (do not bend). The sensor tip should protrude by 5 mm beyond the burner. The sensor neck should not be more than 3 mm away from the burner ring; if necessary, contact cus- tomer service

14.6.2 Microwave oven



 Only qualified personnel may repair the microwave oven. Improper repairs can cause major risks to the user.

Fault	Cause	Remedy
Microwave oven does not	Fuse is defective	Replace fuse
cut in	Door of the microwave oven is not properly closed	Remove foreign bodies stuck in the door of the microwave oven and close door properly

14.7 Heater, boiler and hot water source

In the event of a defect contact the nearest customer service workshop of the relevant appliance manufacturer. The list of addresses is enclosed with the accompanying appliance documentation. Only authorised qualified personnel may repair the appliance.



14.7.1 **Trumatic S hot-air heater**

Fault	Cause	Remedy
For heater with automatic ignition: Heater does not ignite	Battery on the automatic ignition empty	Changing the battery on the automatic ignition

14.7.2 Alde heater/boiler

Fault	Cause	Remedy
Heating does not ignite with gas operation	Lack of gas	Open regulator tap and gas isolator tap
		Connect a full gas bottle
Heating does not ignite at 230 V electrical operation	No 230 V power supply	Switch on the 230 V au- tomatic circuit breaker
		Connect 230 V power supply
Heating running, but no heat at the convectors	Circulating pump does not work	Switch on room thermo- stat
		Contact customer service
Heating and circulating pump running, but no heat at the convectors	Air in the heating system	Bleed hot-water heater

14.7.3 Truma boiler

Gas operation

Fault Cause Remedy Red indicator lamp Air in the gas pipe sys-Switch off and on again. "Fault" illuminates tem After two futile ignition attempts, wait for 10 minutes before trying again Open regulator tap and Lack of gas gas isolator tap Connect a full gas bottle Defect of a safety ele-Contact customer service ment Green indicator lamp be-Fuse is defective Replace fuse hind knob is not lit Fuse in the electronic Contact customer service control unit has been triggered Living area battery defec-Charge or renew the living area battery tive Red and green indicator No power supply Establish the power suplamps are not lit ply Replace the fuse on the Fuse is defective power supply unit



Fault	Cause	Remedy
Boiler is connected to power supply but is not heated	Operating switch is switched off	Switch on the operating switch, the indicator lamp on the switch must light up
	Operating switch defec- tive	Contact customer service
	230 V automatic circuit breaker is switched off	Switch on the 230 V au- tomatic circuit breaker
	230 V power supply dis- connected	Connect 230 V power supply
	Overtemperature fuse has triggered	Switch off boiler and switch on after approx. 5 minutes
	Heating coil of the boiler is defective	Contact customer service

14.7.4 Truma hot water source

Fault	Cause	Remedy
The hot water source is connected to power sup- ply but does not heat	Operating switch is switched off	Switch on operating switch; the red indicator lamp must be lit
	Operating switch defec- tive	Contact customer service
	230 V automatic circuit breaker is switched off	Switch on the 230 V au- tomatic circuit breaker
	230 V power supply dis- connected	Connect 230 V power supply
	Fuse is defective	Replace fuse
	Heating coil in the hot water source is defective	Contact customer service

14.8 Refrigerator

In the event of a defect contact the nearest customer service workshop of the relevant appliance manufacturer. The list of addresses is enclosed with the accompanying appliance documentation. Only authorised qualified personnel may repair the appliance.

14.8.1 Dometic 7 series

Fault	Cause	Remedy
Refrigerator does not switch on when operating in 230 V mode	No 230 V power supply	Connect 230 V power supply
	230 V automatic circuit breaker has triggered	Switch on the 230 V au- tomatic circuit breaker
	230 V operating voltage too low	Have the 230 V power supply checked by an au- thorised specialist work- shop



Fault	Cause	Remedy
Refrigerator does not switch on when operating in 12 V mode	Contacts on the plug and/or in the socket have oxidised and/or are con- taminated	Clean contacts and spray with contact spray
	Short circuit caused by water in the plug and/or socket	Open plug and/or sock- et, dry out, and spray with contact spray
	Cable interruption on the plug and/or socket	Open plug and re-con- nect cable
	Fuse for refrigerator is defective	Replace fuse
Refrigerator does not switch on when operating in gas mode The "GAS" operating in- dicator flashes yellow (RM 7651)	Lack of gas	Open regulator tap and gas isolator tap
		Connect a full gas bottle
	Air in the gas pipe	Repeat ignition 3 or 4 times
	Cobwebs or burnt resi- due in the burning cham- ber	Remove the ventilation grill on the outside of the vehicle and clean the burning chamber
The desired refrigerating temperature is not achieved	Incorrect setting	Set the temperature with the temperature control- ler
	Too much fresh food put into it	Set the temperature with the temperature control- ler

14.8.2 Dometic 8 series

Fault	Cause	Remedy
LED "—," flashes	No 230 V power supply	Connect 230 V power supply
	230 V automatic circuit breaker has triggered	Switch on the 230 V au- tomatic circuit breaker
	230 V operating voltage too low	Have the 230 V power supply checked by an au- thorised specialist work- shop
LED " <u>+</u> " flashes	Fuse on the transformer/ rectifier is defective	Replace fuse on the transformer/rectifier
	Disconnector relay in the transformer/rectifier is defective	Contact customer service
	12 V operating voltage too low	Have the 12 V power supply checked by an au- thorised specialist work- shop

Fault	Cause	Remedy
LED "	Lack of gas	Open regulator tap and gas isolator tap
		Connect a full gas bottle
	Cobwebs or burnt resi- due in the burning cham- ber	Remove the ventilation grill on the outside of the vehicle and clean the burning chamber
LEDs for display of the temperature range flash	Temperature sensor de- fective	Contact customer service
LED " and LEDs for display of the tempera- ture range flash	230 V heater element de- fective	Contact customer service
LED "+] and LEDs for display of the tempera- ture range flash	12 V heater element de- fective	Contact customer service

14.9 Air conditioning unit

14.9.1 Dometic

bürstner

Fault	Cause	Remedy
Air conditioning unit does not start up	No 230 V power supply	Connect the vehicle to the local power supply
	230 V automatic circuit breaker has triggered	Switch on the 230 V au- tomatic circuit breaker
	Remote control batteries empty	Change remote control batteries
Air conditioning unit does not cool	Temperature below 16 °C	-
	Temperature has been set incorrectlyAdjust the temperature	
	Thermostat defective	Contact customer service
Air conditioning unit does not warm up	Temperature above 30 °C	-
	Temperature has been set incorrectly	Adjust the temperature
	Thermostat defective	Contact customer service
Water is entering the ve- hicle	Drainage holes for con- densation are clogged	Clean air conditioning unit
	Seal is defective	Contact customer service
No more air circulation	Air filter clogged Clean air filter	
	Fan wheel defective	Contact customer service



14.9.2 Telair

Fault	Cause	Remedy
Air conditioning unit does not start up	No 230 V power supply	Connect 230 V power supply
	230 V automatic circuit breaker has triggered	Switch on the 230 V au- tomatic circuit breaker
	Remote control batteries empty	Change batteries (2 x AAA)
Air conditioning unit does not cool	Room temperature is lower than the preset temperature	Reset temperature
Air conditioning unit does not heat	Room temperature is higher than the preset temperature	Reset temperature
Insufficient ventilation rat- ing	Ventilation flaps closed	Open at least one venti- lation flap
	Filter dirty	Clean the filter
Water is entering the ve- hicle	Drainage holes for con- densation are clogged	Clean air conditioning unit

14.10 Water supply

Fault	Cause	Remedy
Leakage water inside the vehicle	A leak has occurred	Identify leak, re-connect water pipes
No water	Water tank is empty	Replenish drinking water
	Water drain cock open	Close water drain cock
	Fuse of the water pump is defective	Replace fuse
	Water pump defective	Exchange water pump (have it exchanged)
	Water pipe snapped off	Straighten water pipe or replace
	Power pack or power supply unit defect	Contact customer service
Toilet has no flush water	Water tank is empty	Replenish drinking water
	Fuse for toilet is defective	Replace fuse
Water drains from the shower tray slowly or does not drain at all	The vehicle is not in a horizontal position	Position the vehicle hori- zontally
Drain on the one-hand le- ver mixer is clogged	Perlator calcified	Unclip the perlator, de- calcify in vinegar water (only for products made from metal)

Fault	Cause	Remedy
Milkiness of the water	Tank filled with dirty wa- ter	Clean water tank me- chanically and chemical- ly; then disinfect and rinse copiously with drinking water
	Residues in the water tank or water system	Clean water system me- chanically and chemical- ly; then disinfect and rinse copiously with drinking water
Any change in the taste or odour of the water	Tank filled with dirty wa- ter	Clean water system me- chanically and chemical- ly; then disinfect and rinse copiously with drinking water
	Fuel filled into the water tank by mistake	Clean water system me- chanically and chemical- ly; then disinfect and rinse copiously with drinking water. If not suc- cessful: Contact a spe- cialist workshop
	Microbiological deposits in the water system	Clean water system me- chanically and chemical- ly; then disinfect and rinse copiously with drinking water
Deposits in the water tank and/or water-carry- ing components	Water excessively long in the water tank and in wa- ter-carrying components	Clean water system me- chanically and chemical- ly; then disinfect and rinse copiously with drinking water

14.11 Body

bürstner

Fault	Cause	Remedy
Flap hinges/door hinges are difficult to operate	Flap/door hinges are not sufficiently lubricated free and resin-free grease	
Hinges/joints in the bath- room unit/toilet compart- ment are difficult to operate/make a grating noise	Hinges/joints are not suf- ficiently lubricated	Lubricate hinges/joints with solvent-free and acid-free grease
Storage compartment hinges are difficult to op- erate/make a grating noise	Storage compartment hinges are not sufficiently lubricated	Lubricate storage com- partment hinges with acid-free and resin-free grease



▷ The authorised dealers and service centres are available for any spare parts requirement.





15.1 Weight details for special equipment



- The use of accessories, parts and fittings not supplied by us may cause damage to the vehicle and jeopardize road safety. Even if an expert's report, a general type approval or a design certification exists, there is no guarantee for the proper quality of the product.
- Every alteration of the original condition of the vehicle can alter road behaviour and jeopardize road safety.
- No liability can be assumed for damage caused by products which have not been released by us. This also applies to impermissible alterations to the vehicle.

Weight details for Bürstner special equipment are listed in the table below. If these objects are either carried in or on the vehicle and are not part of the standard equipment, they must be taken into consideration when calculating the payload.

All weight details are approximate.

Observe the max. permissible gross weight.

Item designation	Surplus weight (kg)
Waste bin - door	1
Waste water pipes, insulated and heated	2
Waste water tank 22 litres	3
Airmix comfort package	1
AL-KO Trailer-Control	5
Alloy wheel rims	-7
Alloy wheel rims (tandem axle)	-14
Caravan control system IDC	6
Hitching device Easy-Pull	1
External shower	1
External socket	1
Oven	13
Direct water supply	3
Skylight Heki 2	11
Design package	11
Drawbar head theft protection	2
Extractor hood	1
Conversion door with window	8
Electric kit: Battery charger, battery, panel	23-30
Spare wheel 185/70 R 14	18
Spare wheel 195 R 14 C	19
Spare wheel support under the chassis	1
External gas connection	1
Drawbar bike rack for 2 bicycles	4
Rear bike rack for 2 bicycles	10



Item designation	Surplus weight (kg)
Floor warming unit	2
Gas bottle (11 kg) made of aluminium	12
Gas bottle switching facility, automatic	5
Gas alarm system	5
Weight increase	5-10
Smooth plate	30
Holder for flat screen	1
Heater S 5002	8
Insect screen, door (full height)	3
Children's bunk bed with 3 levels	20
Air conditioning unit (Dometic)	40
Air conditioning unit (Telair)	34
150-litre refrigerator	14
Microwave oven	14
Minisafe	5
Roll-up grille	2
Satellite unit (automatic) + LCD television	20
Satellite unit (semi-automatic) + LCD television	16
Service flap (installation dependent on model)	2
Bedspread	1
TecTower	16
Chain-stitch rug	7
Truma Ultraheat	6
Vehicle jack (AL-KO)	5
Wall pocket	1
Alde hot-water heater/boiler	30
Hot water supply with boiler	15
Water tank, mobile, 22 litres, with external flap	3
Truma winter package	6



16.1 Table of linear measures

Type	Body length, exterior	Body length, interior	Body width, exterior	Total length	Overall height	Awning dimensions
460 TL	5790	5200	2320	7120	2540	9270
465 TS	5890	5300	2320	7200	2540	9870
490 TS	6090	5500	2320	7410	2540	10070
510 TS	5890	5300	2520	7260	2540	9870
535 TL	6170	5580	2320	7550	2540	10150
535 TS	6640	6050	2320	8040	2540	10620
540 TL	6140	5580	2520	7580	2540	10150
540 TS	6610	6050	2520	8010	2540	10620
560 TK	6330	5780	2520	7780	2540	10340
650 TK ¹⁾	7260	6700	2520	8340	2540	11270
650 TK ²⁾	7260	6700	2520	8660	2540	11270
680 TK	7760	7200	2520	8850	2540	11770
700 TK	7880	7320	2520	8960	2540	11890
800 TK	8120	7560	2520	9200	2540	12130

1) Belcanto

²⁾ Trecento

16.2 Power supply

Input voltage	Primary	230 V AC, 47-63 Hz
Output voltage	Secondary	12 V DC, max. 32 A
Fuse	Protection class I	





Chapter overview

This chapter contains helpful tips for the journey.

The instructions address the following topics:

- road assistance in European countries
- traffic rules in European countries
- gas supply in European countries
- toll regulations in European countries
- safe ways to spend the night during travel
- camping in winter

At the end of the chapter there is a checklist containing the most important equipment for the journey.

17.1 Traffic rules in foreign countries



- ▷ The vehicle driver is required to inform himself as to the traffic rules of the countries in which he plans to travel before beginning the trip. Contact your automobile club or embassy for further information.
- ▷ In some European countries, warning vests must be worn when exiting the vehicle outside of towns in the case of vehicle failures or accidents.

Information about traffic regulations is especially important as state law applies in case of damage. For your own safety, always observe the following rules when travelling abroad:

- Take the green insurance card with you.
- Always register accidents with the police.
- Never sign documents that you have not read and understood completely.

17.2 Help on Europe's roads

Country	∔ Emergen- cy services ★ Police	🕋 Brea	kdown service
Belgium	+ 112 ★ 112	🕋 ТСВ	Brussels 0 70 34 47 77
Bulgaria	∔ 150 ★ 166	🕿 UAB	(02) 9 11 46/146 ¹⁾
Denmark	 ↓ 112 free of charge ★ 112 free of charge 	🕿 FDM	45 27 07 07
Germany	+ 112 ★ 110	🕿 ADA	C 22 22 22 ¹⁾
Estonia	+ 112 ★ 110/112 ¹⁾	🖀 EES ⁻	TI (0) 6 97 91 88/18 88 ¹⁾
Finland	+ 112 ★ 112	🕋 Helsi	nki (09) 77 47 64 00
France	 + 15/112¹⁾ ★ 17/112¹⁾ 	🕿 Lyon	(08) 25 80 08 22



Country	+ Emergen- cy services ★ Police	2	Breakdown service
Greece	+ 112 ★ 171/112 ¹⁾	2	ELPA 104 00
Great Britain	+ 112 ★ 112	1	AA (08 00) 0 28 90 18
Ireland	+ 999/112 ¹⁾ ★ 999/112 ¹⁾	2	AA Dublin 18 00 66 77 88
Iceland	+ 112 ★ 112	2	F.I.B 5 11 21 12
Italy	+ 118/112 ¹⁾ ★ 112	2	ACI 8 00 11 68 00
Croatia	+ 112 ★ 112	2	HAK 9 87/ 0 19 87 ¹⁾
Latvia	+ 03/112 ¹⁾ ★ 02/112 ¹⁾	2	LAMB 18 88
Lithuania	+ 03/112 ¹⁾ ★ 02/112 ¹⁾	1	LAS 8 80 00 00 00/18 88 ¹⁾
Luxembourg	+ 112 ★ 113/112 ¹⁾	2	ACL 2 60 00
Macedonia	+ 194 ★ 192		AMSM +389 2 31 81 196
Montenegro	+ ⁹⁴ ★ 92		AMSCG 19807
Netherlands	+ 112★ 112		ANWB (088) 2 69 28 88
Norway	+ 113 ★ 112		NAF 0 85 05
Austria	 + 144/112¹⁾ ★ 133/112¹⁾ 	*	ÖAMTC 120
Poland	 + 999/112¹⁾ ★ 997/112¹⁾ 	2	PZM 022 5 32 84 33
Portugal	+ 112 ★ 112	2	ACP Lissab. (21) 9 42 91 03 ACP Porto (22) 8 34 00 01
Romania	 + 961/112¹⁾ ★ 955/112¹⁾ 	1	ACR (021) 2 22 22 22
Russia	+ 03 ★ 02	a	RAS 8- (4 95) 7 47 66 66
Sweden	+ 112 ★ 112	2	(08) 6 90 38 00
Switzerland	+ 144 ★ 117/112 ¹⁾	1	TCS 1 40/03 18 50 53 11 ¹⁾

Country	+ Emergen- cy services ★ Police	🕿 Breakdown service
Serbia	+ 94 ★ 92	🕿 AMSS 987
Slovakia	+ 112 ★ 112	🕿 SATC 1 81 24
Slovenia	+ 112 ★ 113	 AMZS (1) 9 87/ 00386 1 5 30 53 53 ¹⁾
Spain	+ 061/112 ¹⁾ ★ 112	🕋 RACE 9 15 93 33 33
Czech Republic	+ 112 ★ 112	🕋 UAMK CR 12 30
Turkey	+ 112 ★ 155/112 ¹⁾	🕋 TTOK (02 12) 2 82 81 40
Ukraine	+ 03 ★ 02	🕋 112 UA (8-032) 2 97 65 50
Hungary	+ 104/112 ¹⁾ ★ 107/112 ¹⁾	
Cyprus	+ 112 ★ 112	🕋 AA (022) 31 31 31

¹⁾ In the mobile communication network

Date 07/2010 Specifications without guarantee

17.3 Speed limits



ürstner

- ▶ Please always observe the speed limits in the individual countries.
- The caravan constructions were designed for a maximum permissible speed of 100 km/h (60 mph). Therefore never drive faster than 100 km/h (60 mph).

For information, the speed limits of the countries visited most (all specifications in km/h):

Country	In built-up areas	Outside built-up areas	Motorway
Belgium	50	90/120 ^{1) 2)}	120 ²⁾
Bulgaria	50	70	100
Denmark	50	70	80
Germany	50	80	80/100 ^{3) 4)}
Estonia	50	70	70
Finland	50	80	80
France	50	90 ⁵⁾ /110 ^{1) 2) 6)}	130 ^{7) 2)}
Greece	50	80	80



Country	In built-up areas	Outside built-up areas	Motorway
Great Britain	48	80/96 ¹⁾	96 ³⁾
Ireland	50	80	80
Iceland	50	80	-
Italy	50	70	80
Croatia	50	80	80
Latvia	50	80	80
Lithuania	50	70	70
Luxembourg	50	75	90
Macedonia	40/60	80	80
Montenegro	50	80	80
Netherlands	50	80	80
Norway	50	60 ⁸⁾ /80	60 ⁸⁾ /80
Austria	50	100 ⁹⁾	100 ⁹⁾
Poland	50	70/80 ¹⁾	80
Portugal	50	70/80 ¹⁰⁾	100
Romania	50	70/80 ¹⁾	90
Russia	60	70	90 ¹¹⁾
Sweden	50	80 ¹²⁾	80 ¹²⁾
Switzerland	50	80	80
Serbia	50	80	80
Slovakia	50	90	90
Slovenia	50	80	80
Spain	50	70/80 ¹⁾	80
Czech Republic	50	80	80
Turkey	40	70	80
Ukraine	60	80 ¹¹⁾	80 ¹¹⁾
Hungary	50	70	80
Cyprus	50	80	100

 On expressways, on roads with more than one lane in each direction and on roads resembling highways

²⁾ In the event of accidents involving speeds in excess of 100 km/h insurance payments may be reduced as caravans are only type approved for speeds up to 100 km/h

³⁾ Towing vehicle/trailer combinations must not use the far left-hand lane (far righthand lane in GB) on three-lane motorways

⁴⁾ Only with the approval of the road traffic authority for the relevant towing vehicle/ trailer combination.

- ⁵⁾ In wet conditions 80 km/h
- ⁶⁾ In wet conditions 100 km/h
- 7) In wet conditions 110 km/h



- ⁸⁾ Trailers with no brakes and a current gross weight exceeding 300 kg
- ⁹⁾ With trailer of over 750 kg (max. perm. gross weight of 3.5 t), the following applies: On highways 80 km/h, on motorways 100 km/h. For towing vehicles over 3.5 t perm. gross weight, 70 km/h out of town, 80 km/h on motorways
- ¹⁰⁾ According to the traffic signs
- ¹¹⁾ Drivers who have had their driver's licence for less than two years must not drive faster than 70 km/h
- ¹²⁾ Trailer with no brakes whose maximum permissible gross weight is two times the unladen weight of the towing vehicle: 40 km/h

Date 07/2010 Source: ADAC Specifications without guarantee

17.4 Driving with low beam in European countries



 In many European countries, it is compulsory to drive with the vehicle's lights on even during the day. Regulations vary between countries. Motoring organisations or consulates can provide you with the relevant information.

17.5 Sleeping in the vehicle away from camping areas

Country	Sleepi roads fields		Sleeping on privately owned lands		Comments
	Yes	No	Yes	No	
Belgium		Х	Х		On highway rest areas max. 24 hours permitted
Bulgaria		Х		Х	
Denmark	Х		Х		On streets and squares only up to 11 hours with a parking disc
Germany	Х		X		Staying overnight for one night to restore driving ability is per- mitted. There may be regional and local limitations
Finland	Х			Х	Possible with the permission of the land owner
France	Х		x		Permission from the local au- thorities or the owner of the land is required. Parking and staying overnight on free areas is pro- hibited
Greece		Х		Х	Staying overnight for one night at designated areas on the na- tional route Patras-Athens- Thessaloniki is permitted
Great Britain		Х	Х		
Ireland		Х	Х		



Country	Sleepi roads fields		Sleepi privat owneo lands	ely	Comments
	Yes	No	Yes	No	
Italy	x		X		Staying overnight for one night at car parks and service stations is allowed. Observe the local regulations. Parking and staying overnight on free areas is pro- hibited
Croatia		Х		Х	
Luxembourg		Х	Х		
Macedonia		Х		Х	
Netherlands		Х	Х		Overnight stays on streets and squares is allowed in some bor- oughs
Norway	Х		Х		Officially prohibited on rest are- as and cultivated grounds. Trav- elling on dirt roads is prohibited
Austria	x		X		Staying overnight for one night to restore driving ability is per- mitted, but not in nature re- serves. Observe regional and local restrictions. Generally for- bidden in Tyrol
Poland		Х	Х		Requires property owner's per- mission
Portugal		Х		Х	Staying overnight for one night on motorway service stations and car parks under 10 hours are tolerated
Romania		Х		Х	
Russia		Х		Х	
Sweden	Х		Х		Not on agriculture areas or in the vicinity of houses. Driving on open fields is prohibited
Switzerland		х	Х		One overnight stay at highway rest areas and in some cantons is tolerated
Serbia and Montenegro		х		х	
Slovakia	Х		Х		Overnight stays on private land are only allowed if a toilet is present
Slovenia		Х		Х	
Spain	Х		Х		Some regional prohibitions ap- ply, especially on beaches
Czech Repub- lic	Х		Х		Overnight stays on private land are only allowed if a toilet is present



Country	Sleeping on roads and fields owned lands		nd privately owned		Comments
	Yes	No	Yes No		
Turkey	Х		Х		
Ukraine	Х		Х		
Hungary		х	X		Staying overnight on privately owned land is permitted only with police certification

Specifications without guarantee

17.6 Gas supply in European countries



In Europe, there are several different connection systems for gas bottles. It is not always possible to fill or exchange your gas bottles in a foreign country. Get information about the connection system in the country you are travelling to before embarking on your journey, e.g. at a motoring club or in the trade press.

General tips

Always observe the following instructions:

- Only go on vacation with completely filled gas bottles.
- Use all of the gas bottles' capacity.
- Take along adapter sets (available in camping supply stores) for filling gas bottles in foreign countries and for connecting the gas pressure regulator to foreign gas bottles.
- During the cold time of the year observe filling with propane gas component (butane does not gas below 0 °C).
- Use blue bottles from the firm Campingaz (distributed world-wide). Only use gas bottles with safety valves.
- When bottles from other countries are used, check the gas bottle compartments to see if the gas bottles fit into them. Gas bottles from other countries do not always display the same size as your own gas bottles.

17.7 Toll regulations in European countries

Many European countries have introduced a mandatory toll system. The toll regulations and how they are collected vary greatly from country to country. Nevertheless, ignorance is no excuse. Penalties can be quite severe.

As is the case with traffic regulations, the vehicle driver is required to be familiar with the toll formalities before starting out on a trip.

Contact your automobile club or the Internet for further information.

17.8 Tips on staying overnight safely during travel

Prudent behaviour is the most important protective measure for insuring a safe night in the caravan.

The risk of thievery is reduced to a minimum when the following basic rules are observed:



- Before commencing the journey, close and lock all windows, doors and skylights.
- During high season do not spend the night at highway rest stops or parking areas located along typical vacation routes.
- Several vehicles on one site at the same time do not necessarily decrease the chances of thievery occurring. Consult your own feelings about the parking site.
- Even if it is just for one night, go to a camping site.
- Only take with you those valuables which are absolutely necessary for the journey. If possible, store valuables in a small safe and not in the immediate vicinity of windows or doors.
- Always lock up the vehicle.

17.9 Tips for winter campers

The following tips will help make your winter camping experience as agreeable as possible.

- Reserve your parking place in good time. Good winter camping sites are often booked up early.
- Do not start your trip without winter tyres.
- Choose your parking place with care. Observe the ground beneath you. Snow and ice may melt.
- Place boards of a sufficient size under the jockey wheel and the corner steadies to prevent then from sinking when the snow thaws.
- When the vehicle has been positioned, release the handbrake to prevent freezing.
- Protect the handbrake lever and the accumulator against frost with protective covers.
- No snow walls should be allowed to cover the built-in forced ventilation.
- Protect the gas bottle compartment against freezing with a protective cover.
- Do not leave waste water in the tank but drain it into a bucket.
- Keep the built-in forced ventilation free from snow and ice.
- Make sure the air circulation is good. Good air circulation prevents moisture from collecting and makes it easier to heat the living area.
- Follow the instructions in the section "Gas supply in European countries".
- Use a two-bottle system with automatic controller for the gas system, so that the supply does not run out during the night.
- Only operate the gas system using propane gas.
- Do not use the space behind the heater as a storage compartment.
- Never operate catalytic ovens or infra-red gas radiators in the interior of the vehicle, since they consume oxygen for burning.
- Lay the 230 V power cable in such a way that the cable cannot be frozen or be damaged (e.g. during snow removal).
- Use a winter awning.
- When it is snowing heavily, clear the roof of the vehicle of snow regularly. A few centimetres of powdery snow serves as insulation, but wet snow quickly becomes a heavy burden.
- Before embarking on the return journey, remove all the snow from the roof to avoid impeding vehicles behind you with a "snow flag".

17.10 Travel checklists

The following checklists will help that nothing important is left at home although not everything on the checklists might be necessary.





Do not leave checking of documents (e.g. vehicle papers and information) as well as checking the condition of the vehicle until just before commencing the trip. Planning and checking documents well in advance will save unnecessary trouble.

	\checkmark	Object	\checkmark	Object	\checkmark	Object
Kitchen area		Wiping cloth		Cleansing agent (detergent)		Salad servers
		Mug		Dishcloths		Chopping board
		Turnspit		Set of knifes and forks for grilling		Bowls
		Can opener		Coffeepot		Brush to wash the dishes
		Egg-cup		Corkscrew		Cloth to wash the dishes
		Ice cube tray		Kitchen paper		Matches
		Lighter		Spoons		Cups
		Bottle opener		Knifes		Plates
		Air-tight storage boxes		Garbage bags		Thermos jug
		Breakfast plate		Frying pans		Pots
		Forks		Stirring spoons		Glasses
Dethase and a suite me		Taurala		Tailathanah		Ta ath have balance
Bathroom/sanitary items		Towels Sanitary items		Toilet brush Toilet paper		Toothbrush glass
		Sanitary items				
Living area		Dustbin		Insect lamp		Rain clothes
		Road atlas		Insect repellent		First aid kit
		Bath towels		Deck of cards		Travel guides/park- ing guide
		Bath shoes		Broom		Rucksack
		Batteries		Candles		Sleeping bags
		Bed sheets		Dust pan		Pencils and paper
		Bed linen		Coat-hangers		Shoes
		Laundry bag		Clothes brush		Shoe polish
		Books		Pillow		Vacuum cleaner
		Camping guide		Мар		Flash light
		Spare bulbs		Medicine		Pocket knife
		Water bottle		Music cassettes		Table cloth
		Binoculars		Neck-supporting pillow		Clothes pins
		Fire extinguisher		Sewing kit		Clothesline
		Gas bottle		Radio		



	\checkmark	Object	\checkmark	Object	\checkmark	Object
Vehicle/tools		Waste water con- tainer		Fabric tape		Screwdriver
		Adapter socket		Watering can for drinking water		Current-measuring instrument
		CEE adapter		Cable reel		Step
		Wire		V-belt		Wheel chocks
		Spare wheel		Glue		First-aid kit
		Spare lamps		Universal pliers		Vehicle jack
		Spare fuses		Compressor		Hazard warning tri- angle
		Replacement wa- ter pump		Luster terminals		Warning sign
		Hammer		Loops		Warning vest
		Flat wrench		Tube adapter		Flashing hazard warning light
		Gas filling adapter		Hose clips		
		Gas tube		Snow chains (win- ter)		
Outside		Stay rope		Camping table		Lock
Outside		Bellows		Luggage racks		String
		Camping chairs		Grill		Tent pegs/tighten- ing ropes
Documents		List of addresses		Registration book		Identity card
		Registration confir- mation(s)		Driving licence		Passport
		Allergy certificate		Green insurance card		Writ of protection
		Instruction manuals		Vaccination certifi- cate		Vignette/toll card
		Instruction leaflets for medicines		Credit card		Visa



Pos.	Component	Activity	Interval
1	Jockey wheel	Lubricate, check wheel rims for damage, visu- al check of the tyres, check threaded spin- dle and crank	Annually
2	Corner steadies	Lubrication	Annually
3	Joints, hinges and levers on the chassis	Lubrication	Annually
4	Underbody	Visual check, repair underbody protection as necessary	Annually
5	Chassis	Lubrication	Annually
6	Wheel attachment	Tighten the wheel nuts, check tyre bear- ings	Annually
7	Tyres and wheel rims	Air pressure check (see section 13.7). Visual check for dam- age, tread depth at least 2 mm	Annually
8	Brakes	Check and adjust if necessary	Annually
9	Outside lighting	Function check	Annually
10	Refrigerator, heater, kitchenette, storage flap locks, water system, interior electrics	Function check	Annually
11	Upholstery, curtains, blinds	Visual check	Annually
12	Windows, skylights	Function check, water ingress test	Annually
13	Sealing strips, edges, rubber	Check for damage	Annually
14	Brake lining	Lining thickness min. 4 mm	Every two years
15	Brake drums	Visual check for wear and rust, check spring tension	Every two years
16	Axle bearing	Check the slack	Every two years
17	Slotted nut on the wheel	Check position and dummy fuse	Every two years
18	Overrun brake	Function check	Every two years
19	Brake cable assembly	Visual check	Every two years
20	Chassis underbody	Check bolts are firmly secured	Every two years
21	Gas fittings	Official gas inspection	Every two years



Pos. 1-21

Signature

Delivery	Pos. 1-13
Stamp of f	the Bürstner dealer
Date	Signature

1st year	Pos. 1-13	2nd year	Pos. 1-21
Stamp of the Bü	irstner dealer	Stamp of the	e Bürstner dealer
Date	Signature	Date	Signature

3rd year	Pos. 1-13	4th year	Pos. 1-21
Stamp of the B	ürstner dealer	Stamp of t	the Bürstner dealer
Date	Signature	Date	Signature

5th year	Pos. 1-13	6th year	Pos. 1-
Stamp of the Bürs	tner dealer	Stamp	of the Bürstner dealer
Date	Signature	Date	Signature

7th year	Pos. 1-13	8th year	Pos. 1-21
Stamp of the I	Bürstner dealer	Stamp of th	ne Bürstner dealer
Date	Signature	Date	Signature



12 V fuses
For the refrigerator
For Thetford toilet 85, 86
On the power supply unit
12 V indicator lamp 80
12 V main switch 80
12 V power supply 77
Switching off 80
Switching on 80
Troubleshooting 176
230 V connection
External flap 45
Power cable 83
Troubleshooting 175
230 V fuse 86
230 V fuse box 86
230 V power supply 83

Α

Accessories, fitting 1	2
Adapter cable	
Adapter, thirteen-pin plug	
Additional equipment	
Add-on parts see special equipment 1	
Adjustable head section, fixed bed	
Air conditioning unit (Dometic)	
Air current, adjusting)2
Care	
LED)2
Maintenance 14	6
Operating modes 10)1
Switching off 10)1
Switching on 10)1
Troubleshooting	31
Air conditioning unit (Telair)	
Care	6
Filter, cleaning 14	17
Operating modes)3
Switching off 10)3
Switching on 10)3
Troubleshooting	32
Ventilation grill, cleaning	
Air outlet nozzles, adjustment	
Airmix	
Alloy wheel rims	
Antenna alignment	
Automatic	37
Semi-automatic 3	38
Antenna, lowering for driving 3	39

Appliances9	1
Manuals12	2
Warranty cards	1
ATC (caravan control system)2	1
Awning light44	8
Axle load	7

В

—
Basic equipment24
Bed widening, single beds63
Beds 60
Before the journey17
Bike rack
Bicycles, loading29
Load
On the front
On the rear wall 29
Travelling with a loaded bike rack
Blind, cleaning
Blind, Heki skylight
Closing 58
Opening
Blind, window
Closing 54
Opening
Boiler (Alde)
Emptying107
Switching off 107
Switching on
Troubleshooting 178
Water, filling with 107
Boiler (Truma)
230 V electrical operation
Combined operation 107
Emptying
Gas operation
Operating modes
Troubleshooting
Water, filling with
Brakes
Check
Maintenance
Braking system, troubleshooting
Breakaway brake cable
Breakdown services in Europe
Bulbs, changing
Ceiling lamp
Exterior lighting
Front lights 156



160
158
157
159, 160
158
60
14, 70

С

Cable reel	83
Camping gas bottles, use	70
Camping in winter	
Cap for the drinking water filler neck	
Capacity of the battery	
Caravan	
Correct loading	26
Pitching	35
Caravan control system (ATC)	
Troubleshooting	
Caravan control system (IDC)	
Troubleshooting	
Caravan coupling	
WS 3000 D	
WS 3000 D, maintenance work	53
Caravan load	
Care	41
Air conditioning unit (Telair)14	
Blind	
Carpet	
Curtains14	44
External care14	
Extractor hood14	
Furniture surfaces14	
Gas cooker	
High-pressure cleaner, washing with 14	
Hot-water heater	
In the winter14	47
Insect screen14	
Interior care14	43
Lamps14	
Leather covers14	
Net curtains14	
PVC-floor covering14	
Roman shade	
Sink	44
Synthetic parts, interior14	
Temporary lay-up	
Underbody	
Upholstery14	

Washing	142
Waste water tank	143
Water system	144
Windows	142
Winter lay-up	149
Carpet, cleaning	
Ceiling lamp	159
Changing wheels	
Tightening torque	
With alloy wheel rims	
Chassis number	
Chassis, troubleshooting	173
Checklist	
Before the journey	
For the journey	
Initial start-up after temporary lay-up	
Road safety	
Temporary lay-up	
Winter lay-up	
Children's beds	
Circuit diagram	
Exterior	90
Interior	89
Circulation fan	94
Cleaning	
Water pipes	144
Water tank	144
Cleaning see care	141
Condensation	50
On the double acrylic glass pane	51
On the screwed connections in the	
floor	
Condensation water see condensation	51
Connecting	
Connecting cable see power cable	
Connection diagram, thirteen-pin plug	
Connection to the towing vehicle	87
Connection diagram	
Conversion door	·
Roman shade, closing	42
Roman shade, opening	
Conversion door, inside	
Opening	
Conversion door, outside	A A
Opening	
Cooker	
Troubleshooting	

bürstner

Corner steadies								•				•			35
Cranking down															36
Cranking up									•				•		36
Curtains, cleaning		•				•		•	•	•		•	•	1	44

D

Danger of suffocation 12, 50
Detaching
Dimensions see table of linear measures 187
Displays, charging condition of the living
area battery 81
Disposal
Household waste 8
Sewage 8
Waste water 8
Door lock 41
Doors
Conversion door 41
Lock
Maintenance work 154
Troubleshooting 183
Driving in reverse
Driving with the caravan 33
DuoControl switching facility 73
During the journey 33

Ε

Electric kit
Special equipment 79
Electrical system
230 V connection, troubleshooting 175
Explanation of terms
Lighting, troubleshooting 175
Safety instructions 15
Troubleshooting 175
Entrance step 36
Environmental tips
Exterior lighting
Bulbs, changing 155
Types of bulbs 158
External care 141
External connection see 230 V connection 37
External flaps 43
Flap lock
External gas connection
External mirrors 13, 30
External socket 88

Index

Extractor hood									 112
Care								-	 146
Filter, cleaning			• •			•	• •		 146

F

Fault current protection switch Check	
Fire	
Behaviour in the event of	11
Extinguishing	
Fire prevention	
Fire risks, avoidance	
FI-switch see fault current protection	
switch	86
Fixed bed	
Closing	-
Head section, lowering	
Head section, raising	
Flap lock	01
Closing	44 45 46
Elliptical-shaped	
Flap for toilet cassette	
Opening	
Rectangular	
-	
Flat screen with holder	
Positioning	
Storing Floor warming unit, electrical	49, 50
Overload protection	100
Switching off	
Switching on	
Forced ventilation	
Freezer compartment door locking mecha	
Closing	
Locking in the ventilation position	
Opening	
Furniture flaps	
Furniture flaps, troubleshooting	
Furniture surfaces, cleaning	
Fuse box	86
Fuses 12 V fuses	04
230 V fuse	
For the Thetford toilet	
On the power supply unit	
Fuses see 12 V fuses and 230 V fuse	84



G

Gas alarm system74
Gas bottle compartment
Gas bottles
Changing7
Safety instructions
Gas connection, external72
Gas cooker
Cleaning 144
Switching off 109
Switching on 109
Troubleshooting
Gas isolator taps72
Symbols
Gas odour
Gas oven
Switching off 110
Switching on 110
Troubleshooting
Gas supply in European countries
Gas system
Defect
General instructions14
Safety instructions
Switching automatics73
Troubleshooting
Gas tube, check
General instructions

Η

Halogen spotlight
Hand crank, corner steadies
Handbrake
Applying
Releasing
Handling of tyres
Heat exchanger, heater, replacement
Heater
Air outlet nozzles, adjustment
Battery on the automatic ignition,
changing
Circulation fan94
Heat exchanger, replacement
Hot air distribution92
Initial start-up92
Switching off93
Switching on
Troubleshooting
-

Heater automatic ignition, changing the	
battery	
Heating	50
Heating mode	50
Heki skylight	56, 57
Blind	58
Closing	56, 58
Insect screen	57, 59
Opening	56, 58
Roman shade	57
Ventilation position	57, 58
Help on Europe's roads	189
High rate of gas consumption	14, 69, 176
High-pressure cleaner, washing with .	141
Hinged window	53
Blind	54
Closing	52, 53
Continuous ventilation	52, 53
Insect screen	55
Opening	52, 53
Roman shade	55
Hitching device Easy-Pull	
Maintenance work	153
Hot air distribution	
Hot galvanized chassis	142
Hot water source	104
Emptying	105
Switching off	104
Switching on	104
Troubleshooting	
Water, filling with	105
Hot-air heater	
Battery on the automatic ignition,	
changing	
Circulation fan	
Switching off	
Switching on	
Troubleshooting	178
Hot-water heater	
230 V electrical operation, selecting	
Care	
Fluid level, checking	
Gas and 230 V electrical operation,	
selecting	
Gas operation, selecting	
Heater, switching off	
Heater, switching on	
Heating fluid, topping up	154



Heating system, bleeding 155
Maintenance work 154
Operating modes
Operating unit
Safety instructions
Start screen
Tool menus
Troubleshooting 178

I

IDC (caravan control system) 22
Indicator lamp, 12 V 80
Information stickers 162
Inner door, troubleshooting
Inner doors 46
Insect screen door
Closing 43
Opening 43
Insect screen, cleaning 144
Insect screen, Heki skylight
Closing 57, 59
Opening 57, 59
Insect screen, windows
Closing 55
Opening 55
Inspection plan 199
Inspection work 151
Inspections 151
Installation diagram 87
Thirteen pin socket 87
Interior care 143
Interior lighting
Bulbs, changing 158
Troubleshooting 176

Κ

Keys 17

L

—	
Lamps 1	58
Cleaning 1	44
Lay-up	
Temporary	48
Winter lay-up 1	49
Leakage water inside the vehicle 1	82
Leather covers, cleaning 1	44
Lift-off table	
Conversion to bed foundation	60
Table-top, rotating	60

Light metal wheel rims see alloy wheel
rims
Light switch
Living area
Toilet compartment
Lighting
Front
Lamps, cleaning 144
Rear
Troubleshooting 175
Living area battery
Changing the battery
Charging condition, displaying
Charging procedure
Troubleshooting 176
Load
Bike rack
Load see also payload
Lock
Conversion door
External flap
Furniture flap46
Low beam

Μ

Maintenance
Maintenance work151
Air conditioning unit (Dometic)
Air conditioning unit (Telair)
AKS 1300
AKS 3004
Braking system153
Doors
Hitching device Easy-Pull
Hot-water heater 154
WS 3000 D
Marker light157
Mass in ready-to-drive condition
Maximum permissible gross weight24, 26
Maximum permissible speed
Maximum speed, technically permissible 191
Microwave oven
Switching off111
Switching on
Troubleshooting 177
Minimum nose weight23



Ν

Net curtains, cleaning
No gas
Nose weight

0

Operating modes
Air conditioning unit (Dometic)
Air conditioning unit (Telair)
Boiler (Truma)105
Hot-water heater97
Refrigerator
Switching automatics, gas system74
Oven see gas cooker or gas oven 108, 110
Overrun brake

Ρ

Payload
Calculation25
Composition24
Example calculation
Payload see also load23
People in the caravan
Permissible gross weight see maximum
permissible gross weight23
Permitted mass24
Personal equipment25
Power cable for the 230 V connection83
Power supply
Power supply unit CSV 400-1
Functions78
Position
Propane gas 14, 70
PVC-floor covering, cleaning144

R

Gas operation, switching
on 114, 115, 117
Operating modes 113, 115, 116
Troubleshooting
Ventilation grill, removal
Volume
Refrigerator door locking mechanism
Closing
Locking in the ventilation position119, 120
Opening
Refrigerator ventilation grill, removal
Registration
Risk of frost damage 16, 121, 125
Road safety
Checklist
Notes for
Roman shade, cleaning144
Roman shade, Heki skylight
Closing
Opening
Roman shade, window of conversion door
Closing
Opening
Roman shade, windows
Closing
Opening
Round seating group, sleeping
conversion

S

Safety cut-out
Safety instructions11
Changing wheels165
Cooker
Electrical system
Fire prevention11
Gas bottles70
Gas system
Hot-water heater96
Road safety12
Towing
Water system16
Safety switch (FI)86
Sanitary fittings121
SAT socket
Satellite unit
With automatic antenna alignment
With semi-automatic antenna
alignment



Seating groups, sleeping conversion 64
Shower
Side marker light 157
Single beds, bed widening 63
Sink, cleaning 144
Skylights
Sleeping conversion
Bench and central seating group 64
Rear seating group
Round seating group
Widening single beds
Sockets
External socket
SAT socket
TV socket
Spare parts
Spare wheel 168, 169
Spare wheel support 168, 169
Special equipment
Description
Marking7
Safety instructions 12
Weight details 185
Speed limits
Stabiliser 20
AKS 1300 19
AKS 1300, maintenance work 152
AKS 3004 19
AKS 3004, maintenance work 152
WS 3000 D 20
WS 3000 D, maintenance work 153
Stabiliser see also caravan coupling 19, 151
Stabilising lever
Start-up
After temporary lay-up
After winter lay-up 150
Staying overnight
Away from camping areas 193
During travel
Supports see corner steadies
Suspension table
Conversion to bed foundation
Switching automatics, gas system
Symbols
For instructions
Gas isolator taps
Synthetic parts in the toilet and living areas,
cleaning

Index

т

1	
Table of linear measures	7
Tables	9
Technical data	
Dimensions	7
Power supply 18	7
Television	1
Thetford cassette	7
Emptying	7
Removing	3
Retaining clip	
Thetford toilet	
Emptying	7
Fuse	
Preparing	
Swiveling	
Troubleshooting	
Using	
Water tank, emptying	
Water tank, filling	
With fixed seat	
Thirteen-pin plug, connection diagram	
Tightening torque, wheels	
Tips	
Toilet compartment	
Light switch	
Ventilation	
Toilet see also Thetford toilet	
Toll regulations in European countries 19	
Towing	
Safety instructions	
Traffic rules in foreign countries	
Travel checklists	
	-
Travel cots suitable for children	
Troubleshooting	
12 V power supply	
230 V connection	
Air conditioning unit	
Air conditioning unit (Dometic)	
Air conditioning unit (Telair)	
Body	
Boiler (Alde) 176	
Boiler (Truma)	
Braking system	
Caravan control system (ATC)	
Caravan control system (IDC) 17	
Chassis	
Cooker	
Electrical system 17	5

Index	
Esterator hand d70	
Extractor hood	Waste
Furniture flaps	Waste
Gas cooker	Ca
Gas oven	Cle
Gas system	Em
Heater	Water
Hot water source	Water
Hot-air heater	Water s
Hot-water heater	Ge
Inner door	Tro Water s
Lighting175	Ca
Microwave oven 177	Cle
Refrigerator	Dis
Thetford toilet	
Water supply 182	Em Filli
TV socket	
Tyre change see changing wheels	Saf
Tyre specifications	Water f
Tyres	Cle
Excessive wear	Em
General instructions	Filli
Handling	Wa
Identification 165	Water t
Load-carrying capacity	Water t
Tyre pressure169	Weight
Tyre selection	Wheel

U

Ultraheat additional electric heater	98
Switching off	98
Switching on	98
Underbody, maintenance	43
Upholstery, cleaning 1	44

۷

Vehicle identification plate1	61
Vehicle jack7, 1	67
Vehicle lighting see exterior lighting 1	55
Vehicle, washing1	42
Ventilation	50
Toilet compartment1	26

W

Warning stickers	162
Warranty cards	1
Washing with a high-pressure cleaner	141
Waste gas vent on the right hand side	
of the vehicle. $\ldots \ldots 92,$	104

Waste gas vent, cap105
Waste water tank
Care
Cleaning143
Emptying
Water pipes, cleaning144
Water pump
Water supply
General
Troubleshooting182
Water system
Care
Cleaning144
Disinfect145
Emptying
Filling
Safety instructions
Water tank
Cleaning144
Emptying
Filling
Water, removing
Water tank 22 I
Water tank 40 I
Weight details for special equipment
Wheel chocks
Wheel rim size
Wheel rim type
Wheels
Window, conversion door
Roman shade, closing
Roman shade, opening
Windows
Blind
Insect screen
Roman shade
Windows, cleaning
Winter care
Winter operation

bürstner

